



J2 TECHNICAL ARTICLE

Number 119

From Octagon Heaven
June 1, 1982

Resource: Mike Hawk

BULK HEAD - LOCATION FOR FUSE BOX AND COIL

The dimensions below are shown from the driver's side of the bulk head. The fuse box is on the passenger side and the coil on the driver's side. Both are mounted on the engine side of the bulk head!

