



J2 TECHNICAL ARTICAL

Number 155

March 18, 1983

From Octagon Heaven

Reference: M.G. CAR COMPANY LTD.

## THE SPARE PARTS LIST FOR THE M.G. MIDGET, J TYPE

Based on request of several I have reproduced my spare parts list. I know that some of you already have it so that it is nothing that great to add to your collection.

The parts list comes in very handy when trying to figure out what parts make up an area on your car.

Please remember that the parts list is for the J-Type which includes all models so note carefully that there is a column with indicators.

This list has been very helpful to me as I researched the brake cross, shaft and brake pedle return spring. Even though a major parts supplier and two of my technical sources said there was no such thing, One source said there was and provided me with data. This information was enough to confirm the data needed.

The spare parts list even provides some production serial number changes.

The next 12 pages are copies of the spare parts list.

**THE SPARE PARTS**

**LIST FOR**

THE



**MIDGET**

**J TYPE.**

## INDEX

	<i>Sheet</i>
Accelerator Gear .. .. .	12
Accessories .. .. .	14-15
Axle (Front) .. .. .	1-2
Axle (Rear) .. .. .	2-4
Body and Details (Two-seater) .. .. .	19-20
Body and Details (Four-seater) .. .. .	20-21
Body and Details (Saloon) .. .. .	21-22
Bonnet .. .. .	18
Brake Gear .. .. .	11-12
Chassis Frame and Details .. .. .	1
Controls .. .. .	12
Dashboard and Fume Excluders .. .. .	15
Electrical Equipment .. .. .	15-16
Exhaust System and Silencers .. .. .	13
Fairings .. .. .	17-18
Instruments .. .. .	15-16
Petrol Tank and Pipes .. .. .	14
<b>Power Unit and Installation</b> .. .. .	<b>4-12</b>
Bell Housing and Rear Main Bearing .. .. .	5
Carburettors .. .. .	7-8
Clutch Details .. .. .	9
Connecting Rods and Pistons .. .. .	6
Crankshaft and Intermediate Main Bearings .. .. .	5
Cylinder Block .. .. .	4-5
Cylinder Head .. .. .	6-7
Dynamo and Vertical Drive .. .. .	8
Electrical Details .. .. .	9
Engine Nosepiece and Front Main Bearing .. .. .	5
Flywheel .. .. .	5
Gearbox and Remote Control .. .. .	10-11
Lubrication Details .. .. .	8-9
Manifolds, Inlet and Exhaust .. .. .	7-8
Propeller Shaft Shroud and Fittings .. .. .	18
Radiator and Connections .. .. .	13
Shock Absorbers .. .. .	14
Spare Wheel Carrier and Fittings .. .. .	18-19
Springs (Front) .. .. .	2
Springs (Rear) .. .. .	4
Steering Gear .. .. .	12-13
Sundries .. .. .	14-15
Tool Kit .. .. .	22
Wings (Front and Rear) .. .. .	16-17

**Do not forget to quote Chassis, Engine and Body Numbers in all correspondence.**

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
<b>CHASSIS FRAME AND DETAILS</b>							
P347	Chassis frame assembly comprising:—2 side members, 5 cross tube assemblies, 2 front and 2 rear dumb-irons, 2 front sliding trunnion boxes and 2 rear spring suspension pins Ceased Chassis No. J3437	1	—	—	11	17	6
MG472	Chassis frame assembly as above Comm. Chassis No. J3438	1	—	—	11	17	6
P361	Chassis frame assembly as above	—	1	1	11	17	6
1879	Side member O/S Ceased Chassis No. J3437	1	—	—	1	6	11
1880	" " N/S Ceased Chassis No. J3437	1	—	—	1	6	11
2819	" " O/S Comm. Chassis No. J3438	1	—	—	1	6	11
2820	" " N/S Comm. Chassis No. J3438	1	—	—	1	6	11
2039	" " O/S ... ..	—	1	1	1	6	11
2040	" " N/S ... ..	—	1	1	1	6	11
623	Front dumb-iron O/S ... ..	1	1	1	5	10	
624	" " N/S ... ..	1	1	1	5	10	
625	Taper washer for ditto ... ..	2	2	2			4
626	Front sliding trunnion bracket O/S ... ..	1	1	1	10	1	
627	" " " " N/S ... ..	1	1	1	10	1	
632	Cover for ditto ... ..	2	2	2	1	7	
633	Roller for ditto ... ..	4	4	4	3	8	
P232/1	Front cross tube assembly ... ..	1	1	1	7	6	
P347/2	Engine bearer cross tube assembly ... ..	1	1	1	1	5	7
637	Cap for engine mounting ... ..	1	1	1	2	0	
638	Special bolt for ditto ... ..	2	2	2			11
P233/3	Third cross tube assembly ... ..	1	1	1	14	4	
921	Combined cross tube end bracket and brake cross shaft support ... ..	2	2	2	4	10	
P232/4	Rear spring front cross tube assembly ... ..	1	1	1	1	3	0
806	Rear spring front suspension pin ... ..	2	2	2	5	4	
640	End bracket for cross tube ... ..	2	2	2	2	6	
P233/5	Rear cross tube assembly ... ..	1	1	1	2	3	0
819	Rear spring sliding trunnion roller ... ..	4	4	4	3	8	
820	Distance washer for ditto ... ..	2	2	2			6
873	Distance piece for ditto ... ..	2	2	2			11
872	Cap for rear cross tube ... ..	2	2	2	4	9	
804	Rubber buffer and plate for front axle stop ... ..	2	2	2	1	7	
805	Backing plate for ditto ... ..	2	2	2			4
815	Rear axle striking pad (rubber) ... ..	2	2	2			3
817	Set screw for ditto ... ..	2	2	2	doz.	2	0
874	Combined greaser and set screw for rear spring front suspension ... ..	2	2	2			10
1367	Brake pedal bracket ... ..	1	1	1	9	3	
<b>FRONT AXLE AND SPRINGS</b>							
MG374	Front axle assembly less springs and wheels ... ..	1	1	1	12	17	6
P234/100	Axle beam ... ..	1	1	1	2	6	6
P101/10	Steering knuckle (bushed) O/S ... ..	1	1	1	1	7	8
P101/11	" " (bushed) N/S ... ..	1	1	1	1	7	8
P101/107	Bush for steering knuckle (top) ... ..	2	2	2	2	8	
P101/149	" " " " (bottom) ... ..	2	2	2	2	6	
P101/115	Washer for steering knuckle (outer) ... ..	2	2	2	doz.	9	
P101/113	Slotted nut for steering knuckle O/S ... ..	1	1	1	1	0	
P101/114	" " " " N/S ... ..	1	1	1	1	0	
P101/101	Steering knuckle king pin ... ..	2	2	2	6	6	
P101/104	Thrust washer for steering knuckle ... ..	2	2	2	1	3	
MG374/1	Cotter pin for ditto ... ..	2	2	2	1	2	
X101/1	Nut for cotter pin ... ..	2	2	2	doz.	8	
X101/2	Spring washer for ditto ... ..	2	2	2	doz.	8	
X101/6	Disc for steering knuckle (top) ... ..	2	2	2	doz.	1	0
P234/101	Steering arm N/S ... ..	1	1	1	9	4	
P234/102	" " O/S ... ..	1	1	1	9	4	
P101/8	Brake anchor bracket assembly ... ..	2	2	2	5	6	
P101/132	Bush for brake cam ... ..	2	2	2	2	4	
X234/2	Bolt for brake anchor bracket (1 1/8" long) ... ..	4	4	4			3
X101/8	" " " " (2 3/16" long) ... ..	2	2	2			3
X101/9	" " " " (2 1/8" long) ... ..	2	2	2			3
X101/10	Nuts for ditto ... ..	8	8	8	doz.	1	3
X101/11	Spring washers for ditto ... ..	8	8	8	doz.	8	
P101/120	Brake cam ... ..	2	2	2	1	6	
P101/121	Washer for ditto (inner) ... ..	2	2	2	doz.	9	
P101/122	" " (outer) ... ..	2	2	2	doz.	9	
P101/124	Brake cam lever ... ..	2	2	2	4	4	

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
S1/8	Stauffer grease cup for ditto...	2	2	2			9
X101/4	Key for ditto ...	2	2	2			3
X101/5	Pinch bolt for ditto ...	2	2	2			3
X101/1	Nut for ditto ...	2	2	2	doz.	1	3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
P101/132	Bush for brake-shoe fulcrum pin ...	2	2	2			2
P101/123	Brake-shoe fulcrum pin ...	2	2	2			2
P101/133	Nut for ditto ...	2	2	2			3
X101/3	Washer for ditto ...	2	2	2	doz.		6
MG374/2	Brake-shoe assembled with lining ...	4	4	4			12
P234/4	Brake-shoe ...	4	4	4			7
MG374/100	Lining for brake-shoe ...	4	4	4			3
MG374/101	Rivets for brake-shoe lining ...	32	32	32	doz.		5
574	Vibration damper weight ...	4	4	4			2
576	Clevis pin for ditto ...	8	8	8			3
575	Spring for ditto ...	8	8	8			3
X101/12	Washer for ditto ...	16	16	16	doz.		8
P101/129	Brake-shoe spring ...	4	4	4			4
P101/118	Felt for front hub ...	2	2	2			3
P101/109	Distance washer for front hub ...	2	2	2			1
P101/116	Hub bearing (inner) ...	2	2	2			10
P101/110	Distance piece between bearings ...	2	2	2			1
P101/117	Hub bearing (outer) ...	2	2	2			10
P234/5	Front hub (studded) O/S ...	1	1	1			14
P234/6	" (studded) N/S ...	1	1	1			14
P234/103	Hub studs ...	12	12	12			9
X234/1	Nut for hub studs ...	12	12	12	doz.		10
X101/11	Spring washer for ditto ...	12	12	12	doz.		8
P234/1	Brake-drum ...	2	2	2			1
P101/3	Track rod assembly ...	1	1	1			18
P101/9	Track rod tube ...	1	1	1			6
P101/136	Lock nut for ditto (R.H. thread) ...	1	1	1			6
P101/137	" " (L.H. thread) ...	1	1	1			4
P101/140	Adjustable end for ball joint (R.H. thread) ...	1	1	1			5
P101/141	" " " (L.H. thread) ...	1	1	1			5
P101/144	Spring for ball joint ...	2	2	2			3
P101/142	Ball cup (inner) ...	2	2	2			10
P101/143	End cup for ball joint ...	2	2	2			1
P101/138	Steering ball ...	2	2	2			2
P101/139	Nut for ditto ...	2	2	2			2
P235	<b>Draglink assembly</b> ...	1	1	1			17
P235/1	Draglink tube ...	1	1	1			5
P102/102	Adjustable end for ditto (R.H. thread) ...	1	1	1			5
P101/141	" " " (L.H. thread) ...	1	1	1			5
P101/136	Lock nut for ditto (R.H. thread) ...	1	1	1			5
P101/137	" " (L.H. thread) ...	1	1	1			4
P101/138	Steering ball ...	2	2	2			2
P101/142	Ball cup (inner) ...	2	2	2			10
P102/105	End cup (outer) ...	1	1	1			1
P102/106	Plug for ditto ...	1	1	1			3
P101/143	Ball cup plug (outer) ...	1	1	1			1
P101/144	Spring for ball joint ...	2	2	2			3
P236	<b>Front spring O/S and N/S</b> ...	2	2	2	1	5	0
P236/100	Front spring top leaf ...	2	2	2			4
P236/101	Front spring 2nd leaf ...	2	2	2			4
P236/102	Front spring 3rd leaf ...	2	2	2			7
P236/103	Front spring 4th leaf ...	2	2	2			3
P236/104	Front spring 5th leaf ...	2	2	2			3
P236/105	Front spring 6th leaf ...	2	2	2			3
P236/106	Front spring 7th leaf ...	2	2	2			3
1045	Front shock absorber bracket O/S (on springs) ...	1	1	1			4
1046	Ditto N/S (on springs) ...	1	1	1			4
1190	Front spring bottom plate ...	2	2	2			1
2422	Bolt for front spring securing ...	8	8	8			10
2309	Stiffening strip for front spring ...	4	4	4			8
1951	Front brake cable stop bracket ...	2	2	2			4
801	Front spring suspension pin ...	2	2	2			2
802	Tab washer for ditto ...	2	2	2			4
803	Dust excluder for front spring ...	2	2	2			1
<b>REAR AXLE AND SPRINGS AND PROPELLER SHAFT</b>							
P238	Rear axle assembly less springs and wheels ...	1	1	1			23
MG404/1	Rear axle banjo with spring pads ...	1	1	1			2

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
P238/122	Oil retainer for axle banjo N/S	1	1	1	1	1	
P238/123	" " " " O/S	1	1	1	1	1	
X105/11	Taper drain plug for axle casing	1	1	1			4
X105/1	Screw for front cover (1" long)	6	6	6	doz.	1	3
X105/2	" " " " (1 3/8" long)	2	2	2	doz.	1	3
P238/128	Spring packing washer for ditto	8	8	8	doz.		5
P238/15	Rear axle front cover complete with differential assembly	1	1	1	12	0	0
P238/1	Rear axle front cover (studded) with differential bearing caps	1	1	1	2	3	0
P275/104	Stud for differential bearing caps (used only with aluminium front cover)	4	4	4			3
P238/119	Stud for differential bearing cap (for malleable iron front cover)	4	4	4			2
P101/139	Nut for ditto	4	4	4			4
P238/116	Stud for bevel pinion housing (used only with aluminium front cover)	4	4	4			2
X238/1	Stud for bevel pinion housing (for malleable iron front cover)	4	4	4			2
P105/129	Bevel pinion housing	1	1	1	16	4	
X105/5	Spring ring for ditto	1	1	1			7
P105/137	Bevel pinion washer	1	1	1			5
X105/6	Bevel pinion roller bearing	1	1	1	18	6	
P105/174	Bevel pinion bearing distance piece	1	1	1			0
P105/131	Bevel pinion thrust bearing	1	1	1	13	3	
P105/103	Shims for bevel pinion (.005")	as required					3
P105/104	" " " " (.010")	as required					3
P105/105	" " " " (.020")	as required					3
P105/135	Cap for bevel pinion housing	1	1	1	7	9	
P275/102	Packing piece for bevel pinion bearing housing	1	1	1	2	0	
P105/127	Screw for ditto	2	2	2			3
X105/3	Nut for pinion housing stud	4	4	4	doz.	1	3
X105/4	Spring washer for ditto	4	4	4	doz.		8
P238/127	Universal joint flange	1	1	1	9	4	
X105/12	Slotted nut for ditto	1	1	1			3
X105/13	Washer for ditto	1	1	1			3
P238/5	Differential assembly complete with crown wheel and pinion	1	1	1	11	11	6
P105/9	Differential case complete	1	1	1	1	6	0
MG470/102	Differential wheel	2	2	2	8	6	
P105/121	Differential pinion	2	2	2	7	4	
P105/122	Differential pinion pin	1	1	1	1	0	
P105/123	Dowel for ditto	1	1	1			9
P238/12	Crown wheel and pinion (8/43 ratio)	1 pr.	1 pr.	1 pr.	pair 2	7	10
X470/1	Differential case bolts	6	6	6			9
P105/116	Castle nut for ditto	6	6	6			3
P105/106	Differential bearing	2	2	2	14	3	
P105/143	Differential bearing adjusting nut	2	2	2	1	9	
P105/107	Lock washer for ditto	2	2	2			3
P105/163	Joint for front cover	1	1	1			4
X105/3	Nut for securing front cover	8	8	8	doz.	1	3
X105/4	Spring washer for ditto	8	8	8	doz.		8
P105/11	Rear axle rear cover	1	1	1	7	9	
P105/163	Joint for ditto	1	1	1			4
X105/7	Set screw for ditto	8	8	8			3
X105/4	Spring washer for ditto	8	8	8	doz.		8
P105/117	Oil filler plug	1	1	1			2
X105/9	Fibre washer for ditto	1	1	1	doz.	1	0
MG470/106	Rear axle nut	2	2	2	19	6	
P238/104	Rear hub (R.H.)	1	1	1	14	6	
P238/103	" " (L.H.)	1	1	1	14	6	
P101/8	Brake anchor bracket	2	2	2	5	6	
P101/132	Bush for brake cam and fulcrum pin	4	4	4	2	4	
X105/8	Bolt for brake anchor bracket (top) (1 1/8" long)	4	4	4			3
X234/2	" " (bottom) (1 1/8" long)	4	4	4			3
X101/10	Nut for ditto	8	8	8	doz.	1	3
X101/11	Washer for ditto	4	4	4	doz.		8
P101/120	Brake cam	2	2	2	8	6	
P101/121	Washer for ditto (inner)	2	2	2	doz.	1	9
P101/122	" " (outer)	2	2	2	doz.		9
P101/124	Brake cam lever	2	2	2	4	4	
S1/8	Stammer gear for ditto	2	2	2			9
X101/4	Key for brake cam	2	2	2			3
X101/5	Bolt for brake cam lever	2	2	2			3

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each	Part No.
		2-seater	4-seater	Saloon		
X101/1	Nut for ditto	2	2	2	doz. 1 3	X110/9
X101/2	Spring washer for ditto	2	2	2	doz. 1 3	X110/6
P101/123	Fulcrum pin for brake-shoe	2	2	2	2 6	849
P101/133	Slotted nut for ditto	2	2	2	2 3	P110/10
X101/3	Washer for ditto	2	2	2	doz. 6	
MG 874/2	Brake-shoe assembled with lining	4	4	4	12 3	
P234/4	Brake-shoe	4	4	4	7 6	P230/9
MG374/100	Brake-shoe lining	4	4	4	3 0	P110/11
MG374/101	Rivets for ditto	32	32	32	doz. 5	X110/1
574	Vibration damper weight	4	4	4	2 0	X110/2
576	Clevis pin for ditto	8	8	8	3	X105/4
575	Spring for ditto	8	8	8	3	P110/3
X101/12	Washer for ditto	16	16	16	doz. 8	P110/10
P101/129	Brake-shoe spring	4	4	4	4	
P238/8	Rear hub bearing housing with studs	2	2	2	11 6	
P275/105	Joint for rear hub bearing housing	2	2	2	3	
P238/165	Rear wheel studs	12	12	12	9	
X234/1	Nuts for ditto	12	12	12	doz. 10	P230/10
X101/11	Spring washer for ditto	12	12	12	doz. 8	P230/10
P238/111	Oil retaining felt for rear hub	2	2	2	1 2	X110/8
P238/114	Retaining ring for ditto	2	2	2	3	P110/2
P238/124	Oil retaining felt for rear hub	2	2	2	3	X105/4
P238/125	Retaining ring for ditto	2	2	2	3	X105/1
P105/112	Rear hub ball bearing	2	2	2	16 0	X101/2
P105/113	Locking washer for ditto	2	2	2	3	P110/1
P105/158	Rear hub bearing nut. (R.H.)	1	1	1	1 10	X110/2
P105/159	" " (L.H.)	1	1	1	1 10	P230/8
P234/1	Brake-drum	2	2	2	1 5 5	MG363
1364	Spring pad and steady bracket	2	2	2	7 0	X110/1
S1/5	Grease nipple for rear hub	2	2	2	3	X110/8
P237	Rear springs complete O/S and N/S	2	2	2	18 0	X105/4
P237/100	Rear spring top leaf	2	2	2	4 6	P110/2
P237/101	Rear spring 2nd leaf	2	2	2	5 0	J/2
P237/102	Rear spring 3rd leaf	2	2	2	7 6	MG363
P237/103	Rear spring 4th leaf	2	2	2	4 3	P230/1
P237/104	Rear spring 5th leaf	2	2	2	4 3	
P237/105	Rear spring 6th leaf	2	2	2	3 11	X110/
P237/106	Rear spring 7th leaf	2	2	2	3 8	828
P237/107	Rear spring 8th leaf	2	2	2	3 4	
P237/108	Rear spring 9th leaf	1	1	1	4 2	
036	Rear shock absorber bracket on springs O/S	1	1	1	4 2	
1738	" " " " N/S	1	1	1	4 2	P110/5
1054	Rear spring top plate	2	2	2	2 4	X110/
812	Rear spring "U" clip	4	4	4	11	X110/
810	Radius washer for rear spring front suspension pin	2	2	2	6	P110/
809	Outer washer for ditto	2	2	2	6 6	P110/
818	Dust excluder for rear spring	2	2	2	1 2	P110/
1927	Rear axle strap	2	2	2	8	X110/
816	Rubber block for ditto	2	2	2	1 0	P110/
882	Brake cable stop bracket (rear end)	2	2	2	4 4	
A297	Propeller shaft	1	1	1	4 8 0	P110/
811	Propeller shaft flange bolts	12	12	12	4	P110/
S1/6	Greaser for propeller shaft	2	2	2	3	P110/
<b>POWER UNIT AND INSTALLATION</b>						
MG303	Power unit complete with gearbox and remote control	1	1	1	Price on application	P110/
<b>CYLINDER BLOCK</b>						
MG363/9	Cylinder block (studded) with cover-plates	1	1	1	6 2 0	MG46
X110/38	Core disc	2	2	2	4	X464/
P110/103	Cylinder jacket cover-plate	2	2	2	1 1	MG46
P110/104	Joint for ditto	2	2	2	2 8	P110/
X110/4	Set screw for ditto	28	28	28	3	MG46
X110/5	Washer for ditto	28	28	28	doz. 4	P239/
X363/36	Stud for cylinder head (4 1/2" long)	7	7	7	5	P110/
X363/2	" " " " (4 1/2" long)	1	1	1	5	"05
X363/4	Locating studs for ditto (4 1/2" long)	1	1	1	1 6	15
X363/37	" " " " (4 1/2" long)	1	1	1	1 6	

Please Quote Chassis, Engine and Body Numbers in all Correspondence

1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67  
68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
X110/93	Dowel for locating front bearing housing ...	1	1	1	doz.		9
X110/6	Stud for cylinder head oil drain pipe (rear)	2	2	2			3
949	Stud for oil base ...	8	8	8			9
P110/106	Union cock in crankcase for oil pressure gauge pipe ...	1	1	1		2	3
<b>BELL HOUSING AND REAR MAIN BEARING</b>							
P239/9	Bell housing with rear main bearing ...	1	1	1	2	11	8
P110/110	Rear main bearing (bush) ...	1	1	1		10	6
X110/13	Grub screw for ditto ...	1	1	1			2
X110/2	Set screw for ditto (bell housing to block) ...	6	6	6			3
X105/4	Spring washer for ditto ...	6	6	6	doz.		8
P110/314	Joint for ditto ...	1	1	1			4
P110/109	Starter pinion inspection plug ...	1	1	1		1	6
<b>FRONT MAIN BEARING HOUSING AND ENGINE NOSE PIECE</b>							
P239/102	Front bearing housing ...	1	1	1	1	9	3
P239/107	Front main bearing (double row ball) ...	1	1	1	2	0	0
P110/317	Joint for front bearing housing ...	1	1	1			4
X110/2	Set screw for ditto (housing to cylinder block)	6	6	6			3
X105/4	Spring washer for ditto ...	6	6	6	doz.		8
X105/14	Set screw for ditto (housing to cylinder block)	2	2	2			3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
P110/107	Retainer plate for front bearing ...	1	1	1		1	3
P110/134	Lock plate for ditto ...	2	2	2		2	3
X110/26	Set screw for ditto ...	4	4	4			3
P239/8	Engine nose piece and front bearing housing cover ...	1	1	1	1	7	2
MG363/21	Ditto ... Comm. at Engine No. 2501	1	1	1	1	16	6
X110/11	Set screw for ditto (front cover to bearing housing) ...	4	4	4			3
X110/34	Ditto ... Comm. at Engine No. 2501	4	4	4			3
X105/4	Spring washer for ditto ...	4	4	4	doz.		8
P110/273	Shim for front cover (.003") ...		as required				4
P110/274	" " " (.005") ...		as required				4
P110/275	" " " (.007") ...		as required				4
MG363/207	" " " (.015") ...		as required				5
P239/115	Bolt for ditto (engine nose piece to front cover) ...	4	4	4			5
X110/41	Nut for ditto ...	4	4	4			3
828	Rubber bush for engine mounting (halves)	2	2	2			4
<b>CRANKSHAFT AND FLYWHEEL</b>							
P110/29	Crankshaft ...	1	1	1	2	11	8
X110/29	Plug for crank pin ...	3	3	3			11
X110/3	Crankshaft key (distributor and dynamo drive gear) ...	2	2	2			3
P110/142	Crankshaft flange ...	1	1	1	1	0	4
P110/185	Nut for ditto ...	1	1	1		2	3
P110/136	Lock wire for ditto ...	1	1	1			3
X110/24	Key for ditto ...	1	1	1			6
P110/263	Thrust washer for crankshaft location (steel) ...	1	1	1		2	2
P110/266	Ditto (phosphor bronze) ...	1	1	1		2	5
P110/262	Oil pump spiral gear (driven) ...	1	1	1		10	10
P110/261	Oil retaining flange ...	1	1	1		9	3
P110/264	Fan pulley distance piece ...	1	1	1		2	3
MG464/100	Thrust bearing sleeve ... Comm. at Engine No. 2501	1	1	1		13	6
X464/1	Crankshaft thrust bearing ... Comm. at Engine No. 2501	1	1	1		7	9
MG464/102	Thrust bearing sleeve ... Comm. at Engine No. 2501	1	1	1		14	6
P110/265	Starting dog nut ...	1	1	1		2	4
MG464/103	Ditto ... Comm. at Engine No. 2501	1	1	1		2	4
P239/108	Flywheel ...	1	1	1	1	17	9
P110/141	Bolt for ditto ...	4	4	4			1
X105/3	Nut for ditto ...	4	4	4	doz.		1
X105/4	Washer ...	4	4	4	doz.		8

Please Quote Chassis, Engine and Body Numbers when ordering Parts





Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
P264/1	Camshaft front bearing housing with cap ...	1	1	1	1	3	10
X110/49	Dowel for ditto ...	2	2	2	doz.		8
X110/46	Stud for ditto ...	2	2	2			3
X101/1	Nut for ditto ...	2	2	2	doz.	1	3
X101/2	Washer for ditto ...	2	2	2	doz.		8
P110/223	Camshaft front bearing bush (top) ...	2	2	2		1	0
P110/224	" " " " (front bottom)	1	1	1		1	0
P110/225	" " " " (rear bottom)	1	1	1		1	0
X101/1	Nut for securing front bearing housing ...	2	2	2	doz.	1	3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
MG363/5	Camshaft rear bearing housing with cap ...	1	1	1		18	0
MG363/118	Plug for ditto ...	1	1	1	doz.	1	3
X110/48	Copper washer for ditto ...	1	1	1	doz.		3
X110/49	Dowel for ditto ...	2	2	2	doz.		8
X363/12	Stud for ditto ...	2	2	2			2
X101/1	Nut for ditto ...	2	2	2	doz.	1	3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
P110/221	Camshaft rear bearing bush (bottom)	1	1	1		1	9
P110/222	" " " " (top) ...	1	1	1		1	3
X101/1	Nut for securing front bearing housing ...	2	2	2	doz.	1	3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
P110/7	Camshaft vertical drive bevel wheels ...	1 pr.	1 pr.	1 pr.	pair	1	16 5
P110/171	Thrust washer for camshaft ...	2	2	2			11
P110/172	Belleville washer for ditto ...	2	2	2			4
P110/202	Washer for camshaft ...	1	1	1		1	0
P110/210	Thrust washer for ditto (.172" thick) for vertical drive pinion ...						7
P110/211	Ditto (.178" thick) for vertical drive pinion						7
P110/194	Sleeve for vertical drive pinion ...	1	1	1		9	0
X110/44	Roller bearing for ditto ...	2	2	2		5	10
P110/43	Bearing retainer plate with felt ...	1	1	1		3	4
X110/98	Felt washer for ditto ...	1	1	1			3
P110/196	Oil thrower for camshaft drive driving pinion	1	1	1			7
P110/200	Oil drain housing for camshaft drive driving pinion ...	1	1	1		7	4
X101/1	Nut for ditto ...	2	2	2	doz.	1	3
X101/2	Washer for ditto ...	2	2	2	doz.		8
P110/204	Shims for vertical drive (.003" thick) ...						3
P110/205	" " " " (.005" thick) ...						3
P110/206	" " " " (.007" thick) ...						3
P110/207	" " " " (.010" thick) ...						5
P110/208	" " " " (.015" thick) ...						5
P110/209	" " " " (.020" thick) ...						8
P110/197	Universal joint fork for vertical drive ...	1	1	1		4	9
X110/43	Key for ditto ...	1	1	1			3
P110/198	Nut for ditto ...	1	1	1			7
P110/199	Copper washer for ditto ...	1	1	1	doz.		8
MG363/197	Cylinder head gasket ...	1	1	1		4	8
P110/49	Strap for cylinder head cover fixing with nut and clip ...	2	2	2		2	8
X239/4	Copper packing washer for ditto ...	2	2	2	doz.		6
P239/118	Cylinder head cover ...	1	1	1		1	14 4
MG363/128	Plug for ditto ...	1	1	1			6
X363/16	Washer for plug ...	1	1	1	doz.	1	4
P110/26	Screw with head for securing cylinder head cover ...	2	2	2		3	0
P110/313	Joint for cylinder head cover ...	1	1	1		2	0
<b>INDUCTION MANIFOLD, CARBURETTERS AND EXHAUST MANIFOLD</b>							
MG363/27	Induction manifold (studded) ...	1	1	1		1	5 10
X110/6	Stud for carburetter flange ...	4	4	4			3
MG363/130	Joint for induction manifold ...	1	1	1		2	0
X363/10	Nut for securing induction manifold (small)	3	3	3			2
X287/11	" " " " (large)	2	2	2			4
X110/37	Washer for ditto ...	5	5	5	doz.		8
MG363/194	Plug for induction manifold ...	1	1	1		1	6
X363/35	Washer for ditto ...	1	1	1	doz.		10
MG363/195	Taper plug for balance plug (not used with suction windscreen wiper) ...	1	1	1			3
A433	Carburetter complete with links ...	1 pr.	1 pr.	1 pr.	pair	7	0 0
X363/18	Joint for carburetter ...	2	2	2			2
X363/15	Nut for securing carburetter ...	4	4	4	doz.	1	3
X105/4	Spring washer for ditto ...	4	4	4	doz.		8

Please Quote Chassis, Engine and Body Numbers when ordering Parts

4  
8 9  
3  
19 8  
5 0  
1 2  
1 8  
3  
0 10  
1 3  
1 4  
1 9  
4  
8  
0  
3  
4  
4  
6  
4  
3  
3  
2  
8  
3  
3  
3  
3  
3  
2  
0  
0  
3  
8  
0  
0  
2  
2  
1  
1

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
MG363/125	Exhaust manifold	1	1	1	1	6	4
MG363/120	Joint for ditto	1	1	1	2	4	
X363/10	Nut for securing exhaust manifold	2	2	2		2	
X287/11	" " "	3	3	3		4	
X110/37	Washer for ditto	5	5	5	doz.	8	
MG363/119	Water manifold (outlet)	1	1	1	17	4	
MG363/121	Spigot tube for ditto	3	3	3		3	
MG363/120	Bridge for water manifold	3	3	3		3	0
X363/17	Joint for water manifold	3	3	3	doz.	4	
X105/3	Nut for water manifold (securing)	3	3	3	doz.	1	3
X105/4	Washer for water manifold securing nut	3	3	3	doz.	8	
<b>DYNAMO AND VERTICAL DRIVE</b>							
A448	Dynamo (1/4" dia. with studs)	1	1	1	7	12	6
P110/25	Dynamo and crankshaft bevel wheels	1 pr.	1 pr.	1 pr.	pair 1	13	10
P110/276	Tab washer for bottom bevel	1	1	1	doz.	1	9
P110/198	Nut for dynamo spindle	1	1	1		7	
P110/199	Washer for ditto	1	1	1	doz.	8	
P110/8	Dynamo universal joint fork with oil guard	1	1	1		5	6
P110/4	Dynamo coupling disc	1	1	1		5	6
P110/282	Packing washer for ditto (.010" thick)	as required			doz.	1	4
P110/283	" " " " (.020" thick)	as required			doz.	1	4
P110/284	" " " " (.030" thick)	as required			doz.	1	4
P110/285	" " " " (.040" thick)	as required			doz.	1	4
P110/286	" " " " (.050" thick)	as required			doz.	1	4
P110/277	Bolt for dynamo coupling	4	4	4		6	
X101/1	Nut for ditto	4	4	4	doz.	1	3
X101/2	Spring washer for ditto	4	4	4	doz.	8	
P287/160	Shim for dynamo bottom level (.010" thick)	as required				7	
P110/257	Shim for dynamo base (.003" thick)	as required				4	
P110/258	" " " " (.005" thick)	as required				4	
P110/259	" " " " (.007" thick)	as required				5	
P110/260	" " " " (.015" thick)	as required				7	
P110/267	Shim for crankshaft bevel wheel (.003")	as required				4	
P110/288	" " " " (.005")	as required				4	
P110/269	" " " " (.007")	as required				4	
X105/14	Set screw for securing dynamo	4	4	4		3	
X101/2	Spring washer for ditto	4	4	4	doz.	8	
<b>LUBRICATING SYSTEM</b>							
MG363/11	Oil filler with breather	1	1	1	10	1	
P110/469	Cap for oil filler	1	1	1	4	2	
P110/148	Clamp plate for oil filler	1	1	1		4	
X110/1	Set screw for securing ditto	1	1	1		3	
X101/2	Spring washer for ditto	1	1	1	doz.	8	
880	Oilbase sump	1	1	1	2	9	8
P110/485	Joint for ditto	1	1	1		1	0
X101/1	Nut for securing sump	8	8	8	doz.	1	3
X101/2	Spring washer for ditto	12	12	12	doz.	8	
X105/14	Set screw for ditto	4	4	4		3	
MG363/102	Plug for oil base	1	1	1		4	
X363/5	Washer for ditto	1	1	1	doz.	6	
X110/19	Drain plug for ditto	1	1	1		1	6
MG363/17	Dipstick with knob	1	1	1		2	9
P265	Oil strainer	1	1	1		9	0
947	Fibre washer for ditto	1	1	1	doz.	10	
P239/6	Oil suction pipe (strainer to pump)	1	1	1		4	4
P110/9	Oil pump assembly	1	1	1	1	16	6
P110/404	Oil pump body	1	1	1		14	4
P110/492	Joint for oil pump body	1	1	1	doz.	1	0
P110/135	Oil pump cover	1	1	1		1	3
P110/180	Joint for ditto	1	1	1	doz.	9	
X110/81	Stud for oil pump cover	3	3	3		3	
X101/1	Nuts	3	3	3	doz.	1	3
X101/2	Spring washer for ditto	3	3	3	doz.	8	
P110/497	Plug for oil pump (2 B.A. thread)	2	2	2		3	
X110/32	" " " " (1/4" gas thread)	1	1	1		6	
P110/451	Oil pump spindle and gear combined	1	1	1		8	6
X110/48	Key for ditto	1	1	1		3	
P110/153	Oil pump spiral gear (driven)	1	1	1		13	7
P110/154	Oil pump driven gear	1	1	1		5	0
P110/152	Spindle for ditto	1	1	1		5	
P239/109	Oil relief valve for oil pump	1	1	1		7	
X110/33	Washer for relief valve	1	1	1	doz.	1	4
P110/158	Spring for relief valve	1	1	1		4	

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	DESCRIPTION	No. Used			Price Each	
		1-seater	4-seater	7-ahon	£	s. d.
P110/157	Cap for relief valve ... ..	1	1	1	2	6
X110/95	Set screw for securing oil pump ... ..	3	3	3	3	3
X101/2	Spring washer for ditto ... ..	3	3	3	doz.	8
P239/5	Main oil feed pipe ... ..	1	1	1	3	8
X239/2	Union for ditto... ..	1	1	1	10	5
P239/119	Joint for ditto (lead) ... ..	1	1	1	1	6
P110/173	Oil restrictor pin (cylinder head) ... ..	1	1	1	3	3
X110/39	Set screw for securing oil feed pipe ... ..	1	1	1	doz.	4
X110/40	Fibre washer for ditto ... ..	1	1	1	10	5
P110/20	Cylinder head oil drain pipe (front) ... ..	1	1	1	2	2
X287/20	Joint for ditto (top) ... ..	1	1	1	doz.	1 0
X110/58	" " " (bottom) ... ..	2	2	2	doz.	1 3
X101/1	Nut for ditto (top) ... ..	2	2	2	doz.	8
X101/2	Spring washer for ditto (top) ... ..	2	2	2	doz.	3
X110/3	Set screw for ditto (bottom)... ..	2	2	2	doz.	8
X101/2	Spring washer for ditto (bottom) ... ..	2	2	2	doz.	10 10
MG363/16	Cylinder head oil drain pipe (rear) ... ..	1	1	1	doz.	1 0
X110/58	Joint for ditto ... ..	2	2	2	doz.	1 3
X101/1	Nuts for securing ditto ... ..	4	4	4	doz.	8
X101/2	Spring washer for ditto ... ..	4	4	4	doz.	1 0
P110/443	Banjo union for bell housing (main bearing oil feed) ... ..	1	1	1	1	4
P110/479	Lock plate for ditto ... ..	1	1	1	doz.	1 8
X110/7	Washer for ditto ... ..	1	1	1		
<b>ELECTRICAL DETAILS</b>						
A478	Starter motor ... ..	1	1	1	5	5 0
X110/10	Set screw for securing ditto ... ..	2	2	2	3	3
X110/12	Bolt for ditto ... ..	1	1	1	doz.	1 3
X101/10	Nut for ditto ... ..	1	1	1	doz.	1 3
X101/11	Spring washer for ditto ... ..	3	3	3	1	9
P110/111	Starter packing piece ... ..	1	1	1	1	5 6
A577	Distributor ... Ceased at Engine No. 750 (manual)	1	1	1	1	10 6
A362	Ditto	1	1	1	1	3
P110/288	Comm. at Engine No. 751 (automatic advance) Securing screw for ditto ... ..	1	1	1		
<b>CLUTCH DETAILS</b>						
P239/132	Clutch driving studs (in flywheel) ... ..	6	6	6	3	5
P239/131	Clutch springs ... ..	6	6	6	15	3
P239/13	Clutch pressure plate with lining and thrust buttons ... ..	1	1	1	4	8
P239/125	Clutch lining ... ..	1	1	1	doz.	4
X110/65	Rivets for ditto ... ..	6	6	6	4	4
P110/472	Thrust buttons for ditto ... ..	3	3	3	11	10
P239/11-	Clutch centre plate assembly ... ..	1	1	1	3	0 6
MG363/30	Clutch cover-plate (bushed) with lining ... ..	1	1	1	4	4
MG363/215	Bush for clutch operating pin ... ..	3	3	3	4	8
P239/125	Lining for clutch cover ... ..	1	1	1	doz.	4
X110/66	Rivets for ditto ... ..	6	6	6	4	4
P110/324	Clutch operating pin ... ..	3	3	3	3	6
P239/124-	Clutch finger lever ... ..	3	3	3	4	4
P110/334	Clutch lever pin Ceased at Engine No. 2500	3	3	3	4	4
MG363/216	" " Comm. at Engine No. 2501	3	3	3	doz.	1 2
X110/61	Felt washers for clutch lever ... ..	6	6	6	doz.	2 0
X110/62	Brass washers for ditto ... ..	12	12	12	doz.	1 3
P239/126	Clutch lever adjusting screw ... ..	3	3	3	doz.	1 3
X101/1	Lock nut for ditto ... ..	3	3	3	3	3
P239/130	Clutch lever spring retaining clip ... ..	3	3	3	6	6
X239/9	Set screw for ditto ... ..	6	6	6	doz.	8
X110/64	Spring washer for ditto ... ..	6	6	6	3	3
X110/30	Set screw for securing clutch cover to flywheel	6	6	6	doz.	8
X105/4	Spring washer for ditto ... ..	6	6	6	13	0
P110/338	Clutch thrust bearing ... ..	1	1	1	1	0
P110/500	Cover for ditto ... ..	1	1	1	4	10
P110/481	Clutch operating sleeve ... ..	1	1	1	10	10
P110/339	Clutch operating shaft... ..	1	1	1	5	4
P239/139	Clutch pedal ... ..	1	1	1		
P110/422-	Cotter pin for ditto with nut and spring washer ... ..	1	1	1	5	5
1144	Clutch pedal return spring ... ..	1	1	1	3	3
1145	Anchor bracket for ditto ... ..	1	1	1	4	4
1286	Clutch pedal stop stud ... ..	1	1	1	4	4
1388	Nut for ditto ... ..	1	1	1		

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each
		2-seater	4-seater	Saloon	
<b>GEARBOX AND DETAILS WITH REMOTE CONTROL</b>					
MG808/8	Gearbox assembly complete, less clutch pedal withdrawal and inspection cover ...	1	1	1	21 0 0
MG368/20	Clutch pit (studded) ...	1	1	1	1 2 8
X368/22	Stud for securing gearbox to ditto ...	6	6	6	doz. 1 6
X110/11	Set screw for securing clutch pit to bell housing ...	3	3	3	3
X110/9	Bolts for ditto ...	5	5	5	4
X105/3	Nuts for ditto ...	5	5	5	doz. 1 3
X105/4	Spring washers for ditto ...	8	8	8	doz. 8
P110/348	Bush for clutch operating shaft O/S	1	1	1	3 5
P110/340	" " " " " N/S	1	1	1	1 6
X110/70	Disc for ditto ...	1	1	1	doz. 8
X110/71	Locking screw for ditto ...	2	2	2	3
X101/2	Spring washer for ditto ...	2	2	2	doz. 8
2832	Clutch inspection cover ...	1	1	1	1 4
X110/60	Set screw for ditto ...	2	2	2	3
X287/17	Washer for ditto ...	2	2	2	doz. 8
MG368/18	Gearbox case (studded) ...	1	1	1	1 6 0
X110/98	Dowel for locating front end ...	2	2	2	doz. 9
X363/12	Stud for top cover ...	4	4	4	2
X363/19	Stud for rear cover (2 1/2" long) ...	1	1	1	3
X363/20	" " " " (1 1/2" long) ...	5	5	5	3
X363/21	" " " " (1 1/2" long) ...	1	1	1	3
X110/93	Dowel for rear cover ...	2	2	2	doz. 9
P110/109	Oil filler and drain plug ...	2	2	2	1 6
X110/67	Fibre washer for ditto ...	2	2	2	doz. 10
X105/8	Nut for securing gearbox case to clutch pit	6	6	6	doz. 1 3
X103/4	Spring washer for ditto ...	6	6	6	doz. 8
MG368/143	First motion shaft ...	1	1	1	1 3 6
X110/76	Shim for ditto (.008" thick) ...	as required			4
X110/77	" " " (.005" thick) ...	as required			4
X110/78	" " " (.007" thick) ...	as required			4
X239/8	" " " (.010" thick) ...	as required			4
P239/183	" " " (.015" thick) ...	as required			5
P110/366	Oil thrower for ditto (rear) ...	1	1	1	4
X110/85	Ball race for ditto ...	1	1	1	8 9
P110/865	Oil thrower for ditto (front) ...	1	1	1	4
MG368/187	Locking nut for ditto (combined oil return)	1	1	1	3 2
X110/74	Circlip for ditto ...	1	1	1	3
MG368/165	Retaining plate for cover securing bolts ...	1	1	1	5
X363/27	Bolts for first motion shaft cover ...	4	4	4	3
X101/1	Nut for ditto ...	4	4	4	doz. 1 3
X101/2	Spring washer for ditto ...	4	4	4	doz. 8
X110/75	Sealing washer for cover ...	1	1	1	6
MG368/164	Cover for first motion shaft ...	1	1	1	3 4
MG368/140	Mainshaft ...	1	1	1	13 4
X368/28	Roller bearing spigot ...	1	1	1	4 9
MG368/188	Distance washer for ditto ...	1	1	1	1 3
MG368/145	3rd and top speed sliding gear ...	1	1	1	16 10
MG368/146	1st and 2nd speed sliding gear ...	1	1	1	18 4
X110/86	Ball race (mainshaft rear) ...	1	1	1	11 6
MG368/179	Retaining plate for ditto ...	1	1	1	6
X112/1	Bolt for ditto ...	2	2	2	3
X105/3	Nut for ditto ...	2	2	2	doz. 1 3
X105/7	Set screw for ditto ...	1	1	1	3
X105/4	Spring washer for ditto ...	3	3	3	doz. 8
P110/410	Speedometer driving gear ...	1	1	1	4 2
P110/411	Speedometer driven gear ...	1	1	1	4 10
P110/389	Thrust button for ditto ...	1	1	1	1 0
P110/409	Bearing for ditto ...	1	1	1	8 9
X110/80	Joint for ditto ...	1	1	1	4
MG368/177	Rear cover (gearbox) ...	1	1	1	18 4
MG368/178	Plug for ditto ...	1	1	1	3
X105/3	Nuts for securing ditto ...	7	7	7	doz. 1 3
X105/4	Spring washers for ditto ...	7	7	7	doz. 8
MG368/139	Propeller shaft flange ...	1	1	1	9 4
X105/12	Nut for ditto ...	1	1	1	3
X105/18	Washer for ditto ...	1	1	1	3
MG368/141	Layshaft ...	1	1	1	5 0
X868/23	Roller bearing for layshaft ...	2	2	2	4 9
MG368/138	Distance washer for ditto ...	4	4	4	1 3
MG368/144	Constant mesh gear ...	1	1	1	14 8
MG368/152	Spring retaining ring for ditto ...	2	2	2	doz. 1 8

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Each

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
MG363/147	3rd speed constant mesh gear	1	1	1	19	6	
MG363/148	Roller for ditto...	23	23	23			2
MG363/149	Washer for rollers	2	2	2			3
MG363/150	Spring retaining ring for ditto	1	1	1	doz.	1	4
MG363/151	Layshaft gear	1	1	1		8	2
P110/362	Locking screw for layshaft	1	1	1			2
X101/2	Spring washer for ditto	1	1	1	doz.		8
MG489/203	Reverse shaft	1	1	1		2	9
MG363/24	Reverse gear (bushed)	1	1	1		13	2
MG363/154	Bush for ditto	1	1	1		2	3
X101/10	Nut for reverse shaft	1	1	1	doz.	1	3
X363/24	Spring washer for ditto	1	1	1	doz.		8
MG363/166	1st and 2nd change speed rod	1	1	1		3	10
MG363/170	1st and 2nd change speed fork	1	1	1		6	0
MG363/168	Distance piece for ditto (rear)	1	1	1			3
MG363/169	" (front)	1	1	1			4
MG363/167	3rd and 4th gear change speed rod	1	1	1		3	9
MG363/171	3rd and 4th gear change speed fork	1	1	1		6	0
X110/84	Ball for change speed forks	2	2	2	doz.	1	6
X363/28	Spring for ditto	2	2	2			3
MG489/212	Selector lever (reverse)	1	1	1		5	8
MG363/156	Fulcrum pin for ditto	1	1	1			8
X101/5	Nut for ditto	1	1	1	doz.	1	3
X101/11	Spring washer for ditto	1	1	1	doz.		8
MG363/160	Socket for reverse locking plunger	1	1	1		2	0
X363/25	Nut for ditto	1	1	1			2
X363/26	Spring washer for ditto	1	1	1	doz.		8
MG363/161	Plug for socket	1	1	1			3
MG363/162	Reverse locking plunger	1	1	1			10
MG363/163	Spring for ditto	1	1	1			11
MG363/159	Selector shaft reverse	1	1	1		1	6
MG363/157	Selector fork reverse	1	1	1		1	8
MG363/158	Distance piece for ditto	1	1	1			3
MG363/8	Change speed lock assembly	1	1	1		3	0
<b>GEAR LEVER REMOTE CONTROL DETAILS</b>							
MG363/19	Gearbox remote control assembly complete	1	1	1	3	5	0
MG363/31	Change speed housing	1	1	1	1	19	2
X110/38	Core plug for ditto	2	2	2			4
P287/133	Greaser (front)	1	1	1			5
MG363/181	" (rear)	1	1	1			4
P110/404	Locating peg for change speed lever	1	1	1	doz.		2
MG363/183	Change speed gate	1	1	1		4	6
MG363/198	Shim for ditto	as required			doz.	1	2
X105/14	Bolt for ditto	3	3	3			3
X101/2	Spring washer for ditto	3	3	3	doz.		8
MG489/186	Change speed lever	1	1	1		7	2
MG408/114	Knob for ditto	1	1	1		2	0
X363/30	Lock nut for ditto	1	1	1			2
2747	Anti-rattle spring for ditto	1	1	1			5
MG363/189	Shaft actuating lever	1	1	1		4	6
X363/34	Set screw for ditto	1	1	1			3
X101/2	Spring washer for ditto	1	1	1	doz.		8
MG363/23	Change speed shaft	1	1	1		7	6
MG489/213	Selector lever	1	1	1		5	4
X101/4	Key for ditto	1	1	1			3
X363/31	Nut for ditto	1	1	1			3
X363/32	Washer for ditto	1	1	1	doz.		4
MG363/182	Tray for change speed housing	1	1	1		1	6
X110/82	Screw for ditto	2	2	2	doz.		7
X101/1	Nut for securing remote control to gearbox	4	4	4	doz.	1	3
X101/2	Spring washer for ditto	4	4	4	doz.		8
<b>REAR ENGINE MOUNTING</b>							
795	Rear engine bearer brackets	2	2	2		2	9
1378	Rear engine support washer (thick)	2	2	2			9
1377	Rear engine bearer distance piece	2	2	2			4
1375	Fibre washer for engine mounting	2	2	2			2
130	Washer for engine mounting (thin)	2	2	2	doz.	1	6
129	Bolt seats (rubber)	2	2	2			5
<b>BRAKE GEAR</b>							
P239/140	Brake pedal	1	1	1		5	4
1007	Brake pedal fulcrum pin	1	1	1			9
1365	Brake pedal roller	23	23	23	set	1	9

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each
		2-seater	4-seater	Saloon	
P245	Brake push rod (complete) ...	1	1	1	5 7
933	Clevis pin for ditto ...	2	2	2	6
269	Brake pedal return spring ...	1	1	1	3
270	Anchor bracket for ditto ...	1	1	1	7
P302	<b>Brake cross shaft assembly</b> ...	1	1	1	2 15 10
841	Roller for brake cross shaft N/S ...	32	32	32	set 2 6
842	Roller bearing retainer for ditto ...	1	1	1	2 6
860	Foot brake adjusting rod ...	1	1	1	1 6
858	Clevis pin for ditto ...	1	1	1	4
MG488/104	Hand brake adjusting rod ...	1	1	1	4
851	Clevis pin for ditto ...	1	1	1	2 1
846	Hand and foot brake adjuster nuts ...	2	2	2	2 1
849	Knob for hand brake lever ...	1	1	1	1 3
853	Screw for knob ...	1	1	1	4
852	Hand brake pawl spring ...	1	1	1	4
854	Hand brake pawl rod ...	1	1	1	8
857	Hand brake lever ratchet pawl ...	1	1	1	2 2
856	Hand brake pawl screw ...	2	2	2	8
855	Hand brake pawl stud ...	1	1	1	4
838	Bush for brake cross shaft ...	1	1	1	1 6
922	Trunnion for ditto ...	2	2	2	8
1071	Fibre washer for brake cross shaft (Type B) ...	2	2	2	4
2767	Brake cross shaft return spring ...	1	—	—	doz. 1 4
2764	Clip for ditto ...	1	—	—	5
270	Anchor bracket for ditto ...	1	—	—	7
827	Brake cross shaft steady bracket ...	1	1	1	2 9
877	Hand brake ratchet ...	1	1	1	4 2
878	Hand brake lever stop ...	1	1	1	2 2
2033	Rubber buffer for ditto ...	1	1	1	doz. 1 8
1051	Hand brake lever return spring ...	1	1	1	3
P357	<b>Front brake cables (complete)</b> ...	2	2	2	19 3
P358	<b>Rear brake cables (complete)</b> ...	2	2	2	18 8
P109/100	Clevis pin for ditto ...	4	4	4	3
S2/20	Clip for cables ...	4	4	4	3
1963	Rubber ferrules for ditto ...	2	2	2	2
<b>CONTROLS</b>					
P844	<b>Accelerator cross shaft assembly</b> ...	1	1	1	14 6
1969	Jet control return spring ...	1	1	1	4
S1/7	Greaser (on cross shaft) ...	1	1	1	3
1118	Accelerator pedal stop ...	1	1	1	7
265	Accelerator return spring ...	1	1	1	4
P122	Coupling rod to throttle (ball jointed) ...	1	1	1	1 4
MG890	Ceased at Engine No. 550 Ditto ... Comm. at Engine No. 551	1	1	1	1 4
1854	Slow-running rod ...	1	1	1	1 6
1107	Knob for ditto ...	1	1	1	6
182	Spring for ditto ...	1	1	1	7
1110	Bracket for slow-running rod ...	1	1	1	1 0
1108	Jet control rod ...	1	1	1	10
1107	Knob for ditto ...	1	1	1	6
1111	Anti-rattle spring for controls ...	3	3	3	doz. 1 4
1853	Jet control connecting rod ...	1	1	1	10
2061	Ceased at Engine No. 550 Ditto ... Comm. at Engine No. 551	1	1	1	10
2026	Control rod steady bracket ...	1	1	1	2 6
1112	Rubber bush for controls ...	2	2	2	3
1870	Mixture control instruction plate ...	1	1	1	4
1227	Slow-running instruction plate ...	1	1	1	4
P356	Ignition control assembly ...	1	1	1	8 6
<b>STEERING GEAR</b>					
P345	Steering gear unit (less wheel) ...	1	—	—	6 15 0
MG435	"    "    "    " (less wheel) ...	—	1	1	6 15 0
P345/5	Steering box outer tube and cover-plates assembled ...	1	—	—	2 6 7
MG435/3	Ditto ...	—	1	1	2 6 7
P345/4	Steering box with outer tube ...	1	—	—	1 12 6
MG435/2	"    "    "    " ...	—	1	1	1 12 6
P345/117	"    "    "    " ...	1	1	1	14 4
P345/102	Outer tube ...	1	—	—	16 1
MG435/101	"    "    "    " ...	—	1	1	16 1
P345/114	Cover-plate for steering box ...	1	1	1	9 6

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Each

5 7  
6  
3  
7  
5 10  
2 6  
2 6  
1 6  
4  
4  
2 3  
1 3  
4  
4  
8  
2  
8  
4  
6  
8  
4  
4  
5  
7  
9  
2  
2  
8  
3  
3  
8  
3  
2

3  
7  
4

4  
4  
8  
6  
7  
0  
10  
6  
4  
0  
0  
6  
3  
4  
4

5

0

0

1

1

1

1

1

1

1

1

1

Part No.	DESCRIPTION	No. Used			Price Each
		2-seater	4-seater	Saloon	
P345/115	Shim for cover-plate	as required			6
P345/116	Dowel for ditto	2	2	2	2
P345/122	Studs for securing cover-plate	3	3	3	3
P345/121	Nuts for ditto	3	3	3	2
P345/106	Bottom cap for steering box	1	1	1	3 6
P345/117	Shims for bottom cap	as required			2
P345/122	Studs for securing ditto	2	2	2	3
P345/121	Nuts for ditto	2	2	2	2
P345/2	Assembly of cage and balls for cup and cone bearing	2	2	2	3 0
P345/112	Cage for balls	2	2	2	1 5
P345/124	Steel balls	30	30	30	doz. 7
P345/110	Ball race cup	2	2	2	2 7
P345/111	Ball race cone	2	2	2	2 0
P345/3	Inner column and cam assembled	1	1	1	16 0
MG435/1	" " " " " " " "	1	1	1	16 0
P345/119	" Inner column	1	1	1	15 10
MG435/100	" " " " " " " "	1	1	1	15 10
P345/113	Steering cam	1	1	1	18 5
P345/109	Felt bush for column (top)	1	1	1	10
P193/110	Key for steering wheel	1	1	1	10
P345/1	Assembly of follower and hemispheres	1	1	1	13 9
P345/101	Follower	1	1	1	7 6
P345/105	Hemisphere	4	4	4	set 6 4
P345/108	Rocker-shaft	1	1	1	19 0
P345/103	Felt washer for drop arm	1	1	1	6
P345/118	Drop arm	1	1	1	10 8
P345/123	Flat washer for ditto	1	1	1	1 9
P345/104	Nut for rocker-shaft	1	1	1	6
1952	Steering box bracket	1	1	1	3 0
1953	" " " " " " " "	1	1	1	3 0
1954	Dowel for ditto	2	2	2	2 2
A310	Steering wheel (17")	1	1	1	2 0
A316	" " (16")	1	1	1	2 0
1919	Steering column clamp	1	1	1	2 2
1888	Steering support bracket	1	1	1	2 1
154	" " " " " " " "	1	1	1	2 6
1433	" " " " " " " "	1	1	1	4 3
<b>RADIATOR AND CONNECTIONS</b>					
P346	Radiator complete	1	1	1	11 0 0
P346/1	Radiator case with medallion	1	1	1	4 7 6
P282/106	Stoneguard	1	1	1	15 3
A153/100	Radiator thermo union	1	1	1	1 0
P214/103	Fibre washer for ditto	1	1	1	2
MG414/104	Cap for radiator thermo union	1	1	1	4
P282/100	Radiator drain cock	1	1	1	1 9
P214/103	Fibre washer for ditto	1	1	1	2
MG497/102	M.G. medallion	1	1	1	5 0
P214/100	Radiator filler cap	1	1	1	12 0
P214/101	Rubber ring for ditto	1	1	1	7
1066	Radiator mounting washer (fibre)	3	3	3	3 3
130	" " " (steel)	2	2	2	doz. 1 6
1890	Radiator stay rod	2	2	2	6 6
1069	Fork end for ditto	4	4	4	6 6
1068	Eye bolt for ditto	2	2	2	4 4
1855	Water hose connection (top)	1	1	1	1 4
1141	" " " (bottom)	1	1	1	1 7
A332	Clip for ditto (1 <sup>3</sup> / <sub>16</sub> " (top)	2	2	2	9
A299	" " " (1 <sup>1</sup> / <sub>16</sub> " (bottom)	2	2	2	10
<b>EXHAUST SYSTEM AND SILENCER</b>					
1139	Front exhaust pipe				
1964	Ceased at Chassis No. J3580	1	---	---	8 9
141	Ditto Comm. 2-Seater at Chassis No. J3581	1	1	1	8 6
A300	Gasket for ditto	1	1	1	6 6
1868	Silencer	1	1	1	3 3
1904	Silencer clip	2	2	2	6 6
1865	Bracket for ditto (front)	1	1	1	9 9
831	" " " (rear)	1	1	1	2 8
1866	Fume excluder clip	1	1	1	3 3
1369	Ceased Chassis No. J3580	1	---	---	6 0
830	Ditto Comm. 2-Seater at Chassis No. J3581	1	1	1	6 8
	Rear exhaust pipe clip	1	1	1	1 10

Please Quote Chassis, Engine and Body Numbers when ordering Parts  
13

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
<b>PETROL TANK AND PIPES</b>							
MG422	Petrol tank with tap (less cap) (unpainted) ...	1	---	---	2	15	4
1115	Petrol tank (less cap) (unpainted) ...	---	1	---	2	2	8
1251	" " (less cap) (unpainted) ...	---	---	1	2	2	8
1911	Petrol tap ...	1	---	---	6	8	
1903	Petrol tank cap ...	1	---	---	12	4	
1464	" " " " ...	---	1	1	4	2	
1410	Dipstick for petrol tank ...	---	1	---	2	7	
1409	" " " " ...	---	---	1	2	7	
S23/2	Rubber packing for tank (on body) (68" long) (cut into 3 lengths to suit) ...	1	---	---	foot	1	2
1402	Petrol tank strap ...	---	2	---			10
1859	Petrol pipe (tank to main) ...	1	---	---	2	3	
1196	" " (tank to reserve) ...	---	1	1	2	3	
1197	" " (tank to main) ...	---	1	1	2	6	
S3/2	1" gas cone to 1/4" gas cone union adaptor ...	1	2	2			6
1108	Main petrol pipe ...	1	1	1	3	4	
1199	Reserve petrol pipe ...	---	1	1	3	4	
S3/2	1" gas cone to 1/4" gas cone union adaptor ...	1	---	---			6
1200	Petrol tap ...	---	1	1	6	1	
1859	Petrol pipe, tap or main pipe to Petrolift Ceased 2-Seater at Chassis No. J3433	1	1	1	2	3	
2774	Petrol pipe, main to petrol pump Comm. Chassis No. J3434	1	---	---	2	1	
A242	Petrolift Ceased 2-Seater at Chassis No. J3433	1	1	1	2	10	0
A444	Petrol pump ... Comm. Chassis No. J3434	1	---	---	2	10	0
1860	Petrol pipe (Petrolift to carburetter) Ceased 2-Seater at Chassis No. J3433	1	1	1	3	0	
2773	Ditto (petrol pump to carburetter) Comm. Chassis No. J3434	1	---	---	5	4	
A481	Petrol pipe connection for ditto Comm. Chassis No. J3591	1	---	---	1	5	
S2/19	Petrol pipe and Tecomit clip (double-ended)	---	2	2			4
S2/23	Petrol pipe clip (double-ended) ...	---	1	1			7
S2/80	" " " " (for 1 pipe) (5/16" dia. fixing hole) ...	1	2	2			4
S2/16	" " " " (for 2 pipes) ...	---	2	2			3
S2/29	Petrol pipe and Tecomit clip (single end)	3	---	---			4
S2/32	Petrol pipe clip (single) (5/16" dia. fixing hole)	3	---	---			4
S2/11	Ditto (single) (1/4" dia. fixing hole)	2	---	---			3
1415	Distance piece for petrol pipe clip (rear)	1	1	1			2
<b>ACCESSORIES AND SUNDRIES</b>							
A294	Wheel (2.50W.B. x 19") (unpainted) ...	5	5	5	2	2	0
1123	Hub cap O/S ...	2	2	2	9	7	
1756	" " N/S ...	2	2	2	9	7	
1914	Instruction plate for foot brake adjustment	1	---	---			6
1219	Instruction plate for foot brake adjustment and petrol tap ...	---	1	1			10
P277/1	Shock absorbers (front) ...	---	1 pr.	1 pr.	pair	3	19 6
MG871/1	" " (front) ...	---	1 pr.	---	pair	5	16 0
A590	Front shock absorber less pins	1 pr.	1 pr.	1 pr.	pair	5	11 0
P277/100	Pin for ditto, (top) ...	---	3	2			2 0
MG871/100	" " " (top) ...	2	---	---			2 0
P277/102	" " " (bottom) ...	2	2	2			2 0
P277/103	Castle nut for ditto ...	4	4	4			3
P277/3	Shock absorbers (rear) ...	1 pr.	1 pr.	1 pr.	pair	4	7 6
A591	Rear shock absorber less pins	1 pr.	1 pr.	1 pr.	pair	4	2 6
P277/102	Pin for ditto ...	2	2	2			2 0
P277/103	Castle nut for ditto ...	2	2	2			3
MG871/101	Rear shock absorber arm (bushed) ...	1	1	1			5 0
1229	Rear shock absorber tie bar ...	1	1	1			2 2
178	Front number-plate ...	1	1	1			2 4
1124	Rear number-plate ...	1	1	1			2 4
1456	Rear number-plate bracket ...	---	---	2			1 0
B200/136	Rear number-plate bar ...	---	1	---			3 0
A289	Licence holder ...	1	1	1			4 0
1480	Clip for starting handle ...	3	---	---			2
2955	Clip for tyre pump ...	2	---	---			4
2012	Strap for lifting jack ...	1	---	---			1 6
1948	Spare sparking plug carrier ...	1	1	1			5 0

Please Quote Chassis, Engine & Frame Numbers in all Correspondence



Part No.	DESCRIPTION				Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
P359	<b>Grouped lubricating system</b> ... ..	1	1	1	2	0	2
P167/133	Pipe (1' 5" long) (steering box and front spring sliding trunnion) ... ..	1	1	1	1	6	
P278/102	" (1' 8½" long) (grouped nipples and front spring sliding trunnions) ... ..	2	2	2	2	0	
P359/100	" (2' 1½" long) (grouped nipples and front brake cables) ... ..	2	2	2	2	2	
P278/104	" (2' 11½" long) (grouped nipples and brake cross shaft) ... ..	2	2	2	2	9	
P359/101	" (4' 5" long) (grouped nipples and rear brake cables) ... ..	2	2	2	3	6	
P167/138	" (2' 7" long) (brake cross shaft and rear spring front shackles) ... ..	2	2	2	2	3	
P278/117	" (5' 9" long) (brake cross shaft and rear spring sliding trunnions) ... ..	2	2	2	4	3	
S1/4	Greaser nipple (front spring front shackles, steering knuckles, track rod and draglink ends) ... ..	10	10	10			8
P278/109	Adjustable feed plug (steering box, rear spring front shackles, front spring rear shackle N/S) ... ..	4	4	4	1	3	
P278/110	Ditto (front spring rear shackle O/S) ... ..	1	1	1	1	6	
P859/103	Open feed plug (brake cable stop brackets and rear spring rear shackles) ... ..	6	6	6	1	0	
P278/118	Adjustable feed plug (brake cross shaft) ... ..	2	2	2	1	8	
P113/110	Fibre washers (thick) ... ..	13	13	13	doz.	1	0
P113/111	" (thin) ... ..	38	38	38	doz.	6	8
P118/109	Clip for 1 pipe ... ..	4	4	4	doz.	6	
P278/111	Clip for 2 pipes ... ..	2	2	2	doz.	1	7
P278/119	Support for 3 pipes ... ..	1	1	1		4	
MG369/106	Support for 4 pipes ... ..	2	2	2		6	
P359/1	Zerk battery plate fitting (1-way) (grouped nipples) ... ..	4	4	4	1	3	
P359/2	Ditto (2-way) (grouped nipples) ... ..	2	2	2	1	5	
1220	Instruction plate for greaser nipples O/S ...	1	1	1	1	1	
1221	" " " " " N/S ...	1	1	1	1	1	
<b>DASHBOARD AND FUME EXCLUDERS</b>							
1121	Dashboard wall O/S ... ..	1	1	1	4	7	
1122	" " N/S ... ..	1	1	1	4	7	
130	Distance washer for ditto ... ..	2	2	2	doz.	1	6
1886	Dash panel ... ..	1	1	1	15	3	
1142	" " " " " ... ..	—	1	1	15	3	
978	Draught excluder rubber round dash panel (70" long) ... ..	1 lth.	1 lth.	1 lth.	3	8	
1869	Draught excluder block O/S... ..	1	1	1	1	4	
1962	" " N/S... ..	1	1	1	1	4	
1175	Clutch housing draught excluder plate ...	1	1	1	8	4	
978	Clutch housing draught excluder rubber (32" long) ... ..	1	1	1	1	6	
2003	Draught excluder for steering column (rubber)	1	1	1	3	7	
2070	Backing plate for ditto ... ..	1	1	1	7	7	
1176	Undertray ... Ceased Chassis No. J3580	1	—	—	9	1	
1965	Ditto Comm. on 2-Seater at Chassis No. J3581	1	1	1	10	2	
<b>ELECTRICAL EQUIPMENT AND INSTRUMENTS</b>							
A305	Instrument panel with ammeter Ceased Chassis No. J3575	1	—	—	2	2	0
A485	Ditto (dome glass) Comm. Chassis No. J3576	1	—	—	2	2	0
A246	Ditto ... ..	—	1	1	2	15	0
A634	Combined speedometer and revolution counter Ceased Chassis No. J3575	1	—	—	6	16	0
A634/1	Cable for speedometer " " " "	1	—	—	15	0	
A491	Combined speedometer and revolution counter Comm. Chassis No. J3576	1	—	—	6	13	0
2792	Mask for ditto (chrom. plated) Comm. Chassis No. J3576	1	—	—	1	0	
A603	Speedometer ... ..	—	1	1	2	15	0
A603/1	Speedometer cable ... ..	—	1	1	13	0	
A459	Speedometer cable Comm. Chassis No. J3576	1	—	—	15	0	
A461	Speedometer reduction box Comm. Chassis No. J3576	1	—	—	1	1	0

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each	l s d.
				2-seater	4-seater	Saloon		
A312		Oil gauge ... Ceased Chassis No. J3575		1	—	—	12	6
A488		" " (dome glass) Comm. Chassis No. J3576		1	—	—	1	1 0
A250		" " ... ..		—	1	1	1	10 0
1192		Oil gauge pipe ... ..		1	1	1	3	6
335		Fibre washer for ditto ... ..		2	2	2		1
A306		Combined horn and dipper switch ... ..		1	1	1	10	6
A250		Battery (12-volt) Ceased 2-Seater at Chassis No. J2943, 4-Seater & Saloon J0492		1	1	1	5	2 0
A306		Ditto (12-volt) Comm. on 2-Seater Chassis No. J2944, 4-Seater & Saloon J0493		1	1	1	5	1 6
1889		Battery carrier ... Ceased Chassis No. J2943		1	—	—	7	8
1039		" " ... Ceased Chassis No. J0492		—	1	1	5	4
2843		" " Comm. on 2-Seater Chassis No. J2944, 4-Seater & Saloon J0493		1	1	1	7	8
A247		Starter switch ... ..		1	1	1	7	6
A240		Cut-out and junction box ... ..		1	1	1	1	5 0
A248		Auxiliary junction box ... ..		1	1	1	2	6
A802		Ignition coil ... ..		1	1	1	1	0 0
A301		Headlamps ... ..		1 pr.	1 pr.	1 pr.	4	17 0
A307		Sidelamps ... ..		1 pr.	1 pr.	1 pr.	1	1 0
500		Rubber packing for ditto Ceased Chassis No. J3437		2	—	—	—	5
650		Ditto ... ..		—	2	2	—	8
A253		Tail-lamp ... ..		1	1	1	8	6
1484		Rubber bush for tail-lamp cable Ceased 2-Seater at Chassis No. J3437		1	1	—	—	3
A002		Windscreen wiper (suction) Ceased 2-Seater at Chassis No. J3528		1	1	1	1	10 6
A382		Windscreen wiper motor (electric) with cable Comm. Chassis No. J3529		1	—	—	2	2 0
A388		Windscreen wiper blade assembly Comm. Chassis No. J3529		1	—	—	14	10
A808		Driving mirror ... Ceased Chassis No. J3528		1	—	—	6	0
A889		" " (with bracket) Comm. Chassis No. J3529		1	—	—	13	6
A257		" " ... ..		—	1	—	13	6
A286		" " ... ..		—	—	1	5	0
A531		Harnessed cables ... ..		1	—	—	4	7 6
A814		" " ... ..		—	1	1	2	5 0
1393		Rubber bush for ditto (through dash) ... ..		1	3	3	—	4
2587		Wiring cover ... ..		1	1	1	1	8
1970		Cable carrier for rain channel ... ..		1	—	—	1	0
A676		High-tension cables ... ..		1	1	1	7	0
2889		Rubber bush for ditto ... ..		1	1	1	—	4
A318		Horn ... ..		1	—	—	1	0 0
3263		Bracket for ditto Ceased Chassis No. 3437		1	—	—	2	0
2891		Bracket for horn Comm. Chassis No. J3438		—	—	—	2	0
2890		Clip for horn bracket Comm. Chassis No. J3438		1	—	—	—	10
A255		Horn ... ..		—	1	1	1	4 6
S2/2		Wiring clip (3/8" dia. single) ... ..		7	6	6	—	3
S2/5		" " (1/8" dia. single) ... ..		6	6	6	—	4
S2/6		" " (1" dia. single) ... ..		3	6	6	—	4
S2/28		" " (3/4" dia. single) ... ..		5	2	2	—	4
S2/27		" " (3/8" dia. single) ... ..		5	—	—	—	3
S2/7		" " (1/2" dia. single) ... ..		4	—	—	—	4
S2/26		" " (3/8" dia. single) ... ..		—	2	2	—	4
S2/12		Binding clip (6 1/4" long) ... ..		6	7	7	—	4
<b>BONNET, WINGS AND FAIRINGS</b>								
2088		Front wing O/S (unpainted) Ceased Chassis No. J3437		1	—	—	14	6
2059		Ditto N/S (unpainted) Ceased Chassis No. J3437		1	—	—	14	6
2805		Ditto O/S (unpainted) Comm. Chassis No. J3438		1	—	—	2	2 6
2806		Ditto N/S (unpainted) Comm. Chassis No. J3438		1	—	—	2	2 6
1041		Ditto O/S (unpainted) ... ..		—	1	1	2	7 6
1042		Ditto N/S (unpainted) ... ..		—	1	1	2	7 6

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	No. Used			Price Each
			2-seater	4-seater	Saloon	
			£	s.	d.	
2425		Headlamp mounting bracket O/S				
		Ceased Chassis No. J3330	.1	--	--	6 0
2426		Ditto N/S ... Ceased Chassis No. J3330	1	--	--	6 0
1938		Headlamp tie bar (length to be cut to suit)	1	--	--	3 8
2444		Combined headlamp and wing stay bracket				
		O/S ... ..	1	--	--	16 8
2445		Ditto N/S ... ..	1	--	--	16 8
1940		Front wing rear stay O/S				
		Ceased Chassis No. J3437	1	--	--	8 6
1941		Ditto N/S ... Ceased Chassis No. J3437	1	--	--	8 6
1945		Bolt for front wing securing				
		Ceased Chassis No. J3437	4	--	--	10
318		Rubber packing for ditto				
		Ceased Chassis No. J3437	4	--	--	5
2803		Combined front wing stay and headlamp				
		bracket O/S Comm. Chassis No. J3591	1	--	--	16 0
2804		Ditto N/S ... Comm. Chassis No. J3591	1	--	--	16 0
2675		Rubber ferrule for front wing				
		Comm. Chassis No. J3438	2	--	--	1 1
1945		Bolt for front wing mounting				
		Comm. Chassis No. J3438	2	--	--	10
316		Rubber washer for ditto (internal) (domed)				
		Comm. Chassis No. J3438	2	--	--	4
1378		Distance washer for front wing bolt (steel)				
		Comm. Chassis No. J3591	2	--	--	9
2843		Distance washer for ditto (rubber) (internal,				
		flat) ... Comm. Chassis No. J3438	2	--	--	3
1064		Headlamp bracket O/S ... ..	--	1	1	4 0
1065		" " " " N/S ... ..	--	1	1	4 0
1127		Tie bar for ditto ... ..	--	1	1	2 9
1094		Distance washer for headlamp bracket ...	--	4	4	doz. 1 4
1070		Rubber packing for ditto ... ..	--	2	2	8
1093		Front wing rear stay O/S ... ..	--	1	1	2 2
1099		" " " " N/S ... ..	--	1	1	2 2
1899		Rear wing O/S (unpainted)				
		Ceased Chassis No. J3437	1	--	--	14 6
2060		Ditto N/S (unpainted)				
		Ceased Chassis No. J3437	1	--	--	14 6
2669		Ditto O/S (unpainted)				
		Comm. Chassis No. J3438	1	--	--	1 11 6
2670		Ditto N/S (unpainted)				
		Comm. Chassis No. J3438	1	--	--	1 11 6
2807		Rear wing tie bar O/S ] Originally made [	1	--	--	8 11
2808		" " " " N/S ] in 1 piece [	1	--	--	6 11
1945		Bolt for rear wing mounting ... ..	2	--	--	10
318		Rubber moulding for ditto ... ..	2	--	--	5
316		Rubber washer for ditto				
		Comm. Chassis No. J3438	2	--	--	4
815		Rubber buffer between wing and body				
		Comm. Chassis No. J3438	2	--	--	3
1178		Rear wing O/S (unpainted) ... ..	--	1	1	1 5 10
1179		" " " " N/S (unpainted) ... ..	--	1	1	1 5 10
2809		Running-board O/S Comm. Chassis No. J3438	1	--	--	1 1 0
2810		" " " " N/S Comm. Chassis No. J3438	1	--	--	1 1 0
2590		Step channelling for ditto (17" long)				
		Comm. Chassis No. J3438	6	--	--	2 4
2591		Rubber for ditto (17" long)				
		Comm. Chassis No. J3438	6	--	--	1 2
3071		Rubber moulding between wing and running-				
		board O/S ... Comm. Chassis No. J3438	1	--	--	1 4
3072		Ditto N/S ... Comm. Chassis No. J3438	1	--	--	1 4
2030		Front fairing (unpainted) ... ..	1	--	--	16 0
MG372		Front fairing fixing clip with bolt and nut	1	--	--	6 8
1100		Front fairing (unpainted) ... ..	--	1	1	17 4
1912		Side fairing (unpainted) O/S ... ..	1	--	--	16 9
1913		(unpainted) N/S ... ..	1	--	--	16 9
2053		" U " rubber for ditto (20" long) ... ..	1	--	--	5
S23/3		Rubber tape for ditto (36" long) ... ..	2	--	--	foot 4
2052		Draught excluder plate for side fairing	2	--	--	9
2053		" U " rubber for ditto (10" long) ... ..	2	--	--	3
1484		Rubber bushes for ditto ... ..	4	--	--	3
1983		Side fairing fixing bracket O/S ... ..	1	--	--	1 9
1985		" " " " N/S ... ..	1	--	--	1 9
1230		Side fairing O/S (unpainted) ... ..	--	1	1	8 7
1231		" " " " N/S (unpainted) ... ..	--	1	1	8 7

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each	Pa	
		2-seater	4-seater	Saloon			
					f	s	d.
S23/3	Rubber tape for ditto (30" long)	—	2	2	foot	4	1010
1485	Side fairing fixing bracket O/S	—	1	1		7	1011
1486	" " " " N/S	—	1	1		7	1388
1405	Front wing side fairing O/S	—	1	1		2 6	1017
1466	" " " " N/S	—	1	1		2 6	1880
1705	Rubber beading for ditto (8" long)	—	2	2		8	1380
1894	Bonnet (unpainted)	1	—	—		2 5 0	130
1129	" (unpainted)	—	1	1		2 0 0	130
259	Bonnet rod lug (rear)	1	1	1		8	130
2062	Bonnet hinge rod bracket	1	1	1		6	147
A311	Bonnet fastener complete	4	—	—		3 4	143
A202	" " " "	—	4	4		4 2	MG
1873	Bonnet fastener bracket (front) O/S	—	1	1		1 7	MG
1374	" " " " (front) N/S	—	1	1		1 7	
1550	" " " " (rear) O/S	—	1	1		1 8	102
1551	" " " " (rear) N/S	—	1	1		1 8	
B225/146	Bonnet rest O/S	1	—	—		8 6	130
B225/147	" " " " N/S	1	—	—		8 6	
B320/122	" " " " O/S	—	1	1		8 6	
B220/123	" " " " N/S	—	1	1		8 6	
S23/3	Tape for ditto (9' long)	1	1	1	foot	4	132
1931	Rain channel (under bonnet)	1	—	—		3 0	
1932	Support bracket for ditto	1	—	—		3	
419	Rubber washer for ditto	1	—	—		3	
1038	Rain channel (under bonnet)	—	1	1		3 0	131
<b>PROPELLER SHAFT SHROUD AND FITTINGS</b>							
1856	Propeller shaft shroud	1	—	—		1 0 8	132
1037	" " " "	—	1	1		1 3 0	132
1223	Bottom plate for ditto	1	1	1		3 11	132
1438	Platform for ditto	2	2	2		1 4	132
979	Support bracket for ditto (rear)	1	1	1		2 7	132
1001	" U " clip for ditto	1	1	1		4	132
1211	Support bracket for ditto (front)	1	1	1		3 0	132
1212	" U " clip for ditto	1	1	1		6	132
1174	Footwell	—	1	1		9 10	132
1436	Angle plate for ditto (front)	—	2	2		4	132
1437	" " " " (rear)	—	2	2		4	132
<b>BODY MOUNTING BRACKETS</b>							
1002	Body bracket (rear) (on cross tube)	2	2	2		8	132
979	Support for ditto	2	2	2		2 7	132
1001	" U " clip for ditto	2	2	2		4	132
2931	Body bracket (front) O/S (on cross tube)	1	1	1		5	132
2932	" " " " (front) N/S (on cross tube)	1	1	1		5	132
1211	Support for ditto	2	2	2		3 0	132
1212	" U " clip for ditto	2	2	2		6	132
1587	Body bracket (front)	—	2	2		10	132
1929	" " " " (rear)	2	2	2		1 2	132
1930	Backing plate for ditto	2	2	2		6	132
1408	Plates for body mounting (rear) (with bolts)	—	4	4		7	132
1897	Body to dash tie bar	2	—	—		5 4	132
<b>SPARE WHEEL CARRIER DETAILS</b>							
MG424	Spare wheel carrier	1	—	—		2 15 0	132
MG497/102	M.G. medallion for ditto	1	—	—		5 0	132
1968	Thumb nut	1	—	—		5 4	132
1916	Distance tube for ditto	1	—	—		3	132
1915	Top fixing bracket for spare wheel carrier (on body)	1	—	—		5 4	132
1896	Bottom fixing bracket for spare wheel carrier (on frame)	2	—	—		2 9	132
361	Dome nut (C.P.) for securing carrier to body	2	—	—		6	132
1904	Rubber packing between petrol tank and spare wheel carrier (26" long)	2	—	—		10	132
P309	Spare wheel centre assembly	1	—	—		7 0	132
1972	Rubber buffer for ditto	1	—	—		1 4	132
B220/110	Spare wheel block	—	1	—		11 0	132
1193	Spare wheel hub	—	1	—		13 0	132
1194	Spare wheel lock nut and sleeve	—	1	—		14 0	132
P316	Spare wheel carrier assembly (single wheel)	—	—	1		2 7 4	132
1620	Spare wheel carrier bracket	—	—	1		2 6	132
1322	Spare wheel carrier distance tube	—	—	1		8	132
1619	Spare wheel carrier support channel (single wheel)	—	—	1		10 10	132

Please Quote Chassis, Engine and Body Numbers in all Correspondence

4  
7  
6  
8  
8  
0  
0  
8  
6  
4  
2  
7  
7  
3  
3  
3  
3  
1

Part No.	DESCRIPTION	No. Used			Price Each
		2-seater	4-seater	Saloon	
1616	Spare wheel carrier wing nut	---	---	1	5 4
1615	Spare wheel carrier tie bar	---	---	1	8 6
1384	Spare wheel carrier trough	---	---	1	3 8
1617	Spare wheel carrier tyre clip	---	---	1	8 6
1386	Spare wheel top support tie rod	---	---	1	4 9
1389	Securing bracket for ditto (on body) N/S	---	---	1	2 1
1391	Nut for spare wheel top support tie rod	---	---	2	4 4
1392	Spare wheel carrier trough support bracket	---	---	1	1 7
1395	Spare wheel carrier special washer for tie bar	---	---	1	3 6
1479	Spare wheel carrier trough clip	---	---	1	8 6
1455	Spare wheel carrier rubber bush (on body)	---	---	1	6 6
MG465	<b>Spare wheel centre assembly</b>	---	---	1	7 0
MG372/102	M.G. medallion for spare wheel centre assembly	---	---	1	1 0
1621	Spare wheel carrier support channel (two wheels)	---	---	1	12 6
1390	Spare wheel securing bracket for top support tie rod O/S	---	---	1	2 1
<b>BODY DETAILS (2-SEATER)</b>					
B225	Body complete	1	---	---	Price on application
<b>DOORS, LOCKS AND HINGES</b>					
B128/176	Door hinge O/S (top)	4	---	---	3 0
B225/140	" " O/S (bottom)	1	---	---	3 0
B128/174	" " N/S (top)	1	---	---	3 0
B225/138	" " N/S (bottom)	1	---	---	3 0
B225/143	Door lock O/S (Mulliner)	1	---	---	9 6
B225/144	" " N/S (Mulliner)	1	---	---	9 6
B225/101	" " O/S (Carbodies)	1	---	---	9 6
B225/142	" " N/S (Carbodies)	1	---	---	9 6
B225/125	Door lock catch plate (Mulliner)	2	---	---	3 6
B225/108	" " " (Carbodies)	2	---	---	3 6
B225/121	Door handle (Mulliner)	2	---	---	5 0
B225/119	" " O/S (Carbodies)	1	---	---	5 0
B225/120	" " N/S (Carbodies)	1	---	---	5 0
B225/148	Door check strap (7")	2	---	---	2 0
B220/193	Side curtain sockets	4	---	---	1 4
<b>SEATS AND FITTINGS</b>					
B225/133	Rear squab complete less tonneau cover	1	---	---	2 17 0
B128/181	Squab adjusting screw and knob (top)	2	---	---	1 6
B220/177	Squab adjusting plate (top)	2	---	---	1 0
B225/176	Squab adjusting peg (bottom)	2	---	---	3 4
B225/177	Squab adjusting bottom rack	2	---	---	8 8
B225/171	Seat cushion O/S	1	---	---	1 7 0
B225/172	" " N/S	1	---	---	1 7 0
B225/115	Air bag for seat cushion	2	---	---	15 0
B225/103	Tonneau cover	1	---	---	1 12 0
<b>FLOORBOARDS AND CARPETS</b>					
B225/162	Floorboards O/S	1	---	---	1 3 0
B225/163	" " N/S	1	---	---	1 3 0
B225/136	Carpet (propeller shaft shroud cover)	1	---	---	13 4
B225/118	" (front) (with mat)	1	---	---	2 2 0
2707	Leather cover for speedometer reduction gear	1	---	---	5 4
B220/155	Passenger foot rest with rubber mat	1	---	---	9 0
B220/169	Rubber mat for ditto and carpet	2	---	---	2 0
<b>FACIA PANEL AND WINDSCREEN DETAILS</b>					
B225/141	Facia panel (drilled)	1	---	---	1 5 0
B225/1	<b>Windscreen complete (1933, drilled for suction wiper)</b>	1	---	---	7 2 6
B225/2	Windscreen frame complete less glass	1	---	---	4 15 0
B225/173	Windscreen frame (bare)	1	---	---	2 10 0
B225/116	Windscreen side support O/S	1	---	---	1 0 0
B225/117	" " N/S	1	---	---	1 0 0
B225/10	<b>Windscreen complete (1933, with strengthened supports)</b>	1	---	---	7 2 6
B225/11	Windscreen frame complete less glass	1	---	---	4 15 0
B225/174	Windscreen frame (bare)	1	---	---	2 10 0

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each
		2-seater	4-seater	Saloon	
B225/12	<b>Windscreen complete (1934, electric wiper with flat for exterior mirror)</b> ... ..	1	---	---	7 2 6
B225/3	Windscreen frame complete less glass ... ..	1	---	---	4 15 0
B225/175	Windscreen frame (bare) ... ..	1	---	---	2 10 0
B225/158	Windscreen side support O/S (top) ... ..	1	---	---	15 0 0
B225/156	" " " N/S (top) ... ..	1	---	---	15 0 0
B225/159	" " " O/S (bottom) ... ..	1	---	---	15 0 0
B225/169	" " " O/S (bottom) (with flat for exterior mirror) ... ..	1	---	---	15 0 0
B225/157	Ditto N/S (bottom) ... ..	1	---	---	15 0 0
B220/160	Windscreen ratchet (used only with B225/1 and B225/10) ... ..	2	---	---	7 6 0
B225/181	Windscreen ratchet (used with B225/12) ... ..	2	---	---	7 6 0
B220/161	Spring for ditto ... ..	2	---	---	6 6 0
B220/162	Adjusting fly screw ... ..	2	---	---	6 0 0
B225/100	Windscreen glass ... ..	1	---	---	2 7 6
B225/123	Windscreen rubber surround ... ..	1	---	---	4 9 0
<b>HOOD AND SIDE CURTAINS</b>					
B225/113	Hood frame ... ..	1	---	---	2 0 0
B225/160	Hood frame fulcrum bracket (on body) ... ..	2	---	---	3 6 0
B225/112	Hood canopy (for suction wiper) ... ..	1	---	---	2 6 0
B225 168	" " (for electric wiper) ... ..	1	---	---	2 6 0
B225 13	Side curtain O/S (complete) ... ..	1	---	---	1 1 0
B225 14	" " N/S (complete) ... ..	1	---	---	1 1 0
B220/157	Side curtain feet ... ..	4	---	---	1 0 0
B225/127	Curtain flap O/S ... ..	1	---	---	7 6 0
B225/130	" " N/S ... ..	1	---	---	7 6 0
<b>BODY DETAILS (4-SEATER)</b>					
B221	Body complete ... ..	---	1	---	Price on application
<b>DOORS, LOCKS AND HINGES</b>					
B220/145	Door hinge O/S ... ..	---	2	---	2 6 0
B220/146	" " N/S ... ..	---	2	---	2 6 0
B220/129	Door lock O/S ... ..	---	1	---	3 3 0
B220/130	" " N/S ... ..	---	1	---	3 3 0
B220/120	Door handle O/S ... ..	---	1	---	5 0 0
B220/121	" " N/S ... ..	---	1	---	5 0 0
B220/178	Door check strap ... ..	---	2	---	2 0 0
B220/194	Side curtain sockets ... ..	---	4	---	1 4 0
<b>SEATS AND FITTINGS</b>					
B220/100	Bucket seat O/S ... ..	---	1	---	3 0 0
B220/150	" " N/S ... ..	---	1	---	3 0 0
B220/101	Cushion for ditto less air bag ... ..	---	2	---	1 5 0
B220/147	Air bag for ditto ... ..	---	2	---	15 0 0
B220/112	Seat adjusting plate ... ..	---	4	---	1 0 0
B220/113	Wing stud for ditto ... ..	---	4	---	1 6 0
B220/103	Rear seat squab ... ..	---	1	---	1 5 0
B220/140	Rear seat pan ... ..	---	1	---	1 15 0
B220/102	Rear seat cushion less air bags ... ..	---	1	---	3 0 0
B220/148	Air bag for ditto ... ..	---	2	---	15 0 0
<b>FLOORBOARDS AND CARPETS</b>					
B221/011	Floorboard (large) O/S ... ..	---	1	---	7 0 0
B221/102	" (large) N/S ... ..	---	1	---	7 0 0
B220/118	" (small) O/S ... ..	---	1	---	5 0 0
B220/119	" (small) N/S ... ..	---	1	---	5 0 0
B220/104	Front carpet O/S ... ..	---	1	---	9 0 0
B220/105	" " N/S ... ..	---	1	---	9 0 0
B221/100	Centre carpet ... ..	---	1	---	7 0 0
B220/107	Foot well carpet ... ..	---	1	---	7 0 0
B220/108	Heel board carpet ... ..	---	1	---	6 0 0
B220/155	Passenger foot slope with rubber mat ... ..	---	1	---	9 0 0
B220/109	Rubber mat ... ..	---	2	---	2 0 0
<b>FACIA PANEL AND WINDSCREEN</b>					
B220/143	Facia panel ... ..	---	1	---	2 0 0
B220/1	Windscreen complete with glass ... ..	---	1	---	8 13 9
B220/2	Windscreen frame complete less glass ... ..	---	1	---	6 15 0
B220/142	Windscreen frame ... ..	---	1	---	3 10 0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Price Each  
d.

No. Used

7 2 6  
4 15 0  
2 10 0  
15 0  
15 0  
15 0  
15 0  
15 0  
15 0  
7 6  
7 6  
6 6  
6 0  
7 6  
4 9  
0 0  
3 6  
6 0  
6 0  
1 0  
1 0  
1 0  
7 6  
7 6

Price on application

3 3  
3 3  
5 0  
5 0  
2 0  
1 4

0 0  
0 0  
5 0  
5 0  
1 0  
1 6  
5 0  
5 0  
3 0  
5 0

0  
0  
0  
0  
0  
0  
0  
0  
0  
0  
0  
0

0  
9

Part No.	DESCRIPTION	2-seater	4-seater	Saloon	Price Each l s d.
B220/158	Windscreen side support (top) O/S ...	1			15 0
B220/179	" " " (top) N/S ...	1			15 0
B220/159	" " " (bottom) O/S ...	1			15 0
B220/180	" " " (bottom) N/S ...	1			15 0
B220/141	Windscreen glass ...	1			1 18 9
B220/160	Windscreen ratchet ...	2			7 6
B220/161	Windscreen ratchet spring ...	2			6
B220/162	Windscreen adjusting fly screw ...	2			6 0
<b>HOOD AND SIDESCREENS</b>					
B221/118	Hood frame complete ...	1			2 3 0
B224/126	Hood frame securing bracket on body ...	2			2 3
B221/105	Hood canopy ...	1			2 10 0
B220/138	Hood to screen attachment bracket ...	2			4 6
B220/172	Wing screw for ditto ...	2			2 6
B220/137	Hood straps ...	2			2 0
B224/120	Staples for ditto ...	2			1 0
B220/134	Hood rest (rear) O/S ...	1			7 0
B220/135	" " (rear) N/S ...	1			7 0
B221/106	Hood envelope ...	1			15 0
B221/103	Side curtain (front) O/S (complete) ...	1			1 1 0
B221/104	" " (front) N/S (complete) ...	1			1 1 0
B220/127	Rear side curtain O/S ...	1			11 0
B220/128	" " " N/S ...	1			11 0
B128/120	Boot lid lock ...	1			2 0
B128/113	Key for ditto ...	1			1 0
B128/121	Escutcheon for ditto ...	1			1 6
<b>BODY DETAILS (SALOON)</b>					
B222	Body complete ...			1	Price on application
<b>DOORS, LOCKS AND HINGES</b>					
B222/121	Door hinge O/S ...			2	6 0
B222/122	" " N/S ...			2	6 0
B222/146	Door lock O/S ...			1	15 6
B222/147	" " N/S ...			1	15 6
B220/120	Door handle O/S ...			1	5 0
B222/1	" " N/S (with lock and key) ...			1	15 0
B222/108	Door check strap ...			2	2 0
B220/124	Door-rubber buffer ...			2	1 0
<b>SEATS AND CUSHIONS</b>					
B222/100	Bucket seat O/S ...			1	3 0 0
B222/110	" " N/S ...			1	3 0 0
B220/101	Cushion for ditto with air bag ...			2	1 5 0
B220/147	Air bag for ditto ...			2	15 0
B220/112	Seat adjusting plate ...			4	1 0
B220/113	Wing stud for ditto ...			4	1 6
B222/101	Rear seat squab ...			1	1 5 0
B220/140	Rear seat pan ...			1	1 15 0
B220/102	Rear seat cushion ...			1	3 0 0
B220/148	Air bag for ditto ...			2	15 0
<b>FLOORBOARDS AND CARPETS</b>					
B222/102	Floorboard (large) O/S ...			1	7 0
B222/103	" (large) N/S ...			1	7 0
B220/118	" (small) O/S ...			1	5 0
B220/119	" (small) N/S ...			1	5 0
B220/104	Front carpet O/S ...			1	9 0
B220/105	" " N/S ...			1	9 0
B221/100	Centre carpet ...			1	7 0
B220/107	Foot well carpet ...			1	7 0
B220/108	Heel board carpet ...			1	6 0
B220/155	Passenger foot slope with rubber mat ...			1	9 0
B220/109	Rubber mat ...			2	2 0
<b>FACIA PANEL, WINDSCREEN AND DOOR GLASSES</b>					
B222/118	Facia panel (drilled) ...			1	2 10 0
B222/7	Windscreen complete with glass ...			1	8 16 3
B222/112	Windscreen frame less glass ...			1	6 15 0
B222/111	Windscreen glass ...			1	2 1 3

Please specify Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
13222/123	Door glass (front) (sliding type) ...	...	...	2	1	4	10
13222/115	" " (rear) ...	...	...	2	1	3	5
13222/117	Rear light glass ...	...	...	1	1	6	7
13222/4	Rear window blind (complete) ...	...	...	1	1	5	0
<b>SLIDING ROOF DETAILS</b>							
13222/107	Sliding roof channel (interior) ...	...	...	2	10	0	0
13222/152	" " " (exterior) O/S ...	...	...	1	5	0	0
13222/154	" " " (exterior) N/S ...	...	...	1	5	0	0
13222/5	Sliding roof lock (complete) ...	...	...	2	10	0	0
13222/106	Sliding roof handle ...	...	...	1	1	0	0
13222/6	Roof-lamp (complete) ...	...	...	1	8	0	0
<b>LUGGAGE CARRIER DETAILS</b>							
P307	Luggage carrier assembly ...	...	...	1	1	12	0
1418	Slide fitting in flap for support arm N/S ...	...	...	1	3	6	
1419	Ditto O/S ...	...	...	1	3	6	
1420	Luggage carrier support arm ...	...	...	2	5	6	
1421	Wing nut for ditto ...	...	...	2	1	8	
1422	Grub screw for ditto ...	...	...	2	3		
1424	Support clip on flap for arm ...	...	...	2	3		
1426	Hinge on body N/S ...	...	...	1	1	6	
1431	Hinge on flap N/S ...	...	...	1	1	3	
1427	Hinge on body O/S ...	...	...	1	1	6	
1432	Hinge on flap O/S ...	...	...	1	1	3	
1430	Swivel pin bracket for hinge ...	...	...	2	1	10	
1423	Bottom fixing block for support arm ...	...	...	2	3	11	
1425	Body fixing bracket for ditto ...	...	...	2	4		
1439	Stud for ditto ...	...	...	4	3		
B128/120	Lock for luggage carrier panel ...	...	...	2	2	0	
B128/121	Escutcheon for ditto ...	...	...	2	1	6	
B128/113	Key for ditto ...	...	...	1	1	0	
<b>TOOL KIT</b>							
13220/139	Toolbox ...	...	...	1	15	0	
13220/139	Toolbox ...	...	...	1	15	0	
P330/100	Tool roll ...	...	...	1	4	0	
P330/101	Screwdriver (10") ...	...	...	1	1	6	
P330/103	Adjustable spanner ...	...	...	1	2	8	
P330/104	Pliers (6" pair) ...	...	...	1	1	0	
2867	Tappet spanner with .006" feeler gauge ...	...	...	1	1	0	
P330/113	Spanner (1 1/8" x 3/16") (double-ended) ...	...	...	1	1	6	
P330/114	" (1 1/8" x 7/16") (double-ended) ...	...	...	1	10		
P330/115	" (1 1/8" x 7/16") (double-ended) ...	...	...	1	1	3	
1733	Contact breaker spanner ...	...	...	1	1	6	
1734	Grease gun ...	...	...	1	10	6	
1735	Tyre pump ...	...	...	1	7	0	
1736	Jack (with handle) ...	...	...	1	1	0	
1401	Starting handle ...	...	...	1	3	8	
P330/117	Hammer for Rudge hubs ...	...	...	1	6	6	
1182	Special engine spanner ...	...	...	1	1	6	
A288	Grease gun ...	...	...	1	6	0	
1892	Plug spanner ...	...	...	1	1	3	
1959	Spanner (1 1/8" Whit.) ...	...	...	1	10		
2801	Box spanner (1 1/8" Whit.) ...	...	...	1	11		
2802	" " (1 1/16" Whit.) ...	...	...	1	1	3	
2860	Tommy bar for ditto ...	...	...	1	2		

Please Quote Chassis, Engine and Body Numbers in all Correspondence