



Price 1/6

List of Spare Parts
for
The M.G. Magna

The M.G. Car Company Ltd.
Abingdon-on-Thames
Berks

Phone : 251 Abingdon (3 lines). Wire : "Emgee, Abingdon."

ALL PREVIOUS LISTS CANCELLED.

It is absolutely essential, when ordering parts, that the CHASSIS NUMBER is quoted.

The Company only fits the highest grade and best-known proprietary fitments, but it gives no guarantee whatsoever in respect of tyres, lamps, magnetoes, electrical equipment, speedometers, clocks, or any other proprietary fittings of any type supplied with its car or otherwise inasmuch as such proprietary fittings are usually covered by a guarantee issued by their respective manufacturers.

All questions involving the replacement or repair of any such proprietary fittings should, therefore, be taken up direct with the manufacturers concerned, and not with The M.G. Car Company Ltd.

All proprietary fitments are subject to special discounts.

Revised June, 1932.

List of Spare Parts for the M.G. Magna.

CHASSIS FRAME ASSEMBLY AND DETAILS.

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P257	Chassis Frame Assembly comprising 2 Side Members, 5 Cross Tube Assemblies, 2 Front and 2 Rear Dumb Irons, 2 Front Sliding Trunnion Brackets and 2 Rear Spring Suspension Pins (7' 10" Wheel Base)	1	1	9	17	6
953	Side Member O.S.	1	1	1	6	11
954	" " N.S.	1	1	1	6	11
623	Front Dumb Iron O.S.	1	1		5	10
624	" " " N.S.	1	1		5	10
625	Taper Washers	2	2			4
626	Front Sliding Trunnion Bracket O.S.	1	1	10		1
627	" " " " N.S.	1	1	10		1
632	Cover for Front Sliding Trun. Brkt.	2	2	1		7
633	Front Sliding Trunnion Roller	2	2	3		8
P232/1	Front Cross Tube Assembly	1	1	7		6
634	Front Cross Tube	1	1	3		2
635	" " " Bushes	2	2	1		1
P232/2	Engine Bearer Cross Tube Assembly	1	1	1	5	7
636	Front Engine Mounting	1	1	2		11
637	" " " Cap	1	1	2		0
638	" " " Bolts	2	2			11
639	Steering Box Bracket	1	1	3		6
640	Bracket for Cross Tube	2	2	2		6
641	Engine Bearer Cross Tube	1	1	4		0
P233/3	Third Cross Tube Assembly	1	1	14		4
923	Third Cross Tube	1	1	4		4
640	Bracket for Cross Tube	2	2	2		6
827	Brake Cross Shaft Stdy. Brkt. (Fixed)	1	1	2		9
921	Combined Cross Tube End Bracket and Brake Cross Shaft Support	2	2	4		10
P232/4	Rear Spring Front Cross Tube Assy.	1	1	1	3	0
643	Cross Tube	1	1	5		0
640	Bracket for Cross Tube	1	1	2		6
806	Rear Spring Front Suspension Pin	2	2	5		4
P233/5	" Cross Tube Assembly	1	1	2	3	0
832	" Dumb Iron	2	2	3		8
647	" Cross Tube	1	1	5		9
819	" Sliding Trunnion Roller	2	2	3		8
820	Washer for Rear Sliding Trunnion	2	2			6
872	Cap for Rear Cross Tube	2	2	4		9
873	Distance Piece for Rear Cross Tube	2	2			11
795	Rear Engine Bearer Bracket	2	2	2		9
828	Bush for Engine Mounting	2	2			4
804	Rubber Buffer and Plate	2	2	1		7
805	Backing Plate for ditto	2	2			4
815	Rear Striking Pad	2	2			3
817	Setscrew for ditto	2	2	doz.	2	0

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
874	Combined Greaser and Setscrew	2	2			10
893	Brake Pedal Bracket ceased Ch. Fo395	1	1	9	3	
1367	" " " comm. Ch. Fo396	1	1	9	3	
1002	Body Bracket	4	4			8
979	" " Support (Short)	2	2	2	7	
1211	" " " (Long)	2	2	3	0	
1001	' U ' Clip for Body Bracket (Short)	2	2			4
1212	" " " (Long)	2	2			6
1039	Battery Carrier	1	1	5	4	
1229	Shock Absorber Tie Bar	1	1	2	2	
1587	Front Body Bracket	2	2			10
	comm. Ch. No. Fo600					

FRONT AXLE ASSEMBLY AND SPRINGS.

P234	Front Axle Assembly less Springs and Wheels	1	1	12	17	6
P234/100	Front Axle Beam	1	1	2	6	6
P101/105	Steering Knuckle O.S.	1	1	1	2	6
P101/106	" " N.S.	1	1	1	2	6
P101/101	" " Bolt	2	2	6	6	
P101/113	" " " Slotted Nut O.S.	1	1	1	0	
P101/114	" " " " " N.S.	1	1	1	0	
P101/115	" " Washer	2	2	doz.		9
P101/109	" " Distance Washer	2	2		1	0
P101/107	" " Bush Top	2	2		2	8
P101/149	" " " Bottom	2	2		2	6
PX101/6	" " Disc for Top Bush	2	2	doz.	1	0
P101/102	" " Bolt Cotter	2	2			5
P101/104	" " " Thrustwasher	2	2		1	3
P234/104	Front Hub O.S. Rudge Whit.	1	1		14	6
P234/105	" " N.S. " "	1	1		14	6
P234/103	" " Stud	12	12			9
PX234/1	" " " Nuts	12	12	doz.		10
P101/116	" " Bearing (Large)	2	2		10	6
P101/117	" " " (Small)	2	2		10	9
P101/110	" " " Distance Piece	2	2		1	0
P101/118	" " Felt Washer	2	2			3
P234/1	Brake Drum Assembly	2	2	1	5	5
P101/152	" " Anchor Bracket with Bearings	2	2		5	6
P101/125	" " Shoe	4	4			
	ceased Axle No. 54/737					
P101/126	" " Link	8	8		7	6
	ceased Axle No. 54/737					
P101/127	" " Plate	4	4			
	ceased Axle No. 54/737					
P234/108	" " Lining	4	4		3	0
	ceased Axle No. 54/737					
P101/134	" " " Rivets	32	32	doz.		5
P234/4	" " Shoe with Links and Plates	4	4		7	6
	comm. Axle No. 54/738					
P234/110	" " Lining (Ferodo M.R.)	4	4		3	0
	comm. Axle No. 54/738					
P234/111	" " Lining Rivets	32	32	doz.		5
	comm. Axle No. 54/738					
P101/129	" " Spring	4	4			4

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
574	Vibration Damper Weight	4	4	2	0	
575	" " " Spring	8	8		3	
576	" " " Clevis Pin	8	8		3	
P101/120	Brake Cam	2	2	8	6	
P101/124	" " Lever	2	2	4	4	
P101/123	" " Fulcrum Pin	2	2	2	6	
P101/133	Brake Cam Fulcrum Pin Nut	2	2		3	
P101/132	" " Bush	4	4	2	4	
P101/121	" " Washer (Inner)	2	2	doz.	9	
P101/122	" " " (Outer)	2	2	doz.	9	
P101/3	Track Rod Assembly	1	1	18	6	
P101/135	" " Tube	1	1	6	0	
P234/101	" " Lever N.S.	1	1	9	4	
P234/102	" " " O.S.	1	1	9	4	
P101/136	Locknut R.H.T. for Track Rod and Draglink	2	2		4	
P101/137	Locknut L.H.T. for Track Rod and Draglink	2	2		4	
P101/140	Adj. End R.H.T. for Track Rod only	1	1	5	6	
P101/141	" " L.H.T. for Track Rod and Draglink	2	2	5	6	
P102/102	Adj. End R.H.T. for Draglink only	1	1	5	6	
P101/138	Steering Ball for Track Rod & Draglk	4	4	2	0	
P101/139	" " Nut " " "	4	4		4	
P101/142	" " Cup " " "	4	4		10	
P101/143	End Cup for Ball Joint on Track Rod	2	2	1	0	
P102/105	" " " " " Draglink	1	1	1	0	
P101/143	" " " " " (Sm.)	1	1	1	0	
P101/144	Spring for Ball Joint on Track Rod and Draglink	4	4		3	
P102/106	End Plug for Ball Joint	1	1		3	
P235	Draglink Assembly	1	1	17	2	
P235/100	" Tube	1	1	5	0	
P101/145	Plug for Ball Joint Trk Rod & Draglk	4	4	1	3	
P236	Front Spring O.S. & N.S.					
	ceased Ch. F0521	2	2	1	5	0
P236/100	" " Top Leaf	2	2	4	2	
P236/101	" " 2nd Leaf	2	2	4	7	
P236/102	" " 3rd or Main Leaf	2	2	7	0	
P236/103	" " 4th Leaf	2	2	3	9	
P236/104	" " 5th Leaf	2	2	3	8	
P236/105	" " 6th Leaf	2	2	3	6	
P236/106	" " 7th Leaf	2	2	3	2	
1045	Front Sh. Absorb. Brkt. O.S.	1	1	4	2	
	ceased Ch. F0521					
1046	Front Sh. Absorb. Brkt. N.S.	1	1	4	2	
	ceased Ch. F0521					
1190	Front Spring Bottom Plate	2	2	1	6	
101	Bolts for Front Spring Plate	8	8		8	
801	Front Spring Suspension Pin	2	2	2	5	
802	" " " Tab Washer	2	2		4	
803	" " Rubber Dust Excluder	2	2	1	0	
882	Brake Cable Stop Bracket	2	2		4	
P313	Front Spring O.S. & N.S.	2	2	1	8	0
	comm. Ch. F0522					

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1552	Front Sh. Absorb. Bracket O.S. comm. Ch. F0522	1	1		4	2
1553	Front Sh. Absorb. Bracket N.S. comm. Ch. F0522	1	1		4	2
1629	Stauffer Grease Cup for Br. Cam Lever comm. Ch. F0746	2	2			9

REAR AXLE ASSEMBLY, PROPELLER SHAFT AND SPRINGS.

P275	Rear Axle Assembly less Springs and Wheels	1	1	23	0	6
P238/100	" " Casing	1	1	3	1	4
P238/110	" " Rear Cover	1	1	7	9	
P238/108	" " " " Oil Filler	1	1			
P238/109	" " " " " " Adaptor Ring	1	1			
P105/117	" " Oil Filler Plug	1	1		1	2
PX105/9	" " " " Washer	1	1	doz.	1	0
PX105/11	" " Taper Drain Plug	1	1			4
P105/133	" " Front Cover	1	1	1	13	4
P105/163	" " Front and Rear Cover Gasket	2	2			4
PX105/1	" " Front Cover Screws (Short)	6	6	doz.	1	3
PX105/2	" " " " " (Long)	2	2	doz.	1	3
PX105/7	" " Rear Cover Screws	8	8			3
PX105/10	" " Spring Packing Washer for Cover Screws	8	8	doz.		11
P105/157	" " Dowel	8	8			3
P105/111	" " Shaft	2	2		19	6
P105/102	" " Spring Pad	2	2		11	4
P105/141	Differential Case N.S.	1	1	1	0	4
P105/142	" " O.S.	1	1		18	4
P105/124	" " Bolt	6	6			10
P105/116	" " " " Castle Nut	6	6			3
P105/106	" " Bearing	2	2		14	3
P105/107	" " Lockwasher	2	2			3
P105/143	" " Nut	2	2		1	9
P105/134	" " Cap	2	2		6	2
P105/125	" " " " Stud	4	4			3
P275/104	" " ceased Axle No. 54/600 Bearing Cap Stud	4	4			3
P101/139	" " Bearing Cap Castle Nut	4	4			3
P105/120	" " Wheel	2	2		13	6
P105/121	" " Pinion	2	2		7	4
P105/122	" " Pin	1	1		1	0
P105/123	" " Dowel	1	1	doz.		9
P275/100	Crown Wheel ceased Axle No. 54/834	1	1	2	9	2
P275/101	Bevel Pinion ceased Axle No. 54/834	1	1			
P275/106	Crown Wheel (Single Side Cutting) comm. Axle No. 54/835	1	1			
P275/107	Bevel Pinion (Single Side Cutting) comm. Axle No. 54/835	1	1	2	9	2
P105/131	" " Bearing	1	1		13	3

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
PX105/6	Bevel Pinion Roller Bearing	1	1	18	6	
P105/137	" " Washer	1	1		5	
P105/174	" " Bearing Distance Wshr.	1	1	1	0	
P105/103	" " Shims .003"	as requ'd.			3	
P105/104	" " " .005"	as requ'd.			3	
P105/105	" " " .007"	as requ'd.			3	
P105/129	" " Housing	1	1	16	4	
P275/102	" " " Packing Piece	1	1	2	0	
PX105/5	" " " Spring Ring	1	1		7	
P105/126	" " " Stud	4	4		3	
P105/135	" " " Cap	1	1	7	9	
P105/127	" " " " Screw	2	2		3	
P234/1	Brake Drum Assembly	2	2	1	5	5
P101/152	" Anchor Bracket with Bearings	2	2		5	6
P101/125	" Shoe	4	4	}	7	6
	ceased Axle No. 54/737					
P101/126	" " Link	8	8			
	ceased Axle No. 54/737					
P101/127	" " Plate	4	4			
	ceased Axle No. 54/737					
P234/4	" Shoe with Links and Plate	4	4		7	6
	comm. Axle No. 54/738					
P234/108	Brake Shoe Lining	4	4		3	0
	ceased Axle No. 54/737					
P101/129	" " Spring	4	4		4	
P101/134	" " Lining Rivets	3 ²	3 ²	doz.		5
	ceased Axle No. 54/737					
P234/110	" " Lining (Ferodo M.R.)	4	4		3	0
	comm. Axle No. 54/738					
P234/111	" " Lining Rivets	3 ²	3 ²	doz.		5
	comm. Axle No. 54/738					
574	Vibration Damper Weight	4	4		2	0
575	" " " Spring	8	8		3	
576	" " " Clevis Pin	8	8		3	
P101/120	Brake Cam	2	2		8	6
P101/124	" " Lever	2	2		4	4
PX105/14	" " " Bolt	2	2		3	
P101/123	" " Fulcrum Pin	2	2		2	6
P101/133	" " " Slotted Nut	2	2		3	
PX101/4	" " Key (No. 3 Woodruff)	2	2		3	
P101/132	" " Bush	4	4		2	4
P101/121	" " Washer (Inner)	2	2	doz.		9
P101/122	" " " (Outer)	2	2	doz.		9
P238/104	Rear Hub N.S. Rudge Whitworth	1	1		14	6
P238/103	" " O.S. " "	1	1		14	6
P238/105	" " Studs	12	12		9	
PX234/1	" " " Nuts	12	12	doz.		10
P275/103	" " Ball Bearing Double Row	2	2	1	4	0
P105/158	" " " Nut O.S.	1	1		1	10
P105/159	" " " " N.S.	1	1		1	10
P238/2	" " Bearing Housing					
	Assembly with Studs	2	2		11	6
P238/106	" " Bearing Housing	2	2		9	10
P105/113	" " " Lockwasher	2	2		3	
P105/114	" " Oil Retaining Felt	2	2		1	2

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P105/115	Rear Hub Oil Retaining Felt Washer	2	2			3
A240	Propeller Shaft (Hardy Spicer)	1	1	2	3	4
P238/100	" " Flange (Axle End)	1	1		9	4
811	" " Bolts	12	12			4
PX105/13	" " Washer	1	1			3
PX105/12	" " Slotted Nut	1	1			3
809	Washer for Rear Spring Suspensn. Pin	2	2			6
810	Radius Washer for ditto	2	2			6
812	Rear Spring 'U' Clip	4	4			11
1364	Rear Axle Spring Pad & Steady Brkt.	2	2	7	0	
814	Rear Axle Strap	2	2	1	5	
816	" " Rubber Block	2	2	1	0	
P237	Rear Spring O.S. and N.S.	2	2	1	10	0
P237/100	" " Top Leaf	2	2	4	6	
P237/101	" " 2nd Leaf	2	2	5	0	
P237/102	" " 3rd or Main Leaf	2	2	7	6	
P237/103	" " 4th Leaf	2	2	4	3	
P237/104	" " 5th Leaf	2	2	4	3	
P237/105	" " 6th Leaf	2	2	3	11	
P237/106	" " 7th Leaf	2	2	3	8	
P237/107	" " 8th Leaf	2	2	3	4	
P237/108	" " 9th Leaf	2	2	3	2	
936	Rear Sh. Absorber Brkt. O.S. & N.S.	2	2	4	2	
1054	Rear Spring Top Plate	2	2	2	4	
818	Rubber Dust Excluder for Rr. Spring	2	2	1	2	
882	Brake Cable Stop Bracket	2	2			4
1629	Stauffer Grease Cup for Br. Cam Lever	2	2			9
	comm. Ch. F0746					

POWER UNIT.

P287	Power Unit complete with Gearbox	1	1	115	0	0
------	----------------------------------	---	---	-----	---	---

CRANKCASE AND CYLINDER HEAD

P287/100	Cylinder Block Studded	1	1	7	14	0
1235	Engine Shield O.S.	1	1		13	0
1236	" " N.S.	1	1		10	8
P287/102	Cylinder Jacket Cover Plate (Front)	1	1		1	0
P287/103	" " " " (Rear)					
	complete with Flange	1	1	2	6	
PX287/5	Stud for Flange	2	2	doz.	1	6
PX105/3	" Nut	2	2	doz.	1	3
1376	Cylinder Jacket Cover Plate Gasket	4	4			6
PX110/1	" " " " Setscrews	20	20			3
PX110/5	" " " " Washers	20	20	doz.		4
P287/1	Cylinder Head Assembly	1	1	19	10	0
	ceased Eng. 1585					
P287/140	Cylinder Head Studded	1	1	6	15	0
	ceased Eng. 1585					
P287/5	" " Assembly	1	1	19	10	0
	comm. Eng. 1586					
P287/194	" Head	1	1	6	15	0
	comm. Eng. 1586					

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
PX110/16	Cylinder Head Stud (Holding Down)					
	4 1/4" long	2	2			11
PX287/1	" " " (Holding Down)	9	9			8
PX239/1	" " " (" ")					
	4 1/4" long	1	1			11
PX110/17	" " " (Locating)	1	1		1	2
PX287/3	" " " (" ")	1	1		1	2
PX105/3	" " " Nut	14	14	doz.	1	3
PX110/37	" " " Washer	1	1	doz.		8
P287/167	" " " Gasket	1	1		6	0
P287/179	" " " Cover	1	1	2	1	0
P287/165	" " " Gasket	1	1		4	5
P110/295	" " " Screw	3	3		3	0
P110/297	" " " Strap	1	1		2	8
P287/182	" " " " (Front)	1	1		2	8
P287/181	" " " Bracket	1	1		2	9
PX287/13	" " " Strap Setscrew	2	2			3
P287/150	Water Outlet Pipe	1	1		7	0
P110/306	" " " Gasket	1	1			10
PX110/15	" " " Bolt	1	1			3
PX101/1	" " " Nut	1	1	doz.	1	3
PX110/34	" " " Setscrew	2	2			3
P287/4	Auxiliary Water Outlet Pipe Assembly	1	1	1	2	8
	comm. Eng. 1586					
P287/199	Joints for Water Outlet Pipe	2	2		1	0
	comm. Eng. 1586					
PX287/23	Studs for ditto	6	6			2
	comm. Eng. 1586					
P101/1	Nuts for ditto	6	6	doz.	1	3
	comm. Eng. 1586					
PX101/2	Washers for ditto	6	6	doz.		9
	comm. Eng. 1586					
P287/184	Water Inlet Pipe Assembly	1	1		10	10
P287/187	" " " Flange Gasket	1	1		1	3
P287/101	Core Plug	2	2			8
P110/182	Stud Hole Liner for Rear of Cyl. Head	1	1			7
P287/107	Water Drain Tap	1	1		1	9
1323	Extension Piece for ditto	1	1			8
P287/4	Fibre Washers for ditto	2	2	doz.		4

BELL HOUSING.

P287/108	Bell Housing Bushed ceased Eng. 620	1	1	2	11	8
P287/109	" " " comm. Eng. 621	1	1	2	11	8
V110/109	" " " Plug	1	1		1	6
PX110/9	Bolt, Bell Housing to Gearbox	5	5			4
PX105/3	Nut for ditto	5	5	doz.	1	3
PX110/11	Setscrew, Bell Housing to Gearbox	3	3			3
PX110/2	" " Bell Housing to Cyl. Block	6	6			3
P287/166	Bell Housing Gasket	1	1			3

FLYWHEEL.

P239/108	Flywheel	1	1	1	17	9
P110/141	" Bolt	4	4		1	0
PX105/3	" Nut	4	4	doz.	1	3
PX110/30	" Setscrews	6	6			3

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
PX110/27	Lockwire for Ball Brg. in Flywhl. Boss 1 ceased Eng. 1220		1			3
PX287/21	" " Ball Brg. in Flywhl. Boss 1 comm. Eng. 1221		1			3

CAMSHAFT.

P287/142	Camshaft ceased at Eng. F640	1	1	2	3	2
P287/143	" drilled for Rev. Counter Drive 1 comm. Eng. F641		1	2	3	2
PX110/41	" Nut	1	1			3
PX287/14	" Washer	1	1	doz.		6
PX101/4	" Key (Woodruff)	1	1			3
P110/170	" Bevel Wheel	1	1		18	10
Supplied with P110/193. Not supplied separately.						
P110/198	Camshaft Bevel Wheel Nut	1	1			7
P110/199	" " " Washer	1	1	doz.		8
P110/171	Bevel Thrust Washer	2	2			11
P110/172	Belleville Washer	2	2			4
P110/212	Camshaft Front Bearing	1	1		18	2
PX110/46	" " " Stud $1\frac{3}{8}$ " long	2	2			3
PX110/6	" " " " $1\frac{1}{8}$ " long	2	2			3
PX101/1	" " " " Nuts	4	4	doz.	1	3
P110/214	" " " " Cap	1	1		4	4
P110/223	" " " " Bush Top	2	2		1	0
P110/224	" " " " " Ft. Btm.	1	1		1	0
P110/225	" " " " " Rr. Btm.	1	1		1	0
P110/215	" " " " " Rear Bearing	3	3		11	6
PX110/46	" " " " Stud $1\frac{3}{8}$ " long	3	3			3
PX110/6	" " " " " $1\frac{1}{8}$ " long	6	6			3
PX110/35	" " " " " $3\frac{3}{8}$ " long	3	3			3
PX101/1	" " " " " Nut	12	12	doz.	1	3
P110/217	" " " " " Cap	3	3		2	6
P110/221	" " " " " Bush Bottom	3	3		1	9
P110/222	" " " " " Top	3	3		1	3
PX110/49	Dowel for Camshaft Bearing	8	8	doz.		8
PX110/47	Locking Screw	2	2			3
PX110/48	Copper Washer	6	6	doz.		3
P287/145	Plug for Camshaft Inter Bearing	4	4			3

VERTICAL DRIVE.

P110/193	Camshaft Driving Bevel Pinion	1	1	17	7	
Supplied with P110/170. Not supplied separately.						
PX110/43	Key for ditto	1	1			3
P110/194	Bevel Pinion Bearing Sleeve	1	1		9	0
PX110/44	Hyatt Roller Bearing	2	2		5	10
P110/196	Bevel Pinion Oil Thrower	1	1			7
P110/210	" " Thrust Washer (Thick)	as requ'd.				7
P110/211	" " " (Thin)	as requ'd.				7
P110/202	" " Washer	1	1		1	0
PX110/98	" " Felt Washer	1	1			3
P110/201	Bearing Retainer Plate	1	1		3	4
P110/197	Universal Joint Fork for Bevel Pinion	1	1		4	9

Part No.	Description	No. Used		Price Each	
		Open	Closed	£	s. d.
P110/4	Dynamo Coupling Assembly	1	1		5 6
P110/282	" " Washers .010"	as requ'd.		doz.	1 4
P110/283	" " " .020"	as requ'd.		doz.	1 4
P110/284	" " " .030"	as requ'd.		doz.	1 4
P110/285	" " " .040"	as requ'd.		doz.	1 4
P110/286	" " " .050"	as requ'd.		doz.	1 4
P110/277	" " Bolt	4	4		6
PX101/1	" " Nut	4	4	doz.	1 3
P110/281	Locking Screw for Btm. Bevel Pinion	1	1		3
P110/276	Tab Washer for " " "	1	1	doz.	1 9
P110/257	Shim for Dynamo .003"	as requ'd.			4
P110/258	" " " .005"	as requ'd.			4
P110/259	" " " .007"	as requ'd.			5
P110/260	" " " .015"	as requ'd.			7
P287/160	" " " Bottom Gear	as requ'd.			7
P110/198	Dynamo Spindle Nut	1	1		7
P110/199	" " Washer	1	1	doz.	8
P110/255	" " Oil Guard (Outer)	1	1		5 6
P110/256	Universal Joint Fork for Dynamo	1	1		

ROCKERS AND SHAFTS.

P110/174	Valve Rocker	12	12		7 0
P110/175	Eccentric Bush for Valve Rocker	12	12		4 9
P110/176	" " Locknut	12	12		4
P110/177	" " Lockwasher	12	12	doz.	1 0
P287/146	Distance Piece 2 1/4" Long	4	4		9
P110/179	" " 3/4" Long	5	5		4
P287/147	" " Spring	7	7		5
P110/181	Steady Bracket	1	1		4
P287/148	Rocker Shaft N.S.	1	1		5 10
P287/149	" " O.S.	1	1		5 10
PX110/42	Brazing Pegs	2	2	doz.	9
P110/183	Inlet and Exhaust Valve	12	12		3 8
P110/184	Split Collars for Valve	24 halves	24 halves		1 0
P110/185	Valve Spring Cup	12	12		6
P110/186	" " Cover	12	12		4
P110/187	" " ceased Eng. 999	12	12		9
P110/444	" " comm. Eng. 1000	12	12		1 0
P110/188	" " Guide	12	12		2 3

CRANKSHAFT AND FRONT BEARING HOUSING.

P287/130	Crankshaft	1	1		7 18 0
PX110/23	" " Key (Woodruff)	2	2		3
PX110/24	" " Key	1	1		6
PX110/25	Ball Bearing (Front End)	1	1		1 0 0
P110/107	Front Bearing Retainer Plate	1	1		1 3
PX110/26	" " " " Setscrew	4	4		3
P110/134	" " " " Lockpte.	2	2		2 3
P287/111	Inter. Main Bearing Fr. (Btm. Half)	1	1		18 8
P287/113	" " " " (Top Half)	1	1		
P287/112	" " " " Rr. (Top Half)	1	1		18 8
P287/114	" " " " (Btm. Half)	1	1		

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
PX287/6	Grub Screw	4	4	doz.	1	0
P287/117	Inter. Main Bearing Bush (Top Half)	2	2		9	4
P287/118	" " " " (Btm. Half)	2	2			
P287/115	Bolt (Bearings to Cyl. Block)					
	$\frac{3}{8}$ " B.S.F. $\times$ $6\frac{1}{2}$ "	4	4		1	5
P287/116	Lockwasher for ditto	4	4	doz.	1	0
PX287/7	Bearing Coupling Bolt	4	4			4
PX105/3	" " " " Nut	4	4	doz.	1	3
P287/110	Crankshaft Rear Bearing	1	1		11	6
PX110/13	Grub Screw for ditto	1	1			2
P110/142	Crankshaft Flange	1	1		1	0 4
P110/135	" " " " Nut	1	1		2	8
P110/136	" " " " Lockwire	1	1			3
P110/272	" " Bevel Wheel	1	1		1 13	10
P110/271	Bottom Bevel for Vertical Shaft	1	1			
P110/267	Shim for Crankshaft Bevel .003"		as requ'd.			4
P110/268	" " " " .005"		as requ'd.			4
P110/269	" " " " .007"		as requ'd.			4
P110/263	Thrustwhr. for Crksht. Loc. C.H.S.	1	1		2	2
P110/266	" " " " Phos. Br.	1	1		2	5
970	Front Engine Nose Piece (Two parts)	1	1		1 7	0
P239/115	Bolt for Nose Piece	4	4			5
PX110/41	Nut for " "	4	4	doz.	1	3
P110/273	Shim for " " .003"		as requ'd.			4
P110/274	" " " " .005"		as requ'd.			4
P110/275	" " " " .007"		as requ'd.			4
P239/102	Front Bearing Housing	1	1		1 9	3
PX105/14	" " " " Setscrew $\frac{1}{8}$ " Long	2	2			3
PX110/2	" " " " " 1" Long	6	6			3
P110/317	" " " " Gasket	1	1			4
PX110/95	Setscrew for Oil Pump	3	3			3
PX105/14	Setscrew for Dynamo Flange	2	2			3
PX110/3	Stud for Oil Drain Pipe Flange	2	2			3
PX110/11	Setscrew Front Cover	4	4			3
PX110/93	Dowel for Locating Bearing Housing	1	1	doz.		9
P110/265	Starting Dog	1	1		2	4
PX110/29	Plug for Crankshaft Pin	6	6			11

CONNECTING ROD AND PISTONS.

P287/120	Connect. Rod	} Bushed	6	6		
P287/121	" " Cap	} ceased Eng. 999	6	6		1 4 3
P239/104	Connect. Rod	} Metalled	6	6		
P110/122	" " Cap	} comm. Eng. 1000	6	6		19 6
P287/122	" " Bolt	ceased Eng. 999	12	12		1 8
P110/493	" " " " comm. Eng. 1000		12	12		1 8
P287/123	" " " " Washer		12	12	doz.	1 6
		ceased Eng. 999				
PX110/22	Connect. Rod Bolt Nut		12	12		3
P287/124	" " " " Washer		12	12		3
		ceased Eng. 999				
P287/125	" " Bush (Top Half)		6	6		
		ceased Eng. 999				
P287/126	" " " (Btm. Half)		6	6		9 4
		ceased Eng. 999				

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P110/488	Gudgeon Pin ceased Eng. 999	6	6		2	4
P239/105	" " comm. Eng. 1000	6	6		1	9
P110/491	" " Locking Plate	6	6			3
	ceased Eng. 999					
P287/127	Pinch Bolt ceased Eng. 999	6	6			5
P287/128	Locking Washer for ditto	6	6			4
	ceased Eng. 999					
P239/106	Setscrew for Small End	6	6			4
	comm. Eng. 1000					
P287/129	Piston less Rings ceased Eng. 561	6	6	10	10	
P287/188	" " " comm. Eng. 562	6	6	10	10	
P110/128	Piston Ring	12	12		1	3
P110/129	Piston Scraper Ring	6	6		1	4

FAN.

1186	Fan Blade	1	1		10	4
P287/132	" Centre	1	1		9	1
PX110/95	" " Setscrew	4	4			3
P287/134	" " Gasket	3	3	doz.	1	0
P287/133	Greaser	1	1			5
P287/135	Fan Spindle (Rear Half)	1	1		8	6
P287/136	" " (Front Half)	1	1			
PX110/41	" " Nut	1	1			3
P287/137	" " Thrustwasher	1	1		1	4
P239/114	" Driving Pulley (Driver)	1	1		7	8
P110/264	" Pulley Distance Piece	1	1		2	3
P287/138	" " Retaining Washer	1	1			3
PX287/9	Hyatt Roller Bearing	1	1		5	0
P287/139	Fan Distance Piece	1	1		1	10
1411	" Belt	1	1		9	6
P287/3	" Assembly	1	1		1 16	3

LUBRICATING SYSTEM.

P110/106	Tap. Cyl. Block to Oil Pressure Gauge	1	1		2	3
PX287/4	Fibre Washer for ditto	1	1	doz.		4
1043	Sump	1	1	3	1	9
949	" Stud	14	14			9
PX101/1	" " Nuts	14	14	doz.	1	3
PX110/3	" Setscrew	4	4			3
P287/164	" Gasket	1	1		3	10
P279	Oil Strainer Assembly	1	1		10	0
P287/159	Fibre Washer for Oil Strainer	1	1	doz.	1	0
P110/459	Oil Filler	1	1		5	8
PX110/1	" " Setscrew	1	1			3
P110/143	" " Clamp Plate	1	1			4
P110/409	" " Cap with Baffle	1	1		4	2
P239/117	Dip Stick	1	1		3	8
P110/3	Oil Pump Assembly	1	1		1 16	6
P110/494	" " Body	1	1		14	4
P110/492	" " " Gasket	1	1	doz.	1	0
PX110/31	" " " Stud	3	3			3
PX101/1	" " " Nut	3	3	doz.	1	3
PX110/32	" " Plug $\frac{1}{8}$ " dia.	1	1			6

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P110/497	Oil Pump Plug for Oil By-pass			8	6	
P110/451	" " Spindle and Driving Gear	1	1		3	
PX110/43	" " " Key	1	1		5	
P110/152	" " Idle Spindle	1	1	13	7	
P110/153	" " Spiral Gear (Driven)	1	1	10	10	
P110/262	" " " (Driving)	1	1	5	0	
P110/154	" " Driven Gear	1	1	1	3	
P110/155	" " Cover	1	1		9	
P110/160	" " " Gasket	1	1	doz.	7	
P239/109	" Relief Valve	1	1	2	6	
P110/157	Relief Valve and Priming Plug	1	1		4	
P110/158	" " Spring	1	1	doz.	1	4
PX110/33	Priming Plug Washer	1	1	6	8	
P287/152	Oil Suction Pipe	1	1			
	ceased Eng. 1298			6	9	
P287/191	" " Pipe	1	1			
	comm. Eng. 1299			4		
P287/193	" " " Clip	1	1			
	comm. Eng. 1299			3		
PX110/26	" " " Clip Setscrew	1	1			
	comm. Eng. 1299			8		
P287/153	" " " Clip	1	1			
P287/119	Cover Plate for Oil Suction Flange	1	1	10		
	on Cyl. Block	1	1	doz.	1	4
PX287/8	" " Gasket	1	1		3	
PX110/60	" " Setscrew	2	2			
P110/240	Cyl. Head Oil Drain Pipe (Front)	1	1	10	5	
P110/241	" " " " " Flange (Tp)	1	1			
P110/228	" " " " " " (Btm)	1	1			
P287/151	" " " " " (Side)	2	2	7	0	
P287/228	" " " " " Flange	4	4			
P239/111	" " " Feed Pipe	1	1	3	8	
P110/230	" " " " " Flange and Nut	1	1			
PX239/6	" " " " " Fibre Washer	1	1	doz.	4	
PX110/39	" " " " " Flange Setscrew	1	1		3	
PX110/40	" " " " " Fibre Washer	1	1	doz.	4	
P287/154	Main Oil Feed Pipe Assembly	1	1	7	6	
PX110/6	Stud for ditto	6	6		3	
PX101/1	Stud Nut for ditto	6	6	doz.	1	3
PX287/15	Main Oil Feed Pipe Gasket	3	3		4	
PX110/100	Cyl. Head Oil Drain Pipe Gasket (Top)	1	1	doz.	1	0
	ceased Eng. 1250					
PX239/5	" " " Drain Pipe Gkt. (Front)	1	1		5	
	ceased Eng. 1250					
PX239/5	" " " Drain Pipe Gkt. (Side)	6	6		5	
	ceased Eng. 1250					
PX287/20	" " " Drain Pipe Gasket (Top)	1	1		2	
	comm. Eng. 1251					
PX110/58	" " " Drain Pipe Gkt. (Front)	1	1	doz.	1	0
	comm. Eng. 1251					
PX110/58	" " " Drain Pipe Gkt. (Side)	6	6	doz.	1	0
	comm. Eng. 1251					
P287/163	" " Oil Feed Pipe Gasket	1	1		4	

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P287/144	Oil Feed Choke	1	1		1	0
P110/200	" Drain Housing	1	1		7	4
PX110/6	" " " Stud	2	2			3
PX101/1	" " " " Nut	2	2	doz.	1	3
P110/235	" " " " Drain Pipe (Short)	1	1		5	0
P110/204	" " " " Shim .003"	as requ'd.				3
P110/205	" " " " " .005"	as requ'd.				3
P110/206	" " " " " .007"	as requ'd.				3
P110/207	" " " " " .010"	as requ'd.				5
P110/208	Oil Drain Housing Shim .005"	as requ'd.				5
P110/209	" " " " " .020"	as requ'd.				8
PX110/45	" " " " Drain Pipe Stud	2	2			3
PX101/1	" " " " " " Nut	2	2	doz.	1	3
PX110/6	" " " " Flange Stud	4	4			3
PX101/1	" " " " " Nut	4	4	doz.	1	3
PX110/6	" Return Flange Stud	4	4			3
PX101/1	" " " " " Nut	4	4	doz.	1	3
PX110/72	" Hole Plug	2	2	doz.	1	6

INLET AND EXHAUST MANIFOLD.

P287/173	Inlet and Exhaust Manifold	1	1		2	17	8
P287/162	Exhaust and Interport Gasket	2	2				8
P110/302	" " " " " "	2	2				9
P110/303	Inlet and Exhaust Rear End Gasket	2	2				9
P287/177	Carburettor Gasket	2	2				4
PX287/10	Exhaust Manifold Studs	8	8				3
PX287/11	" " " " Nuts	8	8				4
PX287/12	" " " " " Washers	8	8	doz.	1	0	
P287/174	Inlet Pipe Sealing Plug	1	1		7	2	
P287/175	" " " " " Gasket	1	1				4
P287/176	Plug for Inlet Pipe	1	1				6
PX287/18	Fibre Washer for ditto	1	1	doz.			4
PX287/16	Carburettor Flange Studs	4	4				3
PX101/1	" " " " Nuts	4	4	doz.	1	3	
PX287/17	" " " " Washers	4	4	doz.			4
PX110/3	" Centre Flange Setscrew	2	2				3

CLUTCH.

P239/122	Clutch Plate	1	1			11	10
P239/123	" Centre	1	1				
PX110/102	" Plate Rivets	6	6	doz.			4
P239/124	" Lever	3	3				3
P239/126	" " Adjusting Screw	3	3	doz.	2	0	
PX101/1	" " " " Locknut	3	3	doz.	1	3	
PX110/61	" " Felt Washer	6	6	doz.	1	2	
PX110/62	" " Brass Washer	12	12	doz.			5
P110/334	" " Pin	3	3				4
P239/130	" " Spring	3	3				3
P239/125	" Fabric	2	2		4	8	
P110/324	" Operating Pin	3	3				4
P239/128	" " " Bush	3	3				4
PX239/9	" Lever Spring Screw	6	6	doz.		11	
P239/111	" Spring ceased Eng. 862	6	6				5
P287/189	" " comm. Eng. 863	6	6				5

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1024	Clutch Operating Sleeve	1	1		9	10
P239/127	" Cover with Friction Disc	1	1	1	1	8
P239/127	" Pressure Plate with Friction Discs and Thrustbutton	1	1		15	3
PX110/65	" Pressure Plate Rivets $\frac{3}{4}$ " Long	6	6	doz.		4
PX110/66	" " " $\frac{1}{2}$ " Long	6	6	doz.		4
P110/338	" Thrust Bearing	1	1		13	0
1128	" " " Cover	1	1		7	0
1034	" Operating Shaft	1	1		10	10
P239/132	" Driving Studs	6	6			3
P110/348	" Operating Shaft Bush O.S.	1	1		3	5
P110/349	" " " " N.S.	1	1		1	6
PX110/71	Locking Screw for Bush	2	2			3
797	Clutch Pedal	1	1		5	4
P110/422	" " Cotter Pin	1	1			5
1144	" " Return Spring	1	1			5
1248	" " " " Bracket	1	1			4
1286	" " Stop Stud	1	1			4
1287	" " " " Nut	1	1			8

FOUR SPEED GEARBOX.

P246	Four Speed Gearbox Assembly	1	1	27	10	0
P246/100	Change Speed Gate	1	1		5	6
P246/101	Reverse Lever	1	1		5	0
P246/102	" Slider	1	1		4	6
P246/103	Change Lever Housing	1	1	1	3	6
P246/104	Selector Lever	1	1		8	4
P246/105	Change Speed Lock	1	1		6	4
P246/106	Hand Lever	1	1		6	0
P246/107	Direct and 3rd Striking Rod	1	1		2	6
P246/108	1st and 2nd Striking Rod	1	1		2	6
P246/109	Reverse Striking Rod	1	1		2	6
P246/110	3rd Speed Fork	1	1		12	0
P246/111	Direct Drive Fork	1	1		10	6
P246/112	1st and 2nd Speed Fork	1	1		12	0
P246/113	Change Speed Shaft	1	1		4	6
P246/114	Fulcrum Plate	2	2			2
P246/115	" " Stud	2	2			4
P246/116	Change Lever Pin	1	1			6
P246/117	Lock Pin Plug	1	1		1	4
P246/118	Lock Pin	1	1		1	2
P246/119	Jaw	1	1		2	2
P246/120	3rd Driving Dog	1	1		19	0
P246/121	Constant Mesh Gear	1	1	1	16	0
P246/122	2nd Speed Fixed Gear	1	1	1	14	0
P246/123	3rd Speed Fixed Gear	1	1	1	13	0
P246/124	1st Speed Slider (47 T)	1	1	1	17	0
P246/125	2nd Speed Slider	1	1	1	13	8
P246/126	Constant Mesh Pinion	1	1	2	4	0
P246/127	Oil Feed Choke for Const. Mesh Pinion	1	1			4
P246/128	Direct Drive Dog	1	1		19	0
P246/129	1st Speed Pinion (18 T)	1	1	1	6	0
P246/130	Reverse Pinion	1	1	1	6	8
P246/131	3rd Speed Free Gear	1	1	1	16	0
P246/132	Gearbox Bare	1	1	6	0	0

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P246/133	Layshaft	1	1		18	0
P246/134	Mainshaft	1	1	1	7	0
P246/135	Detent Cover	1	1		4	0
P246/136	Speedo Drive Gear	1	1		4	8
P246/137	" Driven Gear	1	1		4	8
P246/138	" Bush	1	1		2	10
P246/139	Constant Mesh Pinion Bearing Liner	1	1		6	2
P246/140	Layshaft Bearing Liner	1	1		6	4
P246/141	Rear Bearing Liner	1	1		6	8
P246/142	" " Sleeve	1	1		2	2
P246/143	Reverse Lever Pin	1	1		2	2
P246/144	" Engaging Pin	2	2			4
P246/145	" Stop Body	1	1		2	0
P246/146	" " Cap	1	1		1	0
P246/147	" " Plunger	1	1		1	0
P246/148	" Pinion Bush	1	1		4	0
P246/149	Distance Piece ($1\frac{3}{8}$ " Long)	1	1		1	4
P246/150	Distance Piece	1	1		1	4
P246/151	Bearing Collar	1	1			4
P246/152	Layshaft Nut	2	2		1	0
P246/153	Constant Mesh Pinion Nut	1	1		1	0
P246/154	Lockwasher (Layshaft)	2	2			3
P246/155	" (Constant Mesh Pinion)	1	1			3
P246/156	Front End Cover	1	1		12	6
P246/157	Rear End Cover	1	1		15	0
P246/158	Oil Plug	1	1		1	2
P246/159	Reverse Shaft	1	1		13	0
P246/160	Mainshaft Coupling Flange	1	1		12	0
P246/161	Compression Spring (Reverse Stop)	1	1			6
P246/162	1st Speed Pinion (19 Teeth)	1	1	1	7	0
P246/163	Bolt and Nut for 1st and 2nd Sliders	6	6			4
P246/165	Setscrew for Change Speed Fork	3	3			3
P246/166	Spring Washer $\frac{1}{4}$ "	9	9			2
P246/167	Screw for Detent Cover	2	2			3
P246/168	Studs for Change Speed Lever Housing $\frac{1}{8}$ " B.S.F.	6	6			3
P246/169	Detent Compression Spring	3	3			4
P246/170	Change Speed Lever Knob	1	1	1		6
P246/171	Screw for Change Speed Gate	4	4			3
P246/172	Fulcrum Plate Stud Nut $\frac{1}{4}$ " B.S.F.	4	4			2
P246/173	Nut for Lockpin $\frac{3}{8}$ " B.S.F.	1	1			2
P246/174	Screw for Selector Lever	2	2			4
P246/175	Nuts for End Cover & Lever Housing	21	21			2
P246/176	Rear End Cover Studs	8	8			3
P246/177	Locking Screw for Speedo Bush	1	1			3
P246/178	Front End Cover Studs	7	7			3
P246/181	Inspection Cover	1	1	2		8
P246/182	" " Setscrews	2	2			3
P246/183	Screw for Reverse Shaft	2	2			3
P246/184	Rear End Gasket	1	1		1	4
P246/185	Front End Gasket	1	1		1	0
P246/186	Washer for Coupling Flange	1	1			2
P246/187	Nut for Coupling Flange	1	1			4
P246/188	Plugging for Constant Mesh Pinion $\frac{1}{8}$ " B.S.F.	1	1			2

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P246/190	$\frac{1}{4}$ " Standard Ball	3	3			4
P246/191	Locking Plates for 1st and 2nd Speeds	3	3			3
P246/192	" " Fulcrum Pin Stud	2	2			3
P246/193	Fibre Washer	2	2			5
P246/195	Stop Catch for Reverse	1	1	2	6	
P246/196	Lock Plate for 3rd and 4th Speed	1	1			8
P246/197	Tab Washer for Selector Ball	1	1			1
P246/198	Tab Washer for Change Speed Fork	4	4			2
P246/199	Bolt and Nut for Reverse Stop	1	1			6
P246/200	Mainshaft Bush	1	1	5	0	
P246/201	Front Mainshaft Roller Brg. R135LL	1	1	1	2	6
P246/202	Rear Mainshaft Roller Brg. R330LL	1	1	1	3	9
P246/203	Fr. & Rr. Layshft. Roller Brg. R325LL	2	2	1	0	3
P246/204	Constant Mesh Pinion Front Roller Bearing RLS9LL	1	1	17	3	
P246/205	Needle Brgs. (Fr. End of Mainshaft)	23	23	Set	4	0
P246/206	" " (3rd Speed Wheel)	31	31	Set	6	0
P246/207	Pin for Bearing Housing	1	1			2
P246/208	Washer for Mainshaft	1	1			2
P287/131	Distance Piece for 1st Motion Shaft	1	1	1	6	

ENGINE SUPPORT.

800	Rear Engine Support Block	2	2	1	0	
	ceased Eng. F620					
1378	" " Support Block	2	2			9
	comm. Eng. F621					
1375	Fibre Whr. for ditto comm. Eng. F621	2	2			2
129	Bolt Seats (Rubber)	2	2			5
130	Special Steel Washers	2	2	doz.	1	6
881	Rear Eng. Bearer Dist. Piece $1\frac{1}{4}$ " Long	2	2			3
	ceased Ch. 1000					
1396	" " " Dist. Piece $\frac{1}{2}$ " Long	2	2			2
	ceased Ch. 1000					
1377	" " " Dist. Piece $2\frac{1}{4}$ " Long	2	2			4
	comm. Ch. 1001					

Supersedes Part Nos. 881 and 1396

BRAKE GEAR.

P245	Brake Push Rod Assembly	1	1	5	7	
875	Brake Push Rod	1	1	1	10	
879	Yoke for ditto	2	2			11
933	Clevis Pin for ditto	2	2			6
P240	Brake Cross Shaft Assembly	1	1	2	15	10
	ceased Ch. F0395					
P302	" " " Assembly	1	1	2	15	10
	comm. Ch. F0396					
837	Brake Cross Shaft	1	1	7	0	
841	Roller for Brake Cross Shaft	32	32	Set	2	6
842	Roller Bearing Retainer	1	1			2
861	Brake Cable Pulley	2	2			6
862	" " " Key	2	2			3
844	Cross Shaft Tube Blanking Disc	1	1			3
859	Foot Brake Actuating Lever (Fixed)	2	2	4	5	
839	" " " " (Free)	1	1	4	5	
	for P240	1	1			

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1368	Foot Brake Actuating Lever (Free) for P302	1	1	2	9	
860	" " Adjusting Rod	1	1		8	
858	Clevis Pin for ditto	1	1		4	
846	Hand Brake Adjusting Nut	2	2	2	9	
843	Collar for Brake Cross Shaft	1	1		8	
840	Brake Cross Shaft Steady Brkt. (Free)	1	1	1	3	
847	Hand Brake Lever	1	1	8	6	
857	" " " Ratchet Pawl	1	1	2	2	
850	Hand Brake Lever Tube	1	1	2	5	
849	" " " Knob	1	1	1	3	
853	" " " " Screw	1	1		4	
852	" " " Pawl Spring	1	1		4	
854	" " " Rod	1	1		8	
856	" " " Screw	2	2		8	
855	" " " Stud	1	1		4	
845	" " Adjusting Rod	1	1	3	11	
848	" " Actuating Lever	1	1	2	5	
851	" " Lever Clevis Pin	1	1		4	
838	Bush for Brake Cross Shaft	1	1	1	6	
1071	Fibre Washer for ditto	2	2		4	
922	Brake Cross Shaft Trunnion	2	2		8	
877	Hand Brake Ratchet	1	1	4	2	
878	" " Lever Stop	1	1	2	2	
QS805	Rubber Buffer	1	1		4	
1051	Hand Brake Lever Return Spring	1	1		3	
P288	Front Brake Cable Assembly	2	2	16	0	
P284	Rear " " "	2	2	14	6	
1047	Ferrules for Frame Slots	4	4		4	
269	Foot Brake Pedal Return Spring	1	1		3	
1365	Roller for Brake Pedal	23	23	Set	1	9
1007	Brake Pedal Fulcrum Pin	1	1		9	
798	Foot Brake Pedal ceased Ch. F0395	1	1	5	4	
1366	" " " comm. Ch. F0396	1	1	5	4	
270	Brake Pedal Return Spring Bracket	1	1		7	

CONTROLS.

P268	Accelerator Cross Shaft Assembly	1	1	16	3	
1060	Accelerator Cross Shaft	1	1		11	
1061	" Pedal	1	1	2	5	
1062	Actuating Lever	1	1	1	10	
463	Slow Running Lever	1	1	1	2	
186	Plummer Blocks	3	3	1	6	
1103	Jet Control Lever	2	2	1	8	
1102	" " Cross Shaft	1	1	4	5	
1104	" " Return Spring	1	1		3	
P122	Coupling Rod to Throttle	1	1	1	4	
265	Accelerator Return Spring	1	1		4	
266	" " " Bracket	1	1		7	
1113	" Pedal Stop	1	1		7	
P293	Lucas Ignition Control Assy. IC/50	1	1	9	6	
1108	Jet Control Rod	1	1		4	
1204	" " Connecting Rod	1	1		6	
1111	Anti-Rattle Spring for Controls	1	1	doz.	1	4
1109	Slow Running Control Rod	1	1		4	

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1107	Control Rod Knob for Part Nos. 1108 & 1109	2	2			6
132	Slow Running Rod Spring	1	1			7
1110	" " " Brackets	1	1		1	0
1203	Control Rod Steady Bracket	1	1		3	4
1112	Rubber Bushes for Controls	2	2			3
269	Jet Control Return Spring	1	1			3
270	" " " Bracket	1	1			7
1597	Guard Bracket for Jet Control Lever	1	1		1	3

STEERING GEAR ASSEMBLY.

P263	Steering Gear Unit	1	1		6	0	0
P263/100	" Column Tube	1	1		10	10	
P263/101	Outer Steering Column	1	1		15	3	
P112/104	Steering Thrust Screw	1	1			9	
P112/106	" " Washer	1	1			1	3
P112/107	" Column Clamp	1	1			4	4
P112/110	" Ball Race (Upper)	1	1			6	10
P112/111	" " (Lower)	1	1			2	10
P112/113	" Column Coupling Tube	1	1			3	0
P112/119	" " Plug	1	1			4	9
P112/103	Locking Washer	1	1	doz.		7	
P112/108	Lower Ball Race Housing	1	1		2	1	
P112/126	Setscrew for Locking Washer	1	1			3	
P112/127	Locknut for Thrust Screw	1	1			3	
P112/128	" " Steering Ball Race	1	1			1	3
A186	Steering Wheel 16"	1	1		2	2	0
P112/109	" " Setscrew	1	1			1	4
P112/112	" " Washer	1	1				8
P112/120	" " Key	1	1				4
P112/121	" " Felt Washer	1	1				4
P112/137	" Box	1	1		16	4	
P112/116	" " Bush (Long)	1	1			3	8
P112/117	" " (Short)	1	1			2	6
P112/102	" " Nut	1	1			2	6
PX110/54	" " Stud	4	4				4
P112/114	" " Cover	1	1			4	9
P112/115	" " " Gasket	1	1				4
P112/118	" Worm	1	1		13	0	
P112/131	" " Wheel	1	1		17	10	
P242/102	" Drop Arm	1	1			5	0
P242/103	" Stop Stud	2	2				11
P112/135	" " Plate	1	1				7
PX105/4	" " " Spring Washer	2	2	doz.	1	0	
P112/132	" Coupling Tube Pin	4	4	doz.		9	
P112/136	" Drop Arm Bolt	1	1				3
154	" Column Support Bracket	1			2	6	
1433	" " " "		1			4	3

RADIATOR AND CONNECTIONS.

P283	Radiator complete	1	1		12	0	0
	ceased Eng. 1585						
P342	Radiator complete	1	1		13	0	0
	comm. Eng. 1586						

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1774	Hose Conn. for Auxiliary Water Pipe comm. Eng. 1586	1	1			7
A293	Hose Connection Clips comm. Eng. 1586	2	2		1	0
P214/100	Radiator Cap	1	1		12	0
P214/101	" " Rubber Ring	1	1			7
P282/100	" " Drain Tap	1	1		1	9
P214/103	" " " Fibre Washer	1	1			2
1066	" " Mounting Washer (Fibre)	2	2			3
1140	Water Hose Connection (Top)	1	1		1	7
1141	" " " (Bottom)	1	1		1	7
A245	Hose Connection Clips Top	2	2			10
A110	" " " Bottom	2	2			10
1205	Radiator Stay Rod	2	2			9
1069	" " " Fork End	4	4			6
1068	" " " Eye Bolt	2	2			4
130	" " Mounting Washer (Steel)	2	2	doz.	1	6

SILENCER AND EXHAUST PIPES.

141	Exhaust Pipe Gasket	1	1			6
1209	Front Exhaust Pipe	1	1		9	10
1208	Silencer	1	1		12	7
831	Silencer Clips	2	2			8
1207	'U' Bolt for Silencer	1	1			3
1091	Exhaust Pipe Rear	1			7	2
1369	" " " Clip		1		6	8
830	" " " Clip	1	1		1	10

PETROL TANK AND PIPES.

1115	Petrol Tank less Cap	1			2	2	8
1251	" " " " "		1		2	2	8
1196	Petrol Pipe with Unions 27½" Tank to Reserve Supply Pipe	1	1		2	3	
1197	Petrol Pipe with Union 30" Tank to Main Supply Pipe	1	1		2	6	
1198	Petrol Pipe with Unions 52" Main Supply	1	1		3	4	
1199	Petrol Pipe with Unions 52" Reserve Supply	1	1		3	4	
1200	Petrol Tap ½" Gas	1	1		6	1	
1201	Petrol Pipe with Unions 56" Petrol Tap to Petrol Lift (Dull Plated)	1	1		3	11	
1563	Petrol Pipe, Tap to Petrolift 64" comm. Ch. Fo848	1	1		4	1	
A242	S.U. Petrol Lift 12v. Morriscott	1	1		2	10	0
1210	Petrol Pipe with Unions Petrol Lift to Carburettors (Dull Plated)	1	1		4	2	
S2/19	Comb. Petrol Pipe & Tecalemit Clip	2	2			4	
S2/11	Petrol Pipe Clip ½" dia.	7	7			3	
S2/18	" " " ½" dia. Short	2	2			3	
S2/23	" " " (Two Pipes) ½" dia	1	1			7	
1415	Distance Piece for Part No. S2/23	1	1			2	
1410	Petrol Tank Dip Stick	1			2	7	

Part No.	Description	No. Used		Price Each	
		Open	Closed	£	s. d.
1409	Petrol Tank Dip Stick		1		2 7
1402	" " Strap	2			10
1428	" " "		2		11
1429	" " Mounting Block		2		4
1464	" " Cap	1	1	4	2

ACCESSORIES AND SUNDRIES.

P277	Shock Absorbers Hartfords	1 Set	1 Set	8	0	0
P277/1	Shock Absorber O.S. Front	1	1	1	19	9
P277/2	" " N.S. Front	1	1	1	19	9
P277/3	" " O.S. Rear with Brkt.	1	1	2	3	9
P277/4	" " N.S. Rear with Brkt.	1	1	2	3	9
P277/100	" " Pin Front Top	2	2		2	0
P277/101	" " " " Bottom	2	2		2	0
P277/102	" " " " Rear	2	2		2	0
P277/103	" " " " Nuts	6	6			3
A294	Wheels 19" X 3 1/2" Rudge Whit. Unpntd.	5	5	1	5	6
A294	" " " " " " Painted			1	15	0
1123	Hub Caps Rudge Whit. O.S. and N.S.	4	4		9	7
178	Front Number Plate	1	1		2	4
1124	Rear Number Plate	1	1		2	4
1456	" " " " Bracket		2		1	0
1219	Instruction Plate for Petrol Tap & Foot Brake Adj.	1	1			10
1226	Instruction Plate for Mixture Control	1	1			4
1227	" " " " Slow Run. Con.	1	1			4
1221	" " " " Gr. Nipple O.S.	1	1		1	1
1220	" " " " " " N.S.	1	1		1	1
P290	Tecalemit Grouped Nipple Syst. comp.	1	1	2	10	2
P278/100	Pipe 5/32" dia. X 4" Long	1	1		1	1
P278/101	" " " " X 1' 7" Long	1	1		2	0
P290/100	" " " " X 2' 6" Long	2	2		2	7
P278/103	" " " " X 2' 7" Long	2	2		2	7
P278/104	" " " " X 2' 11 1/2" Long	2	2		2	9
P278/117	" " " " X 5' 9" Long	2	2		4	3
P278/105	" " " " 7" with 7" of Flex. Tube	2	2		2	9
P278/106	" " " " 5' 4 1/2" w. 7" Flex. Tube	2	2		5	5
P278/107	Zerk Battery Plate Fitting	4	4		1	3
P278/108	" " " " " " Two Way	2	2		1	5
P278/109	Adj. Feed Plug One Way 1/8" B.S.F.	4	4			11
P278/110	" " " " Two Way " "	4	4			11
P278/118	" " " " Three Way " "	2	2		1	3
P113/109	Clip for One Pipe	4	4	doz.	1	0
P278/111	" " Two Pipes	5	5	doz.	1	7
P278/112	" " Three Pipes	2	2	doz.	1	7
P278/113	2BA X 1/8" Bolt with Nut	11	11	doz.	2	2
S1/4	TZ65 Plug 1/8" B.S.F.	14	14	each		5
S1/6	TZ6 Plug 3/8" Gas for Prop. Shaft	2	2			4
P113/110	Fibre Washer Thick	8	8	doz.		4
P113/111	" " " " Thin	32	32	doz.		4
P278/119	Support Plate for Three Pipes	2	2			4
P278/120	Cone for 5/32" Pipe	4	4	doz.	1	7
P278/121	Cap for ditto	4	4	doz.		6
1480	Spring Clips for Starting Handle	3	3			2
A289	License Holder	1	1		6	0

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
DASHBOARD AND FUME EXCLUDERS.						
1121	Dashboard Wall O.S.	1	1		4	7
1122	" " N.S.	1	1		4	7
1225	Dash Panel	1	1		16	0
978	Fume Excluder for Dash Panel					
	78" Long	1	1	Length	3	8
1143	Rubber Seal for Clutch Housing					
	30½" Long	1	1	Length	1	10
1224	Undertray	1	1		13	4
1177	Draught Excluder Rubber	2	2			4
1173	Clip for ditto	2	2			3
130	Distance Washer for Dashboard Wall	2	2	doz.	1	6
1461	Draught Excluder for Steering Coln.	1	1		1	10
1483	'U' Channel for Dash Panel	2	2		1	0
	ceased Ch. Fo860					

ELECTRICAL EQUIPMENT AND INSTRUMENTS.

A246	Instrument Panel Rotax 12v. FT74	1	1	2	15	0
P305/1	Speedometer Instrument (Smith's)	1	1	2	15	0
P292/2	Speedo Cable Inner and Outer	1	1	13	0	
P292/100	" " Inner	1	1	6	6	
P292/101	" " Outer	1	1	6	6	
A259	Oil Indicator Jaeger	1	1	1	10	0
1217	Oil Gauge Pipe with Unions	1	1	8	4	
335	Washers for ditto	2	2		1	
A247	Starter Switch S2F Short	1	1	7	6	
1189	Bracket for Starter Switch	1	1	2	2	
1320	Backing Plate for ditto	1	1		7	
A249	Cut-out and Junction Box 12v. CJF2	1	1	1	5	0
A250	Battery 12v. complete RW9B	1	1	5	15	0
A251	Headlamp 12v. K624	2	2	Pair	4	17 0
A285	Combined Horn Push and Dipper					
	Switch Arm	1	1	1	0	0
A252	Side Lamps 12v. 1130	2	2	Pair	1	1 0
650	Side Lamp Packing	2	2		8	
A261	Stop Lamp and Switch	1	1	1	1	0
A254	Coil 12v. Q12	1	1	1	0	0
A255	Horn 12v. HF318 Rotax	1	1	1	4	6
A258	Harnessed Cables	1	1	1	10	6
P291	Windscreen Wiper less Tubing No. 30F	1	1	1	10	6
A257	Driving Mirror No. 160TMS	1			13	6
A286	" " No. 20S		1		5	0
A248	Auxiliary Junction Box C30	1	1		2	6
P239/113	Dynamo DDS12	1	1	7	12	6
P287/161	Distributor DJ6 12v.	1	1	1	8	6
P110/288	" Securing Screw	1	1			3
P239/120	Starter M35AF Type 12v.	1	1	5	5	0
PX110/12	" Fixing Bolt	1	1			3
PX101/10	" " Nut	1	1	doz.	1	3
PX110/10	" " Setscrew	2	2			3
P110/111	" Packing Piece	1	1		1	9
P310	Carburettor Type 2QM	2	2	Pair	7	0 0
P287/190	Sparkling Plug Champion No. 13	6	6		5	0

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
P287/178	H.T. Leads complete with Champion Terminals	1	1	Set	7	0
1393	Rubber Bush for Cables on Dash Panel	3	3			4
1484	" " for Tail Lamp Cable	1				3
1561	Chromium Plated Tubing $\frac{1}{4}$ " OD for Windscreen Wiper	3'	3'		2	6
1559	Copper Tubing $\frac{1}{4}$ " OD " "	4'	4'		2	6
1560	Rubber Tubing $\frac{1}{4}$ " ID " "	1'	1'			3
1703	Rubber Tubing for Rear Lamp Cable	1	1			3

BONNET, WINGS AND FAIRINGS.

1041	Front Wing O.S. unptd.	1	1		2	1	4
1041	" " O.S. painted	1	1		2	18	10
1042	" " N.S. unptd.	1	1		2	1	4
1042	" " N.S. painted	1	1		2	18	10
1398	Wing Stay Tie Rod	1	1			2	9
1064	Headlamp and Wing Stay Brkt. O.S.	1	1			4	0
1065	" " " " " N.S.	1	1			4	0
1070	Rubber Washer for ditto	2	2				8
1094	Distance Piece for Wing Stay Brkt.	4	4	doz.	1		4
1093	Front Wing Rear Stay O.S.	1	1			2	2
1099	" " " " " N.S.	1	1			2	2
1178	Rear Wing O.S. unptd.	1	1		1	5	10
1178	" " O.S. painted	1	1		1	19	10
1179	" " N.S. unptd.	1	1		1	5	10
1179	" " N.S. painted	1	1		1	19	10
323	" " Cover O.S. unptd.		1			10	6
323	" " " O.S. painted		1			15	6
326	" " " N.S. unptd.		1			10	6
326	" " " N.S. painted		1			15	6
393	Rubber Buffer for Wing Cover		2				3
1232	Front Fairing unptd.	1	1			16	8
1232	" " painted	1	1		1	5	2
1233	Side Fairing O.S. unptd.	1	1			9	10
1233	" " O.S. painted	1	1			15	4
1234	" " N.S. unptd.	1	1			9	10
1234	" " N.S. painted	1	1			15	4
1467	Front Wing Side Fairing O.S. unptd.	1	1			2	4
1467	" " " " O.S. painted	1	1			8	6
1468	" " " " N.S. unptd.	1	1			2	4
1468	" " " " N.S. painted	1	1			8	6
1485	Side Fairing Fixing Bracket O.S.	1	1			1	2
1486	" " " " " N.S.	1	1			1	2
1216	Bonnet unptd.	1	1		2	14	10
1216	" " painted	1	1		5	4	10
A262	" " Fastener	4	4			4	2
259	" " Rod Lug	1	1				8
1372	" " Hinge Rod Bracket	1	1				5
1370	" " Fastener Brkt. Rear O.S.	1	1			1	3
	ceased Ch. F0521						
1416	" " Brkt. Rear N.S.	1	1			1	7
	ceased Ch. F0521						
1373	" " Brkt. Front O.S.	1	1			1	7
1374	" " " " " N.S.	1	1			1	7

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1481	Bonnet Fastener Stirrups	4	4			4
1550	" " Brkt. Rear O.S.	1	1	1	8	
	comm. Ch. F0522					
1551	" " Brkt. Rear N.S.	1	1	1	8	
	comm. Ch. F0522					
1633	Rain Channel (under Bonnet)	1	1	3	0	

PROPELLOR SHAFT SHROUD AND FOOTWELL.

1222	Propellor Shaft Shroud	1	1	1	5	0
1123	" " " Bottom Plate	1	1		3	11
1438	Platform for ditto	2	2		1	4
361	Dome Nuts	6	6			6
979	Support Bracket for Platform (Short)	1	1		2	7
1001	'U' Clip for ditto (Short)	1	1			4
1211	Support Bracket for Platform (Long)	1	1		3	0
1212	'U' Clip for ditto (Long)	1	1			6
1174	Footwell	1	1		9	10
1436	Angle Plate for Footwell Front End	2	2			4
1437	" " " " Rear End	2	2			4

SPARE WHEEL CARRIER.

1193	Spare Wheel Hub	1	}	1	7	0
1194	" " Locknut and Sleeve	1				
P303	" " Carrier Assembly with R.W. Centre			2	7	4
1321	" " " Bracket		1		2	6
1322	" " " Distance Tube		1			8
1417	" " " Support Channel		1	10	10	
1382	" " " Special Nut		1		5	4
1383	" " " Tie Bar		1		8	6
1384	" " " Trough		1		3	8
1385	" " " Tyre Clip		1		8	6
1386	" " " Body Support		1		4	9
1389	" " " Body Fitting L.H.		1		2	1
1391	" " " Nut for Body Sppt.		1			4
1392	" " " Trough Support		1		1	7
1395	" " " Special Washer for Tie Bar		1			3
1479	" " " Trough Clip		1		8	6
1455	" " " Rubber Bush for Body		1			6
B220/110	" " " Block	1			11	0
B220/111	Bolts for ditto	4			2	4
P309	Spare Wheel Centre Assembly		1		7	0
1621	" " Carrier Support Channel for Two Wheels		1		12	6

LUGGAGE CARRIER ASSEMBLY.

P307	Luggage Carrier Assembly		1	1	12	0
1418	Slide Fitting in Flap for Sppt. Arm N.S.		1		3	6
1419	" " " " " O.S.		1		3	6

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
1420	Luggage Carrier Support Arm		2	5	6	
1421	Wing Nut for ditto		2	1	8	
1422	Grub Screw for ditto		2		3	
1424	Support Clip on Flap for Arm		2		3	
1426	N.S. Hinge on Body		1	1	6	
1431	N.S. Hinge on Flap		1	1	3	
1427	O.S. Hinge on Body		1	1	6	
1432	O.S. Hinge on Flap		1	1	3	
1430	Swivel Pin Bracket for Hinge		2	1	10	
1423	Bottom Fixing Block for Support Arm		2	3	11	
1425	Body Fixing Bracket for ditto		2		4	
1439	Studs for ditto		4		3	

HOOD AND SIDESCREENS.

B221/105	Hood Canopy	1		2	10	0
B221/106	" Bag	1			15	0
B220/134	" Rest O.S.	1			7	0
B220/135	Hood Rest N.S.	1			7	0
B220/137	" Strap	2			2	0
B220/138	" to Screen Attachment	2			4	6
B221/103	Rigid Side Screen O.S.	1		1	1	0
B221/104	" " " N.S.	1		1	1	0
B220/127	Side Flap Rear O.S.	1			11	0
B220/128	" " " N.S.	1			11	0
B128/119	" Curtain Sockets	4				10

FLOOR BOARDS AND MATS.

B221/101	Floor Board Large O.S.	1			7	0
B222/102	" " " O.S.		1		7	0
B221/102	" " " N.S.	1			7	0
B222/103	" " " N.S.		1		7	0
B220/118	" " Small O.S.	1	1		5	0
B220/119	" " " N.S.	1	1		5	0
1469	" " Pedal Strip	1				3
B220/104	Carpet Mat O.S. Front	1	1		9	0
B220/105	" " " N.S. "	1	1		9	0
B221/100	" " Centre	1	1		7	0
B220/107	" " for Footwell	1	1		7	0
B220/108	" " for Heel Board	1	1		6	0
B220/109	Rubber Mat	2	2		2	0
B128/7	Lift the Dot Fasteners complete		as requ'd.			6

SEATS AND FIXINGS.

B220/100	Bucket Seat less Cushion	2		2	10	0
B222/100	" " " "		2		2	10
B220/101	" " Cushion	2	2		1	5
B220/112	" " Adjusting Plate	4	4		2	6
B220/113	" " " Wing Nut	4	4			
1459	Seat Fixing Draught Excluder Plate	4	4			6

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
B220/102	Rear Seat Cushion	1	1	3	0	0
B220/103	" " Squab	1		1	5	0
B222/101	" " "		1	1	5	0
B220/140	" " Pan	1	1	1	15	0
B220/147	Air Bag for Bucket Seat	2	2		15	0
B220/148	" " Rear Seat	2	2		15	0

LOCKS AND HANDLES.

B220/120	Door Handle O.S.	1			5	0
B220/121	" " N.S.	1			5	0
B222/1	" " with Lock and 2 Keys		2		15	0
B220/129	" Lock O.S.	1			3	3
B220/130	" " N.S.	1			3	3
B128/120	Boot Lid Lock	1	2		2	0
B128/121	Escutcheon Plate for ditto	1	2		1	6
B128/113	Boot Lid Key	1	1		1	0
B222/5	Sliding Roof Lock		2		10	0
B222/106	" " Handle		1		1	0
B222/113	Inside Door Handle O.S.		1		5	0
B222/114	" " " N.S.		1		5	0

WINDSCREEN AND DOOR GLASSES.

B220/141	Windscreen Glass	1			1	18	9
B222/111	" " "		1		2	1	3
B220/142	" Frame comp. less Glass	1			6	10	0
B222/112	" " " " " "		1		6	10	0
B222/115	Door Glass Rear		2		1	3	5
B222/116	" " Front (for Bodies with Window Winder)		2		1	8	4
B222/123	" " " (Sliding Type)		2		1	4	10
B222/117	Rear Light Glass		1		1	6	7

MISCELLANEOUS FITTINGS.

B222/2	Window Winder comp. O.S.		1		1	0	0
B222/3	" " " N.S.		1		1	0	0
B222/104	" " Handle O.S.		1			5	0
B222/105	" " " N.S.		1			5	0
B220/139	Tool Box	1	1			15	0
B220/122	Bonnet Rest O.S.	1	1			5	6
B220/123	" " N.S.	1	1			5	6
B128/118	" " Tape	1	1	Length	2	6	
B222/6	Roof Lamp		1			8	0
B222/4	Rear Window Blind with Fittings		1		1	5	0
B220/143	Facia Board	1			2	0	0
B222/118	" " "		1		2	0	0
B220/136	Rear Number Plate Tie Bar	1				3	0
B222/108	Door Check Strap		2			2	0
B222/107	Sliding Roof Channel		2			10	0

Part No.	Description	No. Used		Price Each		
		Open	Closed	£	s.	d.
B128/109	Alum. Body Beading (Top of Body)	1	Set	15	0	
B220/144	" " " (Top of Body)					
B222/120	" " " (Btm. of Body)					
B222/109	" Drip Beading 1/4" wide	1	Set	1	16	0
B222/119	" Rain Channel for Roof and Luggage Carrier					
B220/124	Rubber Door Buffers	2	2	1	0	
B220/145	Door Hinge O.S.	2		2	6	
B220/146	" " N.S.	2		2	6	
B222/121	" " O.S.		2	2	6	
B222/122	" " N.S.		2	2	6	
1408	Plates for Body Mounting Rear	4	4		7	
1482	Rubber Seal Fixing Plate	2	2		2	
1457	Support Bracket for Glove Pocket		2	1	1	

TOOL KIT.

Tool Roll	1	1	4	0	
Screwdriver 10"	1	1	1	6	
Tyre Levers	2	2		9	
Adjustable Spanner	1	1	2	8	
Pliers 6" pair	1	1	1	0	
Box Spanner 1/2"	1	1		10	
" " 3/8"	1	1	1	1	
" " 1/2" and 3/4" D.E.	1	1		10	
" " 1/2" and 3/4" D.E.	1	1		8	
" " 1/2" and 3/4" D.E.	1	1		6	
Tommy Bar	1	1		3	
Tappet Spanner with Feeler Gauge	1	1	1	0	
" " (Locking)	1	1		9	
Spanner 1/2" x 1/8" D.E.	1	1		6	
" 3/8" x 1/8" D.E.	1	1		10	
" 1/2" x 1/8" D.E.	1	1	1	3	
" 1/2"	1	1		10	
Contact Breaker Spanner	1	1		6	
Grease Gun	1	1	10	6	
Tyre Pump	1	1	7	0	
Jack w. Handle (Shelley Double Lift)	1	1	16	6	
1397 Starting Handle	1	1	4	6	
Hammer for Rudge Hubs	1	1	6	6	
1182 Special Engine Spanner	1	1	1	6	
A288 Grease Gun for Propellor Shaft	1	1	6	0	