

PRICE 2/6

**THE SPARE PARTS
LIST FOR**

THE



MAGNETTE

(K Type)

MARCH, 1935

IMPORTANT

When ordering replacements it is of the greatest assistance to our Service Department if the part required is given its correct reference number and description, and the chassis and engine numbers should be quoted in all correspondence as well as on the order itself, as delay and misinterpretation of orders are thus avoided.

We would also draw your attention to the fact that you will get quicker service if you place all your orders with our Distributors in your territory, who are holding very adequate stocks of M.G. Spares.

The name and address of the nearest Distributors is given in Instruction Manual supplied with the car, and we feel sure that all your requirements will receive every consideration and attention.

May we request you therefore to get into touch with our Distributors for all your future orders ?

The prices quoted are net at the Distributors' or Dealers' premises, but in the event of parts having to be forwarded, packing and postage charges will, of course, be extra.

Except in the case of those who have opened approved accounts, all parts that can be will be forwarded C.O.D.

We cannot stress too highly the *danger* of fitting non-genuine M.G. parts.

Unfortunately cases have come to our notice where accidents have actually been caused by this practice, and we strongly advise all M.G. owners to insist and see that for all repairs and replacements only genuine M.G. parts are fitted.

M.G. parts are specially designed and manufactured to withstand the stresses imposed by high-speed sports cars, and we would warn all owners that the fitting of non-genuine parts renders the guarantee *null* and *void*.

The Company only fit the highest grade and best known proprietary fittings, but we give no guarantee whatsoever in respect of tyres, lamps, electrical equipment, speedometers, clocks, or any other proprietary fittings of any type supplied with the car or otherwise, as such proprietary fittings are usually covered by guarantee issued by their respective manufacturers.

All questions involving the replacement or repair of any such proprietary fittings should therefore be taken up direct with the manufacturers concerned, and not with the M.G. Car Company Ltd.

G.M. - G.T.



CHASSIS NUMBER.....

ENGINE NUMBER.....

BODY NUMBER.....

REGISTRATION NO.....

NAME

ADDRESS

.....

DATE.....

AGENT

**PLEASE FILL IN AND QUOTE REFERENCES IN
CORRESPONDENCE AND WHEN ORDERING
PARTS.**

INDEX

	<i>Page</i>
Accelerator Gear	23
Accessories	26—27
Axle, Front	1—3
Axle, Rear	3—5
Body and Details (Two-seater)	32—33
Body and Details (Four-seater)	34—35
Body and Details (Saloon)	36—38
Bonnet	31
Brake Gear	23
Chassis Frame and Details	1
Controls	23
Dashboard and Fume Excluders	28
Electrical Equipment	28—29
Exhaust System and Silencers	25
Fairings	30—31
Instruments	28—29
Petrol Tank and Pipes	25—26
Power Unit and Installation (K.A. and K.B. Engines) (1087 c.c.)	5—15
Bell Housing and Rear Main Bearing	6
Carburettors	8
Clutch Details	12
Connecting Rods and Pistons	6—7
Crankshaft and Intermediate Main Bearings	6
Cylinder Block	5
Cylinder Head and Valve Gear	7—8
Dynamo and Vertical Drive	8—9
Engine Nosepiece and Front Main Bearing	6
Flywheel	6
Gearbox and Remote Control (Manual type)	12—14
Gearbox and Remote Control (Pre-selector type)	14—15
Lubrication Details	9—11
Magneto and Drive Gear	11—12
Manifolds, Inlet and Exhaust	8
Water Pump and Details	9
Power Unit and Installation (K.D. Engines) (1286 c.c.)	15—23
Bell Housing and Rear Main Bearing	16
Carburettors	18
Clutch Details	21—22
Connecting Rods and Pistons	17
Crankshaft and Intermediate Main Bearing	16—17
Cylinder Block	15—16
Cylinder Head and Valve Gear	17—18
Dynamo and Vertical Drive	19
Electrical Details	21
Engine Nosepiece and Front Main Bearing	16
Flywheel	16—17
Gearbox and Remote Control	22—23
Lubrication Details	20—21
Manifolds, Inlet and Exhaust	18—19
Water Pump and Details	19—20
Propeller Shaft Shroud and Fittings	32
Radiator and Connections	24—25
Shock Absorbers	27
Spare Wheel Carrier and Fittings	32
Springs, Front	3
Springs, Rear	4—5
Steering Gear	24
Sundries	26—27
Tecalemit Grouped Lubricating System	27—28
Tool Kit	38
Wings, Front and Rear	29—30

Do not forget to quote Chassis, Engine and Body Numbers in all correspondence.

Part No.		No. Used						Price Each
								£ s. d.
P339	CHASSIS FRAME ASSEMBLY AND DETAILS							
P332	Chassis frame assembly complete	1	—	—				13 10 0
P339/1	" " " "	—	1	1				15 17 6
P332/1	Front cross tube assembly (between dumb-irons)	1	—	—				1 0 0
P332/2	Starting handle location cross tube assembly ...	1	1	1				2 4 6
1811	Front engine bearer cross tube assembly ...	1	1	1				2 11 6
1810	Cap for front engine mounting ...	1	1	1				2 9
P332/3	Special bolt for ditto ...	2	2	2				10
P332/4	Brake cross shaft cross tube assembly ...	1	1	1				2 9 0
2873	Rear spring front cross tube assembly ...	1	1	1				2 10 0
	Packing piece for brake cross shaft and rear spring front cross tube assembly ...	4	4	4				1 3
1783	Rear spring suspension pin ...	2	2	2				6 2
P339/5	Rear cross tube assembly ...	1	—	—				6 9 0
P332/5	" " " "	—	1	1				6 17 6
1794	Rear sliding trunnion roller ...	4	4	4				4 2
873	Distance piece for ditto ...	2	2	2				11
820	Washer for ditto ...	2	2	2				6 6
1793	Cap for rear cross tube... ..	2	2	2				7 9
2085	Side member (drilled) O/S ...	1	—	—				1 19 0
2086	" " (drilled) N/S ...	1	—	—				1 19 0
1821	" " (drilled) O/S ...	—	1	1				1 19 0
1822	" " (drilled) N/S ...	—	1	1				1 19 0
2083	Front dumb-iron O/S ...	1	—	—				10 6
2084	" " N/S ...	1	—	—				10 6
1763	" " O/S ...	—	1	1				11 8
1764	" " N/S ...	—	1	1				11 8
625	Taper washer for ditto ...	2	2	2				4
1768	Bracket for front sliding trunnion O/S ...	1	1	1				9 0
1769	" " " " N/S ...	1	1	1				9 0
1770	Cover for ditto ...	2	2	2				6 4
1771	Roller for front sliding trunnion ...	4	4	4				4 2
1779	Combined cross tube end bracket and brake cross shaft support ...	2	2	2				10 2
1780	End bracket for rear spring front cross tube	2	2	2				2 9
2036	Front shock absorber bracket O/S ...	1	1	1				4 4
2037	" " " " N/S ...	1	1	1				4 4
2612	Wing stay bracket ...	2	2	2				6 6
2404	Chassis frame reinforcement (front) O/S ...	—	1	1				1 1 3
2405	" " " (front) N/S ...	—	1	1				1 1 3
2406	" " " (rear) O/S ...	—	1	1				9 10
2407	" " " (rear) N/S ...	—	1	1				9 10
2408	" " " (centre)... ..	—	2	2				2 3
1789	Rear cross brace O/S ...	—	1	1				1 1 10
1790	" " " N/S ...	—	1	1				1 1 10
804	Rubber buffer and plate (front axle stop) ...	2	2	2				1 7
805	Backing plate for ditto ...	2	2	2				4
815	Rear axle striking pad ...	2	2	2				3
817	Set screw for ditto ...	2	2	2				2
874	Combined greaser and set screw for rear spring sliding trunnion ...	2	2	2				10
1606	Combined brake pedal and engine bearer bracket ...	1	1	1				7 3
958	Rear engine bearer bracket N/S ...	1	1	1				6 9
959	Location screw for ditto ...	1	1	1				doz. 1 3
	FRONT AXLE AND SPRINGS							
MG362	Front axle assembly less springs and wheels ...	1	1	1				25 0 0
MG362/2	Axle beam with bush for track rod centre lever pin	1	1	1				3 9 4
MG362/118	Bush for track rod centre lever pin ...	2	2	2				2 0 0
MG362/3	Steering knuckle with bushes O/S ...	1	1	—				1 4 6
MG362/4	" " " " N/S ...	1	1	1				

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG362/9		Brake anchor bracket assembly O/S		1	1	1	1	18	2
MG362/10		" " " " " N/S		1	1	1	1	18	2
MG362/161		" Bush for brake cam ...		2	2	2		1	
MG362/132		Brake cable stop bracket ...		2	2	2		4	9
MG362/128		Oil thrower for brake anchor bracket		2	2	2		1	4
MG362/125		Bolt for brake anchor bracket (1 5/8" long)		4	4	4		1	0
MG362/126		" " " " " (1 3/8" long)		4	4	4		1	0
MG362/127		" " " " " (1 1/8" long)		4	4	4		1	0
X101/10		Nut for ditto ...		12	12	12	doz.	1	3
X101/11		Spring washers for ditto ...		12	12	12	doz.		8
MG362/147		Brake cam ...		2	2	2		4	9
MG362/148		Brake cam lever O/S ...		1	1	1		2	9
MG362/149		" " " " " N/S ...		1	1	1		2	9
X101/4		Key for ditto (Woodruff) ...		2	2	2			3
X101/5		Bolt for brake cam lever ...		2	2	2			3
X101/1		Nut for ditto ...		2	2	2	doz.	1	3
X101/2		Spring washer for ditto ...		2	2	2	doz.		8
MG554/7		Brake-shoe with lining ...		4	4	4		16	10
MG554/110		Brake-shoe (bare) ...		4	4	4		15	0
MG362/156		Lining for brake-shoe ...		4	4	4		3	0
MG362/184		Rivets for ditto ...		36	36	36	doz.		5
MG362/160		Damper weight for brake-shoe		4	4	4		2	6
MG362/158		Clevis pin for damper weight ...		8	8	8			3
MG362/159		Spring for ditto ...		8	8	8			3
X362/3		Washer for ditto ...		16	16	16	doz.		2
MG362/150		Fulcrum pin for brake-shoe ...		4	4	4		1	2
X105/13		Washer for ditto ...		4	4	4			3
X105/12		Nut for ditto (external) ...		4	4	4			3
MG362/151		Bridge piece for fulcrum pin ...		2	2	2		11	
MG362/152		Nut for fulcrum pin (internal)...		4	4	4			5
MG362/155		Axis pin for brake-shoe ...		4	4	4		1	3
MG362/154		Roller for brake-shoe ...		4	4	4			6
X554/1		Washer for ditto ...		4	4	4	doz.		5
MG362/157		Spring for brake-shoe ...		2	2	2			3
MG362/7		Front hub (studded) O/S ...		1	1	1		15	0
MG362/8		" " (studded) N/S ...		1	1	1		15	0
MG362/120		Studs for front hubs ...		12	12	12			10
X362/1		Nut for hub studs ...		12	12	12	doz.	1	0
X101/11		Spring washer for ditto ...		12	12	12	doz.		8
MG362/113		Distance washer for steering knuckle...		2	2	2		1	3
MG362/114		Felt washer for steering knuckle		2	2	2			4
MG362/117		Felt retainer ...		2	2	2			6
P151/195		Hub bearing (inner) ...		2	2	2		12	0
MG362/109		Distance tube between bearings		2	2	2		1	2
P101/117		Hub bearing (outer) ...		2	2	2		10	9
MG362/122		Brake-drum ...		2	2	2	3	6	8
MG362/121		Ring washer for brake-drum ...		2	2	2			6
2433		Anti-squeak band for brake-drum		2	2	2			9
2488		Packing for ditto ...		2	2	2			4
MG362/143		Track rod centre lever ...		1	1	1		7	2
MG362/144		Pin for ditto ...		1	1	1		4	7
MG362/145		Thrust washer for ditto ...		1	1	1			9
X348/17		Key for ditto ...		1	1	1			2
X362/2		Slotted nut for ditto ...		1	1	1			3
X110/30		Pinch bolt for track rod centre lever...		1	1	1			3
X105/3		Nut for ditto ...		1	1	1	doz.	1	3
MG362/5		Track rod assembly (short) ...		1	1	1		14	6
MG362/6		" " " (long) ...		1	1	1		16	0
MG362/133		" Track rod tube (short) ...		1	1	1		3	0
MG362/134		" " " (long) ...		1	1	1		4	6
P101/136		Lock nut for ditto (R.H. thread)		2	2	2			4
P101/137		" " " (L.H. thread)		2	2	2			4
MG362/137		Adjustable end for track rod (R.H.)		2	2	2		2	9
MG362/139		Ball seat (inner) ...		2	2	2		2	9
MG362/138		" " (outer) ...		2	2	2		2	9
MG362/140		Spring washer for ditto ...		2	2	2			2
MG362/141		Adjusting screw for ditto ...		2	2	2			9
MG362/142		Adjustable end for track rod (L.H.)		2	2	2		10	
P101/142		Ball cup ...		2	2	2			10
P101/144		Spring for ball joint ...		2	2	2			3
P101/143		End cup for ball joint ...		2	2	2		1	0
P101/138		Steering ball ...		4	4	4		2	0
P101/139		Nut for ditto ...		4	4	4			4
MG367		Draglink assembly ...		1	1	1		17	2
MG367/100		Draglink tube ...		1	1	1		5	0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
P101/130		Lock nut for draglink tube (R.H. thread) ...		1	1	1			4
P101/137		" " " " (L.H. thread) ...		1	1	1			4
MG362/142		Adjustable end (L.H. thread) ...		1	1	1	3	0	
MG367/101		" " (R.H. thread) ...		1	1	1	3	0	
P101/142		Ball cup (inner) ...		2	2	2			10
P101/143		Combined cup and end plug for ball joint (R.H.)		1	1	1	1	0	
P102/106		Ball cup (outer) (L.H.) ...		1	1	1			3
P102/105		End plug for ball joint (L.H.) ...		1	1	1	1	0	
P101/144		Spring for ball joint ...		1	1	1			3
P101/138		Steering ball ...		2	2	2	2	0	
P101/139		Nut for ditto ...		2	2	2			4
MG392		Front springs complete (O/S and N/S) ...		2	2	2	16	8	
MG392/100		Front spring top rebound leaf ...		2	2	2	3	5	
MG392/101		Front spring 2nd rebound leaf ...		2	2	2	3	10	
MG392/102		Front spring main leaf ...		2	2	2	5	4	
MG392/103		Front spring 2nd main leaf ...		2	2	2	3	2	
MG392/104		Front spring 3rd main leaf ...		2	2	2	2	7	
MG392/105		Front spring 4th main leaf ...		2	2	2	2	3	
1939		Front spring top plate							
		Ceased at Chassis No. K.0321		—	2	2	1	3	
1776		Front shock absorber bracket on springs (O/S)							
		Comm. on Saloon and Tourer at Chassis No. K.0322		1	1	1	2	9	
1782		Front shock absorber bracket on springs (N/S)							
		Comm. on Saloon and Tourer at Chassis No. K.0322		1	1	1	2	9	
1777		Front spring bottom plate ...		2	2	2	3	8	
2068		Bolt for front springs ...		8	8	8			8
2302		Stiffening strip for front spring ...		4	4	4			4
2069		Front spring suspension pin ...		2	—	—	2	5	
1765		" " " " " " ...		—	2	2	2	6	
802		Tab washer for ditto ...		2	2	2			4
1772		Dust excluder for front spring ...		2	2	2	1	1	
REAR AXLE, SPRING AND PROPELLER SHAFT									
MG364		Rear axle assembly less springs and wheels ...		1	1	1	33	17	6
MG364/4		Rear axle casing with spring pads ...		1	1	1	4	3	9
X364/3		Taper drain plug for axle casing ...		1	1	1			5
X463/1		Set screw for rear axle front cover ...		10	10	10			2
X364/2		Packing washer for ditto ...		10	10	10	doz.		3
MG364/7		Rear axle front cover complete with differential assembly ...		1	1	1	16	17	0
MG463/1		Rear axle front cover (studded) with differential bearing caps ...		1	1	1	2	14	10
MG463/106		Bolt for differential bearing cap ...		4	4	4	1	0	
X364/8		Dowel bush for ditto ...		4	4	4			2
X463/2		Stud for bevel pinion housing ...		6	6	6			2
MG364/161		Bevel pinion housing ...		1	1	1	9	4	
X110/73		Spring ring for housing ...		1	1	1			7
MG364/163		Thrust washer for bevel pinion ...		1	1	1	1	0	
X364/4		Bevel pinion roller bearing ...		1	1	1	13	3	
MG364/164		Distance tube between bearings ...		1	1	1	1	9	
X364/18		Bevel pinion thrust bearing ...		1	1	1	18	0	
MG364/172		Shim for bevel pinion housing (.003" thick) ...		As required					4
MG364/173		" " " " (.005" thick) ...		As required					5
MG364/174		" " " " (.010" thick) ...		As required					5
MG364/175		" " " " (.020" thick) ...		As required					6
MG364/162		Cap for bevel pinion housing ...		1	1	1	5	0	
P105/127		Countersunk screw for bevel pinion housing ...		2	2	2			3
X105/3		Nut for securing bevel pinion housing cap ...		6	6	6	doz.	1	3
X105/4		Spring washer for ditto ...		6	6	6	doz.		8
MG364/165		Universal joint flange for propeller shaft ...		1	1	1	8	0	
X364/5		Nut for pinion shaft ...		1	1	1			3
X364/6		Washer for ditto ...		1	1	1	doz.		9
MG364/167		Combined oil filler plug and dipstick adapter		1	1	1	1	5	
MG364/168		Spring retainer for oil level dipstick ...		1	1	1			9
X364/7		Set screw for ditto ...		2	2	2	doz.		5
MG364/1		Dipstick (with knob) ...		1	1	1			1 6
MG364/8		Differential complete with crown wheel and bevel pinion ...		1	1	1	11	14	6

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
MG364/2	Differential case complete	1	1	1	1	3	9
MG364/178	Differential wheel	2	2	2	7	6	
X364/10	Differential pinion	2	2	2	5	2	
MG364/179	Differential pinion pin	1	1	1	1	3	
MG364/180	Dowel for ditto	1	1	1			2
MG364/3	Crown wheel and bevel pinion (9/52 ratio) ...	1 pr.	1 pr.	1 pr.	3	3	0
X364/11	Bolt for differential case	8	8	8			6
MG364/181	Nuts for ditto	8	8	8			2
X364/12	Lock washers for ditto	8	8	8			1
X364/13	Bearing for differential	2	2	2	10	10	
P105/158	Adjusting nut for ditto	2	2	2	1	10	
P105/113	Locking washer for ditto	2	2	2			3
MG364/166	Joint for rear axle front cover	1	1	1	doz.		9
X101/10	Nut for securing front cover	10	10	10	doz.	1	3
X101/11	Spring washer for ditto	10	10	10	doz.		8
MG364/171	Rear axle rear cover	1	1	1	2	6	
MG364/166	Joint for rear axle rear cover	1	1	1	doz.		9
X364/9	Set screw for securing rear cover	10	10	10			2
X101/11	Spring washer for ditto	10	10	10			8
MG364/111	Rear axle shaft	2	2	2	1	5	0
MG364/106	Rear hub O/S	1	1	1			15 0
MG364/107	" " N/S	1	1	1			15 0
MG362/9	Brake anchor bracket assembly O/S	1	1	1	1	18	2
MG362/10	" " " " N/S	1	1	1	1	18	2
MG362/161	" Bush for brake cam	2	2	2			1 7
MG362/132	Brake cable stop bracket	2	2	2			4 9
MG362/128	Oil thrower for brake anchor bracket	2	2	2			1 4
MG362/126	Bolt for brake anchor bracket (1 $\frac{3}{8}$ " long) ...	4	4	4			1 0
MG362/127	" " " " (1 $\frac{1}{8}$ " long)	8	8	8			1 0
X101/10	Nut for ditto	12	12	12	doz.	1	3
X101/11	Spring washer for ditto	12	12	12	doz.		8
MG362/150	Brake-shoe fulcrum pin	4	4	4	1	2	
X105/12	Nut for securing ditto to anchor bracket ...	4	4	4			3
X105/13	Washer for ditto	4	4	4			3
MG362/147	Brake cam	2	2	2	4	9	
MG362/148	Lever for brake cam O/S	1	1	1	2	9	
MG362/149	" " " " N/S	1	1	1	2	9	
X101/4	Key for ditto	2	2	2			3
X101/5	Pinch bolt for lever	2	2	2			3
X101/1	Nut for ditto	2	2	2	doz.	1	3
X101/2	Spring washer	2	2	2	doz.		8
MG554/7	Brake-shoe with lining	4	4	4			16 10
MG554/110	Brake-shoe (bare)	4	4	4			15 0
MG362/156	Lining for brake-shoe	4	4	4	3	0	
MG362/184	Rivets for lining	36	36	36	doz.		5
MG362/160	Damper weight for brake-shoe	4	4	4	2	6	
MG362/158	Clevis pin for ditto	8	8	8			3
MG362/159	Spring for ditto	8	8	8			3
X362/3	Washer for ditto	16	16	16	doz.		2
MG362/155	Axis pin for brake-shoe	4	4	4	1	3	
MG362/154	Roller for brake-shoe	4	4	4			6
X363/32	Washer for axis pin	4	4	4	doz.		5
MG362/151	Bridge piece for fulcrum pin	2	2	2			11
MG362/152	Nut for securing ditto	4	4	4			5
X287/14	Washer for ditto	4	4	4	doz.		6
MG362/157	Spring for brake-shoe	2	2	2			3
X364/14	Oil retainer for rear hub (felt)	2	2	2			5
MG364/182	Felt retainer (inner)	2	2	2			5
MG364/184	" " (outer)	2	2	2			3
MG364/5	Rear hub bearing housing (studded)	2	2	2			7 10
MG364/108	Stud for ditto	12	12	12			10
X101/10	Nuts for ditto	12	12	12	doz.	1	3
X101/11	Spring washers for ditto	12	12	12	doz.		8
X364/15	Rear hub bearing	2	2	2	1	10	3
P105/158	Adjusting nut for rear hub bearing (R.H.) ...	1	1	1			1 10
P105/159	" " " " (L.H.)	1	1	1			1 10
P105/113	Locking washer for ditto	2	2	2			3
MG362/122	Brake-drum	2	2	2	3	6	8
MG362/121	Ring washer for brake-drum	2	2	2			6
2433	Anti-squeak band for brake-drum	2	2	2			9
2488	Packing for ditto	2	2	2			4
MG434	Rear springs complete O/S and N/S	2	---	---			18 0
MG434/100	Rear spring top rebound leaf	2	---	---			4 2
MG434/101	Rear spring 2nd rebound leaf	2	---	---			4 8

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.		DESCRIPTION	No. Used			Price Each		
			2-seater	4-seater	Saloon	£	s.	d.
MG434/102		Rear spring main leaf	2	—	—	7	0	0
MG434/103		Rear spring 2nd leaf	2	—	—	4	5	0
MG434/104		Rear spring 3rd leaf	2	—	—	4	0	0
MG434/105		Rear spring 4th leaf	2	—	—	3	5	0
MG434/106		Rear spring 5th leaf	2	—	—	2	9	0
MG393		Rear spring complete O/S and N/S	—	2	2	18	0	0
MG393/100		Rear spring top rebound leaf	—	2	2	4	2	0
MG393/101		Rear spring 2nd rebound leaf	—	2	2	4	8	0
MG393/102		Rear spring main leaf	—	2	2	7	0	0
MG393/103		Rear spring 2nd leaf	—	2	2	4	5	0
MG393/104		Rear spring 3rd leaf	—	2	2	4	0	0
MG393/105		Rear spring 4th leaf	—	2	2	3	5	0
MG393/106		Rear spring 5th leaf	—	2	2	2	9	0
1798		Rear shock absorber bracket on springs O/S	1	1	1	3	1	0
1799		" " " " " " " " N/S	1	1	1	3	1	0
1797		Rear spring top "plate"	2	2	2	7	0	0
2303		Stiffening strip for rear spring	4	4	4	1	0	0
1805		Bolt for rear spring	8	8	8	8	8	0
1801		Dust excluder for rear spring	2	2	2	1	2	0
1785		Washer for rear spring suspension pin (outer)	2	2	2	doz.	1	4
1784		Radius washer for rear spring suspension pin (inner)	2	2	2	doz.	1	4
1803		Rear axle strap	2	2	2	1	4	0
1804		Rubber block for rear axle strap	2	2	2	10	0	0
When ordering propeller shafts it is essential that, in addition to the Engine No., type of gearbox and Chassis No., the mean length between flanges be quoted if possible.								
A331		Propeller shaft (K.B. engine with manual gearbox) (37 ¹ / ₁₆ " long)	1	—	—	4	12	0
A477		Propeller shaft (K.B. engine with pre-selector gearbox) (35 ³ / ₈ " long)	1	—	—	4	12	0
A498		Propeller shaft (K.D. engine with pre-selector gearbox) (34 ⁷ / ₈ " long)	1	—	—	4	12	0
A369		Propeller shaft (K.B. engine with manual gearbox) (50 ¹³ / ₁₆ " long)	—	1	—	5	3	6
A315		Propeller shaft (K.A. and K.B. engine with pre-selector gearbox) (49 ¹ / ₄ " long)	—	1	1	5	3	6
A494		Propeller shaft (K.D. engine with pre-selector box) (48 ³ / ₈ " long)	—	1	1	5	3	6
811		Bolts for propeller shaft flange	12	12	12	4	0	0
POWER UNIT AND INSTALLATION								
MG412		Power unit complete with manual gearbox and clutch but less remote control (K.B. type) ...	1	1	—	Price on application		
MG348		Power unit complete less gearbox (K.A. type) ...	—	—	1	Price on application		
CYLINDER BLOCK								
MG348/14		Cylinder block (studded) with cover-plates ...	1	1	1	11	15	0
P287/101		Core plug	2	2	2	0	0	0
MG348/102		Cylinder jacket cover-plate (front and rear)	2	2	2	1	0	0
MG348/1		" " " " " " " " (intermediate) ...	1	1	1	6	1	0
X363/19		Studs for water inlet pipe (2 ³ / ₄ " long) ...	1	1	1	3	0	0
X287/5		" " " " " " " " (1 ¹ / ₁₆ " long) ...	1	1	1	doz.	1	6
MG348/297		Joint for cover-plates	3	3	3	4	0	0
X110/4		Set screw for securing cover-plate	18	18	18	3	0	0
X110/5		Washer for ditto	18	18	18	doz.	4	0
P287/107		Drain cock	1	1	1	1	9	0
X287/4		Fibre washer for ditto	1	1	1	doz.	4	0
X348/2		Stud for cylinder head (4 ⁹ / ₁₆ " long) ...	1	1	1	1	9	0
X348/3		" " " " " " " " (4 ⁵ / ₁₆ " long) ...	1	1	1	1	9	0
X348/4		" " " " " " " " (5 ¹ / ₁₆ " long) ...	1	1	1	5	5	0
X348/5		" " " " " " " " (4 ¹³ / ₁₆ " long) ...	7	7	7	5	5	0
X348/6		" " " " " " " " (4 ¹⁵ / ₁₆ " long) ...	8	8	8	5	5	0
X110/93		Dowel for locating front bearing housing ...	1	1	1	doz.	9	0
X110/6		Stud for cylinder head oil drain pipe (rear) ...	2	2	2	3	0	0
949		Stud for oil base (3 ¹³ / ₁₆ " long)	6	6	6	9	0	0
X348/1		" " " " " " " " (3 ¹ / ₁₆ " long)	8	8	8	4	0	0
X348/7		Stud for oil filter (1 ¹ / ₈ " long)	1	1	1	2	0	0
X348/8		" " " " " " " " (1 ¹ / ₁₆ " long)	3	3	3	doz.	1	0
MG348/156		Stud for oil filler	2	2	2	3	0	0
X363/22		Stud for oil gauge adapter (1 ¹ / ₄ " long) ...	1	1	1	3	0	0
X363/8		" " " " " " " " (1 ³ / ₈ " long) ...	1	1	1	doz.	1	6
X348/8		Stud for magneto support bracket	4	4	4	doz.	1	0

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
BELL HOUSING AND REAR MAIN BEARING									
MG348/17		Bell housing with rear main bearing ...		1	1	1	2	1	6
MG348/178		Crankshaft rear main bearing (bush) ...		1	1	1	11		9
X110/13		Grub screw for ditto ...		1	1	1			2
MG348/100		Bolt (bell housing to block) ...		9	9	9			8
X105/4		Spring washer for ditto ...		9	9	9	doz.		8
X239/4		Copper washer for ditto ...		3	3	3	doz.		6
MG348/252		Joint for bell housing ...		1	1	1			3
FRONT MAIN BEARING HOUSING AND ENGINE NOSEPIECE									
MG420/7		Front bearing housing with front main bearing ...		1	1	1	3	3	0
MG420/101		Front main bearing (bush) ...		1	1	1	14		8
MG348/179		Grub screw for ditto ...		1	1	1			10
MG348/253		Joint for front bearing housing ...		1	1	1			3
X110/2		Set screw (housing to cylinder block) ...		7	7	7			3
X105/4		Spring washer for ditto ...		6	6	6	doz.		8
MG348/29		Engine nosepiece and front bearing housing cover		1	1	1	1	17	2
X363/13		Bolt for ditto ...		4	4	4			3
X105/4		Spring washer for ditto ...		4	4	4	doz.		8
X110/11		Set screw for ditto (securing) ...		4	4	4			3
X105/4		Spring washer for ditto ...		4	4	4	doz.		8
MG348/251		Joint for front bearing housing cover ...		1	1	1	doz.	1	0
828		Rubber bush for engine mounting ...		2	2	2	halves		4
CRANKSHAFT INTERMEDIATE MAIN BEARING AND FLYWHEEL									
MG348/25		Crankshaft with plugs ...		1	1	1	8	10	6
MG348/143		Plug for crankpin ...		2	2	2			6
MG348/144		" " " " ...		3	3	3			7
X110/23		Key for crankshaft (magneto drive gear) ...		2	2	2			3
X348/17		" " " " (dynamo drive gear) ...		1	1	1			2
MG348/140		Crankshaft flange (K.A. engine) ...		—	—	1	1	1	0
MG412/101		" " " " (K.B. engine) ...		1	1	—	1	1	0
MG348/145		Nut for crankshaft flange ...		1	1	1			9
X110/24		Key for crankshaft flange ...		1	1	1			6
MG348/181		Thrust washer for crankshaft (rear) ...		1	1	1			1 6
MG348/273		" " " " (front) ...		1	1	1			1 6
MG348/272		Thrust ring for crankshaft ...		1	1	1			1 6
X348/14		Grub screw for ditto ...		1	1	1	doz.		9
MG348/274		Crankshaft spiral gear (driver) ...		1	1	1			9 2
MG348/128		Fan pulley (on crankshaft) ...		1	1	1			5 3
P110/265		Nut starting dog ...		1	1	1			2 4
MG348/27		Intermediate main bearing (front) (top and bottom halves) ...		1	1	1	1	17	9
X287/7		Bolts for ditto (1 $\frac{3}{16}$ " long) ...		2	2	2			4
X105/3		Nut for ditto ...		2	2	2	doz.	1	3
X105/4		Spring washer for ditto ...		2	2	2	doz.		8
MG348/28		Intermediate main bearing (rear) (top and bottom halves) ...		1	1	1	2	2	10
X287/7		Bolts for ditto (1 $\frac{3}{16}$ " long) ...		2	2	2			4
X105/3		Nut for ditto ...		2	2	2	doz.	1	3
X105/4		Spring washer for ditto ...		2	2	2	doz.		8
P287/115		Bolt for securing main bearing (6 $\frac{3}{8}$ " long) ...		4	4	4			1 5
MG348/300		Lock plate for ditto ...		4	4	4			3
MG348/147		Flywheel (K.A. engine) ...		—	—	1	4	10	0
MG412/100		" " " " (K.B. engine) ...		1	1	—	4	10	0
MG348/150		Gearbox coupling flange ...		—	—	1	1	0	0
MG348/148		Flywheel bolt ...		8	8	8			7
X363/31		Nut for ditto ...		8	8	8			3
MG412/103		Spigot bearing housing for 1st motion shaft ...		1	1	—			10 4
X110/28		Spigot bearing for 1st motion shaft ...		1	1	—			8 9
CONNECTING ROD AND PISTONS									
MG348/30		Connecting rod and cap with bolts and small-end bush ...		6	6	6	1	4	10
MG363/205		Bush for small-end ...		6	6	6			1 2
MG384/121		Bolt for connecting rod ...		12	12	12			10
984		Nut for ditto ...		12	12	12			3

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
MG363/4	Piston complete with rings						
	and gudgeon ...	6	6	6	1	0	0
MG363/211	Piston rings (compression)	12	12	12		1	3
MG363/212	" " (scraper) ...	6	6	6		1	4
MG363/202	Gudgeon pin with pads ...	6	6	6		2	4
CYLINDER HEAD AND DETAILS							
MG348/4	Cylinder head assembly complete less manifolds and sparking plugs (K.A. engine) ...	—	—	1	24	10	0
MG412/3	Cylinder head assembly complete less manifolds and sparking plugs (K.B. engine) ...	1	1	—	24	10	0
MG420/8	Cylinder head (studded) with valve guides ...	1	1	1	7	17	6
MG348/194	Valve guides ...	12	12	12		2	3
MG468/121	Washer for valve guides ...	12	12	12	doz.	1	9
X110/100	Stud for cylinder head cover ...	6	6	6			2
X110/6	Stud for camshaft front bearing housing (1" long) ...	2	2	2			3
X348/21	Stud for camshaft intermediate and rear bearing housing (3 ³ / ₁₆ " long) ...	3	3	3			2
X110/6	Stud for camshaft intermediate and rear bearing housing (1" long) ...	6	6	6			3
X363/19	Stud for induction manifold (2 ³ / ₁₆ " long) ...	2	2	2			3
X348/22	" " " " (2 ⁵ / ₈ " long) ...	2	2	2			2
X287/5	" " " " (1 ³ / ₁₆ " long) ...	5	5	5	doz.	1	6
X363/8	Stud for exhaust manifold ...	8	8	8	doz.	1	6
X110/20	Stud for water outlet pipe ...	6	6	6			3
X110/6	Stud for cylinder head oil drain housing ...	4	4	4			3
P287/141	Core plug Ceased Engine No. 581 A.K.	3	3	3			10
X110/38	Core disc... Comm. Engine No. 582 A.K.	3	3	3			4
X101/10	Nut for securing cylinder head ...	18	18	18	doz.	1	3
MG348/294	Inlet valve ...	6	6	6		3	6
MG348/295	Exhaust valve ...	6	6	6		3	6
MG348/192	Valve spring (inner) ...	12	12	12			4
MG348/191	" " (outer) ...	12	12	12			7
MG348/193	Valve spring collar ...	12	12	12			8
P110/184	Split cotters for valves... halves	24	24	24	pr.	1	0
992	Valve rocker ...	12	12	12		7	2
997	Locking screw for valve rocker ...	12	12	12			2
MG363/106	Eccentric bush for valve rocker ...	12	12	12		3	4
X363/11	Spring ring for valve rocker ...	12	12	12	doz.		9
MG348/24	Valve rocker shaft N/S ...	1	1	1		4	2
MG348/23	" " " " O/S ...	1	1	1		4	2
X110/47	Locking screw for ditto ...	2	2	2			3
X110/48	Copper washer for ditto ...	2	2	2	doz.		3
MG348/182	Distance tube for rocker shaft (1 ³ / ₃₂ " long) ...	4	4	4			5
MG348/183	" " " " (1 ¹ / ₃₂ " long) ...	4	4	4			4
MG348/184	" " " " (1 ¹ / ₃₂ " long) ...	4	4	4			4
P110/179	" " " " (1" long) ...	4	4	4			4
MG348/185	Belleville washer for rocker-shaft ...	12	12	12	doz.		9
MG348/186	Steady bracket for rocker-shaft ...	2	2	2		1	9
MG348/119	Rear end support bracket for rocker-shaft ...	1	1	1		12	10
MG348/169	Camshaft (K.A. engine) ...	—	—	1	2	3	2
MG348/168	" (K.B. engine) ...	1	1	—	2	3	2
X363/31	Slotted nut for camshaft ...	1	1	1			3
X348/25	Washer for ditto ...	1	1	1	doz.		6
2362	Tachometer drive adapter ...	1	1	1		2	10
MG348/19	Camshaft front bearing housing with cap ...	1	1	1		19	4
X110/49	Dowel for cap ...	2	2	2	doz.		8
X348/26	Stud for cap ...	2	2	2	doz.	1	0
X101/1	Nut for ditto ...	2	2	2	doz.	1	3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
MG348/175	Camshaft front bearing white metal (top) ...	2	2	2		1	0
MG348/176	" " " " (bottom front) ...	1	1	1		1	0
MG348/177	Camshaft front bearing white metal (bottom rear) ...	1	1	1		1	0
X101/1	Nut for securing housing to head ...	2	2	2	doz.	1	3
X101/2	Spring washer for ditto ...	2	2	2	doz.		8
MG348/20	Intermediate and rear bearing housing with cap ...	3	3	3		14	6
X110/49	Dowel for cap ...	6	6	6	doz.		8
X348/26	Stud for cap ...	3	3	3	doz.	1	0
X101/1	Nut for securing cap ...	3	3	3	doz.	1	3
X101/2	Spring washer for ditto ...	3	3	3	doz.		8

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
MG348/173	Camshaft intermediate and rear bearing white metal (bottom)	3	3	3	1	6	
MG348/174	Camshaft intermediate and rear bearing white metal (top)	3	3	3	1	6	
X101/1	Nut for securing intermediate and rear bearing housing	9	9	9	doz.	1	3
X101/2	Spring washer for ditto	3	3	3		8	
P287/145	Plug for camshaft bearings	4	4	4		3	
X110/48	Washer for ditto	4	4	4	doz.	3	
MG348/18	Camshaft and vertical drive bevel wheels... ..	1 pr.	1 pr.	1 pr.	1	12	10
X101/4	Key for camshaft	1	1	1		3	
MG348/171	Thrust washer for camshaft	2	2	2		10	
MG348/172	Belleville washer for camshaft	2	2	2		7	
P110/202	Washer for camshaft (vertical drive pinion) ...	1	1	1	1	0	
MG348/296	Thrust washer (.112" thick) for vertical drive pinion	As required			1	0	
P110/210	Thrust washer (.172" thick) for vertical drive pinion	As required				7	
P110/211	Thrust washer (.178" thick) for vertical drive pinion	As required				7	
P110/194	Sleeve for vertical drive pinion	1	1	1	9	0	
X110/44	Roller bearing for vertical drive pinion	2	2	2	5	10	
P110/43	Oil retainer plate with felt for vertical shaft ...	1	1	1	3	4	
X110/98	Felt for ditto	1	1	1		3	
P110/196	Oil thrower for vertical drive pinion	1	1	1		7	
MG348/121	Oil drain housing for vertical drive	1	1	1	6	2	
X101/1	Nut for securing ditto	4	4	4	doz.	1	3
X101/2	Spring washer for ditto	4	4	4	doz.	8	
P110/204	Shim for oil drain housing (.003" thick)	As required				3	
P110/205	" " " " (.005" thick)	As required				3	
P110/206	" " " " (.007" thick)	As required				3	
P110/207	" " " " (.010" thick)	As required				5	
P110/208	" " " " (.015" thick)	As required				5	
P110/209	" " " " (.020" thick)	As required				8	
P110/197	Universal joint fork for vertical drive... ..	1	1	1	4	9	
X110/43	Key for ditto	1	1	1		3	
P110/198	Nut for ditto	1	1	1		7	
P110/199	Copper washer for ditto	—	1	1	doz.	8	
MG348/34	Cylinder head gasket	1	1	1	5	0	
MG348/129	Cylinder head cover	1	1	1	2	1	0
MG348/279	Joint for ditto	1	1	1		2	9
MG348/16	Securing nut for cover	6	6	6		1	7
X348/53	Spring ring for ditto	6	6	6	doz.		6
MANIFOLDS AND CARBURETTERS							
MG348/38	Induction manifold (studded) with balance plugs (for 3 carburetters)	1	1	1	1	7	8
X110/6	Stud for carburetters	6	6	6		3	
MG348/167	Balance plug for induction manifold	2	2	2		7	
X348/24	Washer for plug	2	2	2	doz.	9	
MG348/259	Joint for induction manifold	1	1	1	6	11	
X105/3	Nut for securing induction manifold	9	9	9	doz.	1	3
X105/4	Spring washer for ditto	9	9	9	doz.	8	
A334	Carburetters complete (3) with coupling links ...	1 set	1 set	1 set	set	10	10
X363/18	Joint for ditto	3	3	3		2	
X101/1	Nut for securing carburetters	6	6	6	doz.	1	3
MG348/126	Exhaust manifold (front)	1	1	1	1	2	6
MG348/127	" " (rear)	1	1	1	1	2	6
MG348/256	Gasket for manifold (Nos. 1 and 6 cylinders)... ..	2	2	2		3	
MG348/257	" " (Nos. 2 and 5 cylinders)... ..	2	2	2		3	
MG348/258	" " (Nos. 3 and 4 cylinders)... ..	2	2	2		3	
X287/11	Nut for securing manifold	8	8	8		4	
X110/37	Washer for ditto	8	8	8	doz.	8	
MG348/120	Water outlet pipe	1	1	1	1	1	3
MG348/262	Joint for ditto	3	3	3		2	
X101/1	Nut for securing ditto	6	6	6	doz.	1	3
X101/2	Spring washer for ditto	6	6	6	doz.		8
DYNAMO AND VERTICAL DRIVE							
A448	Dynamo complete	1	1	1	7	12	6
MG348/21	Crankshaft and dynamo bevel wheel	1 pr.	1 pr.	1 pr.	pr.	1	13
P110/276	Tab washer for ditto	1	1	1	doz.	1	9
P110/198	Nut for dynamo spindle	1	1	1		7	

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
P110/199	Washer for dynamo spindle (copper)...	1	1	1	doz.	8	
P110/8	Universal joint fork for dynamo with oil thrower ...	1	1	1		5	6
P110/4	Dynamo coupling disc ...	1	1	1		5	6
P110/277	Bolt for ditto ...	4	4	4		6	
X101/1	Nut for ditto ...	4	4	4	doz.	1	3
X101/2	Spring washer for ditto ...	4	4	4	doz.	8	
P110/282	Packing washer for dynamo coupling (.010")	As required			doz.	1	4
P110/283	" " " " (.020")	As required			doz.	1	4
P110/284	" " " " (.030")	As required			doz.	1	4
P110/285	" " " " (.040")	As required			doz.	1	4
P110/286	" " " " (.050")	As required			doz.	1	4
P287/160	Shim for dynamo bottom bevel wheel ...	As required				7	
P110/257	Shim for dynamo base (.003")...	As required				4	
P110/258	" " " " (.005")...	As required				4	
P110/259	" " " " (.007")...	As required				5	
P110/260	" " " " (.015")...	As required				7	
MG348/276	Shim for crankshaft bevel wheel (.003")	As required				3	
MG348/277	" " " " (.005")	As required				3	
MG348/278	" " " " (.007")	As required				3	
X105/14	Set screw for securing dynamo ...	4	4	4		3	
X101/2	Spring washer for ditto ...	4	4	4	doz.	8	
WATER PUMP AND DETAILS							
MG348/5	Water pump assembly ...	1	1	1		2	11 0
MG348/35	Water pump body (studded) ...	1	1	1		16	1
X110/101	Stud for water pump cover (1 $\frac{3}{16}$ " long)	4	4	4	doz.	1	0
X348/18	" " " " (2" long)	2	2	2	doz.	1	0
MG348/109	Cover for water pump ...	1	1	1		6	8
MG348/255	Joint for cover ...	1	1	1		2	
X101/1	Nut for securing cover ...	6	6	6	doz.	1	3
X101/2	Spring washer for ditto ...	6	6	6	doz.	8	
MG348/155	Adapter for water pump ...	1	1	1		9	10
MG489/230	Felt retainer for ditto ...	1	1	1		10	0
1310	Felt for ditto ...	1	1	1		2	
MG348/152	Spindle for water pump ...	1	1	1		11	4
MG348/153	Slip washer for ditto ...	1	1	1		1	8
MG348/154	Pinion for water pump ...	1	1	1		6	2
X110/43	Key for ditto ...	1	1	1			3
MG348/151	Rotor for water pump ...	1	1	1		4	2
1318	Bolt for securing rotor ...	1	1	1		2	
1319	Tab washer for ditto ...	1	1	1		3	
1315	Bush for water pump spindle ...	1	1	1		1	2
1317	Gland nut for water pump spindle ...	1	1	1		2	7
1316	Packing for ditto ...	1	1	1		1	0
MG489/217	Spring for gland nut ...	1	1	1		9	
X348/12	Bolt for securing water pump ...	2	2	2		2	
X105/4	Spring washer for ditto ...	2	2	2	doz.	8	
MG348/2	Water inlet pipe ...	1	1	1		10	10
X105/3	Nut for securing ditto ...	2	2	2	doz.	1	3
X105/4	Spring washer for ditto ...	2	2	2	doz.	8	
MG348/299	Water inlet pipe hose ...	1	1	1		6	
A399	Clip for ditto ...	2	2	2		1	0
P287/187	Joint for water inlet pipe ...	1	1	1		1	3
LUBRICATING SYSTEM							
MG348/31	Oil filler with breather disc ...	1	1	1		11	8
X348/20	Joint for ditto ...	1	1	1			3
X105/3	Nut for securing ditto ...	2	2	2	doz.	1	3
X105/4	Spring washer for ditto ...	2	2	2	doz.	8	
MG348/3	Oil breather disc ...	1	1	1		5	
MG420/117	Oil filler baffle ...	1	1	1		1	4
X110/41	Nut for securing baffle ...	2	2	2		3	
P110/469	Cap for oil filler ...	1	1	1		4	2
MG348/107	Oil base ...	1	1	1		3	12 6
MG348/254	Joint for ditto ...	1	1	1		3	11
X101/1	Nuts for securing oil base ...	14	14	14	doz.	1	3
X101/2	Spring washer for ditto ...	14	14	14	doz.	8	
X105/14	Set screw for ditto ...	4	4	4		3	
MG348/197	Drain plug ($\frac{3}{8}$ " gas) for oil base ...	1	1	1		2	0
X348/16	Washer for ditto ...	1	1	1	doz.	9	
MG363/102	Plug ($\frac{1}{8}$ " gas) for oil base ...	1	1	1		4	
X363/5	Washer for ditto ...	1	1	1	doz.	6	
X363/22	Stud for dipstick adapter ...	2	2	2	doz.	1	0

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG420/116		Dipstick adapter		1	1	1	4	2	
MG348/261		Joint for ditto		1	1	1	doz.	9	
X105/3		Nut for securing adapter		2	2	2	doz.	1	3
X105/4		Spring washer for ditto		2	2	2	doz.	8	
MG420/1		Dipstick		1	1	1	3	2	
P279		Oil strainer assembly		1	1	1	10	0	
P287/159		Fibre washer for oil strainer		1	1	1	doz.	1	0
MG348/12		Oil suction pipe (sump to pump)		1	1	1	3	6	
MG348/213		Union for oil suction pipe (on pump)		1	1	1	1	3	
X348/33		Washer for ditto		1	1	1	doz.	8	
MG348/6		Oil pump assembly		1	1	1	1	17	9
MG348/111		Oil pump body		1	1	1	13	4	
MG348/250		Joint for oil pump		1	1	1	doz.	1	0
MG348/135		Oil pump cover		1	1	1	5	7	
MG348/159		Joint for cover		1	1	1	4		
MG348/164		Plug for cover		1	1	1	4		
MG348/162		Combined spindle and gear for oil pump		1	1	1	6	8	
MG348/160		Oil pump driven gear		1	1	1	10	10	
MG348/161		Spindle for ditto		1	1	1	5		
P239/109		Relief valve for oil pump		1	1	1	7		
MG348/165		Cap nut for relief valve		1	1	1	2	3	
X363/16		Washer for ditto		1	1	1	doz.	1	4
P110/158		Spring for relief valve		1	1	1	4		
X348/9		Set screw for securing oil pump (1 $\frac{7}{8}$ " long)		2	2	2	7		
X348/10		" " " " " " (2 $\frac{5}{8}$ " long)		2	2	2	9		
X348/11		" " " " " " (2 $\frac{1}{2}$ " long)		1	1	1	9		
X101/2		Spring washer for ditto		5	5	5	doz.	8	
MG348/9		Main oil feed pipe (pump to filter)		1	1	1	2	2	
X348/32		Union for ditto		2	2	2	6		
X363/16		Washer for union (on pump)		1	1	1	doz.	1	4
X363/5		" " " " (on filter)		1	1	1	doz.	6	
MG348/32		Oil filter assembly		1	1	1	1	16	9
MG348/36		Oil filter case (studded)		1	1	1	14	7	
X348/38		Plug for filter case		1	1	1	5		
X348/39		Washer for ditto		1	1	1	1		
X348/34		Studs for securing cap		4	4	4	doz.	1	0
MG468/123		Joint for cap		1	1	1	9		
MG468/122		Oil filter cap		1	1	1	4	8	
X105/3		Nut for securing cap		4	4	4	doz.	1	3
X105/4		Spring washer for ditto		4	4	4	doz.	8	
A730		Tecalemit oil cleaner element		1	1	1			
X348/36		Spring for element location		1	1	1	doz.	1	2
MG348/221		Socket for element		1	1	1	9		
MG348/222		Plate for element		1	1	1	doz.	2	3
MG348/219		Oil relief valve body		1	1	1	3	6	
MG348/301		Oil relief valve ball		1	1	1	doz.	1	3
X348/35		Spring for ditto		1	1	1	doz.	1	0
MG348/220		Plug for ditto		1	1	1	3		
MG348/223		Joint for oil filter case		1	1	1	doz.	1	0
X105/3		Nut for securing oil filter case		4	4	4	doz.	1	3
X105/4		Spring washer for ditto		4	4	4	doz.	8	
MG348/8		Front bearing and cylinder head feed pipe		1	1	1	4	4	
X348/29		Union for ditto (on filter)		1	1	1	4		
X348/37		Washer for ditto		1	1	1	doz.	1	0
MG348/166		Union for pipe on front bearing housing		1	1	1	6		
X348/15		Washer for ditto		1	1	1	doz.	1	0
X110/39		Set screw for securing pipe to cylinder head		1	1	1	3		
X110/40		Fibre washer for ditto		1	1	1	doz.	4	
P287/163		Joint for feed pipe on head		1	1	1	4		
P287/144		Oil restrictor pin		1	1	1	1	0	
MG348/13		Main oil feed pipe (bearings)		1	1	1	3	10	
MG348/260		Joint for ditto		2	2	2	doz.	1	0
X105/14		Set screw for ditto		4	4	4	2		
X101/2		Spring washer for ditto		4	4	4	doz.	8	
MG348/166		Union for ditto		1	1	1	6		
MG348/10		Cylinder head oil drain pipe (front)		1	1	1	6	6	
X348/50		Joint for ditto (top)		1	1	1	3		
X348/49		" " " " (bottom)		1	1	1	3		
X468/11		Bolt for securing drain pipe (top)		2	2	2	3		
X101/1		Nut for ditto		2	2	2	doz.	1	3
X101/2		Spring washers for ditto		2	2	2	doz.	8	
X101/1		Nut for securing oil drain pipe (bottom)		2	2	2	doz.	1	3
X101/2		Spring washer for ditto		2	2	2	doz.	8	
MG348/11		Cylinder head oil drain pipe (rear)		1	1	1	4	7	

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
X348/51		Joint for cyl. head oil drain pipe (rear) (top)		1	1	1			3
X348/52		Joint for cyl. head oil drain pipe (rear) (bottom)		1	1	1			3
X348/23		Set screw for securing rear oil drain pipe (top)		1	1	1			4
X239/4		Copper washer for ditto		1	1	1	doz.		6
X101/1		Nut for securing oil drain pipe (bottom)		2	2	2	doz.	1	3
X101/2		Spring washer for ditto		2	2	2	doz.		8
MG348/284		Oil gauge adapter		1	1	1		4	0
MG348/285		Joint for ditto		1	1	1			2
X105/3		Nuts for securing ditto...		2	2	2	doz.	1	3
X105/4		Spring washer for ditto		2	2	2	doz.		8
P110/106		Oil gauge tap		1	1	1		2	3
X348/39		Copper washer for ditto		1	1	1			1

STARTER, MAGNETO DRIVE AND MAGNETO

A375	Starter motor...	1	1	1			6	2	0
P110/111	Starter packing piece	1	1	1				1	9
X110/10	Set screw for securing starter	1	1	1					3
X110/12	Bolt for ditto	2	2	2					3
X101/10	Nut for ditto	2	2	2			doz.	1	3
X101/11	Spring washer for ditto	3	3	3			doz.		8
MG348/7	Magneto drive assembly	1	1	1				4	18 9
MG348/37	Magneto drive casing (bushed and studded)	1	1	1				1	10 0
X363/22	Studs for driven shaft cover	4	4	4			doz.	1	6
X348/40	Studs for driving shaft cover	4	4	4					2
X110/31	Studs for cylinder head oil drain pipe (front)	2	2	2			doz.	1	0
MG348/225	Bush for magneto drive driving shaft	1	1	1					3 0
MG348/227	Magneto drive driving shaft	1	1	1				16	10
MG348/163	Driven gear (bottom) for ditto	1	1	1				10	10
MG348/298	Thrust washer for ditto	1	1	1					8
X348/42	Roller bearing for ditto	1	1	1				13	6
MG348/226	Spring ring for ditto	1	1	1					3
MG348/229	Driving gear (top)	1	1	1				9	4
X348/43	Key for ditto	1	1	1					5
X363/31	Nut for ditto	1	1	1					3
X348/25	Washer for ditto	1	1	1			doz.		6
MG348/230	Magneto drive driven shaft	1	1	1				7	9
X348/48	Ball bearing for ditto (magneto end)	1	1	1				4	2
MG348/231	Distance piece for ditto	1	1	1					6
MG348/232	Oil retaining washer	1	1	1					1
MG348/233	Oil thrower	1	1	1					3
MG348/235	Driving gear (on magneto drive driven shaft)	1	1	1				12	0
X348/47	Ball bearing for shaft (outer end)	1	1	1				5	0
X101/10	Nut for securing magneto drive driven shaft	1	1	1			doz.	1	3
X348/44	Spring washer for ditto	1	1	1			doz.		9
MG348/234	Housing for bearing (outer)	1	1	1				5	10
MG348/236	Shim for housing (.005" thick)	As required							2
MG348/237	" " (.003" thick)	As required							2
MG348/238	" " (.007" thick)	As required							3
MG348/123	Cover for magneto drive casing (over driven shaft)	1	1	1				5	4
MG348/249	Joint for cover	1	1	1			doz.	1	0
X105/3	Nut for securing cover	4	4	4			doz.	1	3
X105/4	Spring washer for ditto	4	4	4			doz.		8
MG348/131	Cover for magneto drive casing (over driving shaft)	1	1	1				3	6
MG348/248	Joint for cover	1	1	1			doz.		9
X348/41	Nut for securing cover	4	4	4			doz.		6
X110/64	Spring washer for ditto	4	4	4			doz.		3
MG348/239	Shim for magneto drive casing (base) (.003" thick)	As required							4
MG348/240	Shim for magneto drive casing (base) (.005" thick)	As required							4
MG348/241	Shim for magneto drive casing (base) (.007" thick)	As required							4
X110/3	Set screw for securing magneto drive casing (1/4" B.S.F. thread)	2	2	2					3
X101/2	Spring washer for ditto	2	2	2			doz.		8
X110/11	Set screw for securing magneto drive casing (5/16" B.S.F. thread)	3	3	3					3
X348/13	Dowel bolt for magneto drive casing	1	1	1					3
X105/3	Nut for ditto	1	1	1			doz.	1	3
X105/4	Spring washers for ditto	4	4	4			doz.		8
MG348/286	Magneto support bracket	1	1	1				7	9

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG348/242		Shim for magneto support bracket (.003") ...		As required					3
MG348/243		" " " " (.005") ...		As required					3
MG348/244		" " " " (.007") ...		As required					3
X105/3		Nut for securing ditto ...		4	4	4	doz.	1	3
X105/4		Spring washer for ditto ...		4	4	4	doz.		8
MG348/287		Magneto base plate ...		1	1	1		7	9
MG348/245		Shim for ditto (.003" thick) ...		As required					3
MG348/246		" " " (.005" thick) ...		As required					4
MG348/247		" " " (.007" thick) ...		As required					4
X348/55		Set screw (support bracket to magneto) ...		2	2	2			4
X101/11		Spring washer for ditto ...		2	2	2	doz.		8
X348/54		Countersunk set screw (base plate to magneto) ...		2	2	2			2
A422		Magneto complete with couplings ...		1	1	1		14	12
X348/46		Key for magneto coupling ...		1	1	1			6
X363/31		Nut for ditto ...		1	1	1			3
X348/45		Washer for ditto ...		1	1	1	doz.		9
MG348/288		Magneto strap ...		1	1	1		2	6
MG348/290		Pin for ditto ...		2	2	2			4
MG348/289		Adjusting screw for strap ...		1	1	1			6
CLUTCH DETAILS									
MG412/108		Clutch driving studs (in flywheel) ...		6	6	—			6
MG412/102		Locating dowel for clutch spring (in flywheel) ...		6	6	—		1	0
MG412/107		Clutch springs ...		6	6	—			4
P239/13		Clutch pressure plate with thrust buttons and linings ...		1	1	—		15	3
P110/472		Thrust button for pressure plate ...		3	3	—			4
P239/125		Lining for pressure plate ...		1	1	—		4	8
X110/65		Rivets for ditto ...		6	6	—	doz.		4
MG412/5		Clutch centre plate (front) complete ...		1	1	—		1	1
MG412/6		" " " (rear) complete ...		1	1	—		1	6
MG412/10		Clutch centre driving plate ...		1	1	—		1	2
P239/125		Lining for ditto ...		2	2	—		4	8
X110/66		Rivets for ditto ...		6	6	—	doz.		4
MG420/4		Clutch cover-plate assembly ...		1	1	—		3	11
MG412/105		Bush for clutch operating pin ...		3	3	—		1	2
P239/125		Lining for clutch cover ...		1	1	—		4	8
X110/66		Rivets for ditto ...		6	6	—	doz.		4
MG412/111		Clutch operating pin ...		3	3	—			3
MG348/201		Clutch finger lever							
		Ceased Engine No. K.B.591		3	3	—		2	10
MG420/109		Clutch finger lever							
		Comm. Engine No. K.B.592		3	3	—		2	10
1036		Adjusting screw for ditto ...		3	3	—			2
X101/1		Lock nut for ditto ...		3	3	—	doz.	1	3
MG412/106		Fulcrum pin for lever ...		3	3	—			6
MG412/11		Clutch operating disc with lining and sleeve ...		1	1	—		15	3
MG412/112		Lining for operating disc ...		1	1	—		3	0
X110/65		Rivets for ditto ...		6	6	—	doz.		4
MG412/115		Spring for operating disc ...		6	6	—			2
X412/4		Pin for ditto ...		3	3	—			2
X412/5		Washer for ditto ...		3	3	—	doz.	1	0
X412/1		Set screw for securing clutch cover to flywheel ...		6	6	—			2
X105/4		Spring washer for ditto ...		6	6	—	doz.		8
1034		Clutch operating shaft ...		1	1	—		10	10
MG412/113		Clutch operating sleeve ...		1	1	—		4	6
S1/7		Greaser for ditto ...		1	1	—			3
MG412/9		Clutch thrust bearing and housing complete ...		1	1	—		19	6
MG412/121		Clutch pedal ...		1	1	—		5	10
P110/422		Cotter pin for ditto ...		1	1	—			5
1144		Return spring for clutch pedal ...		1	1	—			5
1248		Anchor bracket for ditto ...		1	1	—			4
2569		Clutch pedal stop stud ...		1	1	—			3
1287		Adjusting stop for pedal ...		1	1	—			8
MANUAL GEARBOX DETAILS									
MG412/4		Gearbox assembly complete, less clutch pedal, withdrawal, inspection cover, bearer tube and remote control ...		1	1	—		21	0
MG412/12		Clutch housing (bushed and studded) ...		1	1	—		2	8
X363/22		Stud for gearbox casing ...		6	6	—	doz.	1	6

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
X110/93		Dowel for locating gearbox casing ...		2	2	—	doz.	9	
P110/348		Bush for clutch operating shaft O/S ...		1	1	—		3	5
P110/349		" " " " " " N/S ...		1	1	—		1	6
X110/70		Disc for ditto N/S " " " " " " ...		1	1	—	doz.	8	
X110/71		Locking screw for ditto ...		2	2	—		3	
X101/2		Spring washer for ditto ...		2	2	—	doz.	8	
1800		Rear engine bearer tube ...		1	1	—		16	0
2332		Clutch inspection cover ...		1	1	—		1	4
MG363/18		Gearbox case (studded) ...		1	1	—		1	6
X363/12		Stud for securing remote control ...		4	4	—		2	
X363/19		Stud for rear end cover (2 3/4" long) ...		1	1	—		3	
X363/20		" " " " " (1 3/4" long) ...		5	5	—		3	
X363/21		" " " " " (1 3/8" long) ...		1	1	—		3	
X110/93		Dowel for ditto ...		2	2	—	doz.	9	
P110/109		Plug for oil filler and drain ...		2	2	—		1	6
X110/67		Fibre washer for ditto ...		2	2	—	doz.	10	
X105/3		Nut for securing gearbox to clutch housing ...		6	6	—	doz.	1	3
X105/4		Spring washers for ditto ...		6	6	—	doz.	8	
MG412/118		1st motion shaft ...		1	1	—		1	7
MG420/110		Oil feed choke for 1st motion shaft ...		1	1	—		3	4
MG412/119		Plug for 1st motion shaft ...		1	1	—	doz.	9	
P110/366		Oil thrower for ditto (rear) ...		1	1	—		4	
X110/85		Ball bearing for 1st motion shaft ...		1	1	—		8	9
P110/365		Oil thrower for ditto (front) ...		1	1	—		4	
P110/367		Locking nut for ditto (combined oil return) ...		1	1	—		5	2
X110/74		Circlip for ditto ...		1	1	—		3	
MG363/165		Retaining plate for cover securing bolts ...		1	1	—		5	
X363/27		Bolt for securing cover ...		4	4	—		3	
X101/1		Nut for ditto ...		4	4	—	doz.	1	3
X101/2		Spring washer for ditto ...		4	4	—	doz.	8	
X110/75		Sealing washer for cover ...		1	1	—		6	
MG363/164		Cover for 1st motion shaft ...		1	1	—		3	4
MG363/140		Mainshaft ...		1	1	—		13	4
X363/23		Roller bearing spigot ...		1	1	—		4	9
MG363/138		Distance washer ...		1	1	—		1	3
MG363/145		3rd and top speed sliding gear ...		1	1	—		16	10
MG363/146		1st and 2nd speed sliding gear ...		1	1	—		18	4
X110/86		Ball race for mainshaft (rear) ...		1	1	—		11	6
MG363/179		Retaining plate for ditto ...		1	1	—		6	
X112/1		Bolt for ditto ...		2	2	—		3	
X105/3		Nut for ditto ...		2	2	—	doz.	1	3
X105/7		Set screw for ditto ...		1	1	—		3	
X105/4		Spring washers for ditto ...		3	3	—	doz.	8	
P110/410		Speedometer driving gear ...		1	1	—		4	2
P110/411		Speedometer driven gear ...		1	1	—		4	10
P110/389		Thrust button for ditto ...		1	1	—		1	0
P110/409		Bearing for ditto ...		1	1	—		8	9
X110/80		Joint for ditto ...		1	1	—		4	
MG363/177		Rear cover ...		1	1	—		18	4
X105/3		Nut for ditto ...		7	7	—	doz.	1	3
X105/4		Spring washer for ditto ...		7	7	—	doz.	8	
MG363/139		Propeller shaft flange ...		1	1	—		9	4
X105/12		Nut for ditto ...		1	1	—		3	
X105/13		Washer for ditto ...		1	1	—		3	
MG363/141		Layshaft ...		1	1	—		5	0
X363/23		Roller bearing for ditto ...		2	2	—		4	9
MG363/138		Distance washer for ditto ...		4	4	—		1	3
MG363/144		Constant mesh gear ...		1	1	—		14	8
MG363/152		Spring retaining ring for ditto ...		2	2	—	doz.	1	8
MG363/147		3rd speed constant mesh gear ...		1	1	—		19	6
MG363/148		Rollers for ditto ...		23	23	—		2	
MG363/149		Washer for ditto ...		2	2	—		3	
MG363/150		Spring retaining ring for ditto ...		1	1	—	doz.	1	4
MG363/151		3rd and 2nd layshaft gears ...		1	1	—		1	8
P110/362		Locking screw for layshaft ...		1	1	—		2	
X101/2		Spring washer for ditto ...		1	1	—	doz.	8	

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG363/142		Reverse shaft		1	1	—		3	5
MG363/24		Reverse gear (bushed)		1	1	—		12	10
MG363/154		Bush for ditto		1	1	—		2	3
X101/10		Nut for reverse shaft		1	1	—	doz.	1	3
X363/24		Spring washer		1	1	—	doz.		8
MG363/166		Selector shaft (1st and 2nd)		1	1	—		3	10
MG363/170		Selector fork (1st and 2nd)		1	1	—		6	0
MG363/168		Distance piece for ditto (rear)		1	1	—			3
MG363/169		" " " " " (front)		1	1	—			4
MG363/167		Selector shaft (3rd and top)		1	1	—		3	9
MG363/171		Selector fork (3rd and top)		1	1	—		6	0
X110/84		Balls for change speed fork		2	2	—	doz.	1	6
X363/28		Spring for ditto		2	2	—			3
MG489/212		Selector lever (reverse)		1	1	—		5	8
MG363/156		Fulcrum pin for ditto		1	1	—			8
X101/10		Nut for ditto		1	1	—	doz.	1	3
X101/11		Spring washer		1	1	—	doz.		8
MG363/160		Socket for reverse locking plunger		1	1	—		2	0
X363/25		Nut for ditto		1	1	—			2
X363/26		Spring washer for ditto		1	1	—	doz.		8
MG363/161		Plug for ditto		1	1	—			3
MG363/162		Reverse locking plunger		1	1	—			10
MG363/163		Spring for ditto		1	1	—			11
MG363/159		Selector shaft (reverse)		1	1	—		1	6
MG363/157		Selector fork (reverse)		1	1	—		1	8
MG363/158		Distance piece for ditto		1	1	—			3
MG363/178		Locking screw for selector shaft		1	1	—			3
MG363/8		Change speed interlock assembly		1	1	—		3	0

MANUAL GEARBOX, REMOTE CONTROL DETAILS

MG408	Gearbox remote control assembly	1	1	—	3	15	0
MG408/100	Remote control casing	1	1	—	1	9	6
MG408/103	Change speed shaft	1	1	—		12	4
MG408/102	Selector lever	1	1	—		7	8
MG408/101	Gear change lever	1	1	—		7	8
MG408/104	Fulcrum pin for change speed shaft	1	1	—			8
MG408/121	Fulcrum plate for change speed lever	2	2	—			4
MG408/110	Distance piece for ditto	2	2	—			4
MG408/118	Rubber stop for ditto	2	2	—			4
MG408/123	Locking washer for securing bolts	2	2	—			2
MG408/113	Plunger for gear lever	1	1	—	1	0	
MG408/119	Spring for plunger	1	1	—	1	0	
MG408/114	Knob for gear lever	1	1	—	2	0	
MG408/115	Change speed gate	1	1	—	9	3	
MG408/127	Reverse stop	1	1	—	4	5	
MG408/128	Fulcrum pin for ditto	1	1	—	1	0	
MG408/105	Ignition and mixture control lever	2	2	—	1	10	
MG408/120	Axis bolt for lever	1	1	—	1	10	
MG408/109	Distance piece between levers	1	1	—	1	10	
MG408/126	Ignition and mixture control rods	2	2	—	3	7	
MG408/117	Instruction plate for ignition control	1	1	—	1	2	
MG408/116	Instruction plate for mixture control	1	1	—	1	2	
MG408/124	Slow running control rod	1	1	—	1	2	
MG408/111	Knob for ditto	1	1	—	2	1	
MG408/125	Petrol tap control rod	1	1	—	1	2	
MG408/112	Knob for ditto	1	1	—	2	1	
MG408/108	Rubber washer for ditto	2	2	—			4
MG408/107	Instruction plate for slow running and petrol control	1	1	—	1	2	
MG408/106	Core disc for casing	1	1	—			8
S1/4	Greaser for remote control	2	2	—			5
X101/1	Nut for securing remote control casing	4	4	—	doz.	1	3
X101/2	Spring washer for ditto	4	4	—	doz.		8

PRE-SELECTOR GEARBOX

MG404	Pre-selector gearbox complete with remote control less clutch operating details	—	—	1	Price on application
MG404/347	Housing (between gearbox and bell housing)	—	—	1	5 16 0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
2336		Clutch pedal		—	—	1	12	0	
P110/422		Cotter pin for ditto		—	—	1			5
2339		Clutch operating rod		—	—	1	1	0	
2337		Fork end for ditto		—	—	2	1	4	
2338		Clevis pin for ditto		—	—	2			4
2340		Clutch pedal shaft		—	—	1	10	10	
265		Return spring for clutch pedal		—	—	1			4
2441		Bracket for ditto		—	—	1			6
MG404/282		Propeller shaft coupling flange		—	—	1	1	0	0
MG348/291		Spider for 1st motion shaft		—	—	1	9	3	
MG348/292		Fabric disc for ditto		—	—	1	8	3	
X348/56		Bolt for connecting ditto to flywheel... ..		—	—	6			8
X363/31		Nut for ditto		—	—	6			3

PRE-SELECTOR GEARBOX REMOTE CONTROL ASSEMBLY

MG404/1	Remote control assembly	—	—	1	7	6	3
MG404/300	Remote control housing	—	—	1	2	0	0
MG404/301	Gear control turret (R.H.)	—	—	1	10	6	
MG404/348	" " " (L.H.)	—	—	1	10	6	
MG404/331	Change speed shaft	—	—	1	4	0	
MG104/305	Bevel wheel (on shaft)	—	—	1	1	0	0
MG404/306	" " (on change speed lever)	—	—	1	1	0	0
MG404/308	Change speed lever	—	—	1	8	0	
MG404/309	Knob for change speed lever	—	—	1	8	8	
MG404/317	Fulcrum pin for change speed lever	—	—	1	5	0	
MG404/318	Distance piece for ditto	—	—	1	1	0	
MG404/321	Ignition and mixture control levers	—	—	2	8	8	
MG404/310	Sector plate for change speed lever (counter-sunk)	—	—	1	2	8	
MG404/311	Sector plate for change speed lever (plain)	—	—	1	2	8	
MG404/313	Plunger for change speed lever	—	—	1	1	0	
MG404/314	Guide for ditto	—	—	1	1	4	
MG404/315	Spring for ditto	—	—	1	1	6	
MG404/316	Thrust button for ditto	—	—	1	1	0	
MG404/307	Change speed gate	—	—	1	4	0	
MG404/322	Mixture and ignition control rods	—	—	2	5	0	
MG404/320	Mixture control instruction plate	—	—	1	5	0	
MG404/319	Ignition control instruction plate	—	—	1	5	0	
MG404/323	Petrol tap control rod	—	—	1	2	0	
MG404/329	Knob for ditto	—	—	1	6	0	
MG404/328	Petrol tap instruction plate	—	—	1	2	0	
MG404/324	Slow running control rod	—	—	1	2	0	
MG404/327	Knob for ditto	—	—	1	6	0	
MG404/326	Instruction plate for ditto	—	—	1	2	0	
MG404/330	Rubber bushes for petrol tap and slow running control rods	—	—	2	1	0	
MG404/332	Change speed gear selector lever	—	—	1	9	0	
MG404/333	Change speed gear selector rod	—	—	1	1	0	
MG404/338	Fork end for ditto	—	—	2	4	0	

K.D. POWER UNIT AND INSTALLATION

MG468	Power unit complete less gearbox and remote control	1	1	1	Price on application			
-------	--	---	---	---	----------------------	--	--	--

CYLINDER BLOCK

MG468/2	Cylinder block (studded) with cover-plates	1	1	1	11	15	0
P287/101	Core plug for cylinder block	2	2	2			8
MG348/102	Cylinder jacket cover-plate (front and rear)	2	2	2	1	0	
MG318/1	Cylinder jacket cover-plate (intermediate)	1	1	1	6	1	
X363/19	Stud for water inlet pipe ($2\frac{3}{4}$ " long)	1	1	1			3
X287/5	" " " " ($1\frac{3}{16}$ " long)	1	1	1	doz.	1	6
MG348/297	Joint for cover-plate	3	3	3			4
X110/4	Set screw for securing cover-plates	18	18	18			3
X110/5	Washer for ditto	18	18	18	doz.		4
P287/107	Drain cock	1	1	1			1 9
X287/4	Fibre washer for ditto	1	1	1	doz.		4
X348/2	Stud for cylinder head ($4\frac{9}{16}$ " long)	1	1	1			1 9
X348/2	" " " " ($4\frac{9}{16}$ " long)	1	1	1			1 9
X348/4	" " " " ($5\frac{1}{16}$ " long)	1	1	1			5

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
N348/5	Stud for cylinder head ($4\frac{13}{16}$ " long) ...	7	7	7			5
N348/6	" " " " ($4\frac{13}{16}$ " long) ...	8	8	8			5
X110/93	Dowel for locating front bearing housing ...	1	1	1	doz.		9
949	Stud for oil base ($3\frac{13}{16}$ " long) ...	6	6	6			9
N348/11	" " " " ($3\frac{1}{2}$ " long) ...	8	8	8			4
N348/7	Stud for oil filter case ($1\frac{7}{8}$ " long) ...	1	1	1			2
N348/8	" " " " ($1\frac{1}{16}$ " long) ...	3	3	3	doz.	1	0
N363/22	Stud for oil gauge adapter ($1\frac{1}{8}$ " long) ...	1	1	1	doz.	1	0
N363/8	" " " " ($1\frac{1}{8}$ " long) ...	1	1	1	doz.	1	6
BELL HOUSING AND REAR MAIN BEARING							
MG348/17	Bell housing with rear main bearing ...	1	1	1	2	1	6
MG348/178	Crankshaft rear main bearing (bush) ...	1	1	1		11	9
X110/13	Grub screw for ditto ...	1	1	1			2
MG348/100	Bolt (bell housing to cylinder block) ...	9	9	9			8
X105/4	Spring washer for ditto ...	9	9	9	doz.		8
N239/4	Copper washer for ditto ...	3	3	3	doz.		6
MG348/252	Joint for bell housing ...	1	1	1			3
FRONT MAIN BEARING HOUSING AND COVER							
MG468/3	Front bearing housing with front main bearing (bush) ...	1	1	1	3	3	0
MG420/101	Front main bearing (bush) ...	1	1	1		14	8
MG348/179	Grub screw for ditto ...	1	1	1			10
MG348/253	Joint for front bearing housing ...	1	1	1			3
X110/6	Stud for front oil drain pipe ...	2	2	2			3
X110/11	Set screw (housing to cylinder block) ...	7	7	7			3
X105/4	Spring washer for ditto ...	6	6	6	doz.		8
MG348/29	Engine nose-piece with front bearing housing cover	1	1	1	1	17	2
N363/13	Bolt for ditto ...	4	4	4			3
X105/4	Spring washer for ditto ...	4	4	4	doz.		8
X110/11	Set screw for securing ditto to front bearing housing ...	4	4	4			3
X105/4	Spring washer for ditto ...	4	4	4	doz.		8
MG348/251	Joint for front bearing housing cover ...	1	1	1	doz.	1	0
828	Rubber bush for engine mounting ...	2	2	2			4
CRANKSHAFT INTERMEDIATE MAIN BEARING AND FLYWHEEL							
MG489/34	Crankshaft with plugs (supplied with flange nut Part No. MG489/202) ...	1	1	1	8	11	3
MG348/143	Plug for crankpin (short) ...	2	2	2			6
MG348/144	" " " (long) ...	3	3	3			7
X110/23	Key for crankshaft (distributor drive gear) ...	2	2	2			3
N348/17	" " " (dynamo drive gear) ...	1	1	1			2
MG348/149	Crankshaft flange ...	1	1	1	1	1	0
MG348/145	Nut for ditto ($\frac{5}{8}$ " B.S.F.) } State size ...	1	1	1			1
MG489/202	" " " ($\frac{3}{4}$ " B.S.F.) } required ...	1	1	1			1
X110/24	Key for ditto ...	1	1	1			6
MG348/181	Thrust washer for crankshaft (rear) ...	1	1	1			1
MG348/273	" " " (front) ...	1	1	1			1
MG348/272	Thrust ring for crankshaft ...	1	1	1			1
X348/14	Grub screw for ditto ...	1	1	1	doz.		9
MG348/274	Crankshaft spiral gear ...	1	1	1			9
MG348/128	Fan pulley (on crankshaft) ...	1	1	1			5
P110/265	Nut (starting dog) (on crankshaft) ...	1	1	1			2
MG348/28	Intermediate main bearing (rear) top and bottom halves ...	1	1	1	2	2	10
N287/7	Bolt for ditto ($1\frac{3}{16}$ " long) ...	2	2	2			4
X105/3	Nut for ditto ...	2	2	2	doz.	1	3
X105/4	Spring washer for ditto ...	2	2	2	doz.		8
MG348/27	Intermediate main bearing (front) top and bottom halves ...	1	1	1	1	17	9
N287/7	Bolt for ditto ($1\frac{3}{16}$ " long) ...	2	2	2			4
X105/3	Nut for ditto ...	2	2	2	doz.	1	3
X105/4	Spring washer for ditto ...	2	2	2	doz.		8
P287/115	Bolt for securing intermediate main bearing ($6\frac{5}{8}$ " long) ...	4	4	4			1
MG348/300	Lock plate for ditto ...	4	4	4			3
MG468/115	Flywheel ...	1	1	1	4	10	0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG348/148		Bolt for flywheel		8	8	8			7
X363/31		Nut for ditto		8	8	8			3
MG468/116		Clutch friction plate on flywheel		1	1	1	1	6	0
MG468/118		Dowel for ditto		2	2	2			3
X468/1		Bolt for ditto		8	8	8			1
X105/3		Nut for ditto		8	8	8	doz.	1	3
X105/4		Spring washer for ditto		8	8	8	doz.		8
MG468/117		Spigot bearing housing for 1st motion shaft		1	1	1	1	3	3
X110/28		Ball bearing for ditto		1	1	1		8	9
MG468/120		Retaining plate for ditto		1	1	1			4
CONNECTING ROD AND PISTONS									
MG348/30		Connecting rod with cap and bolts		6	6	6	1	4	10
MG363/205		Bush for small end		6	6	6		1	2
MG384/121		Bolt for connecting rod		12	12	12			10
984		Nut for ditto		12	12	12			3
MG363/4		Piston complete with rings and gudgeon	Always quote size when ordering	6	6	6	1	0	0
MG363/211		Piston ring (compression)		12	12	12		1	3
MG363/212		" " (scraper)		6	6	6		1	4
MG363/202		Gudgeon pin with pads		6	6	6		2	4
CYLINDER HEAD DETAILS									
MG468/5		Cylinder head assembly complete less manifolds and sparking plugs		1	1	1	24	10	0
MG468/6		Cylinder head (studded) with valve guides		1	1	1	8	7	6
MG348/194		Valve guide		12	12	12		2	3
MG468/121		Washer for ditto		12	12	12	doz.	1	9
X110/100		Stud for cylinder head cover		6	6	6			2
X110/6		Stud for camshaft front bearing housing		2	2	2			3
X348/21		Stud for camshaft intermediate and rear bearing housing (3 11/16" long)		3	3	3			2
X110/6		Stud for camshaft intermediate and rear bearing housing (1" long)		6	6	6			3
X287/5		Stud for induction manifold (1 3/16" long)		7	7	7	doz.	1	6
X348/8		" " " " (1 1/16" long)		2	2	2	doz.	1	0
X420/4		Stud for exhaust manifold		8	8	8			2
X110/20		Stud for water outlet pipe		6	6	6			3
X110/6		Stud for oil drain housing		2	2	2			3
X468/10		Stud for cylinder head front flange (cylinder head to radiator bracket)		2	2	2			3
X101/10		Nut for securing cylinder head		18	18	18	doz.	1	3
MG348/294		Inlet valve		6	6	6		3	6
MG348/295		Exhaust valve		6	6	6		3	6
MG348/192		Valve spring (inner)		12	12	12			4
MG348/191		" " (outer)		12	12	12			7
MG348/193		Collar for valve spring		12	12	12			8
P110/184		Split cotter for valve ... halves		24	24	24	pair	1	0
992		Valve rocker		12	12	12		7	2
997		Locking screw for ditto		12	12	12			2
MG363/106		Eccentric bush for valve rocker		12	12	12		3	4
X363/11		Spring ring for valve rocker		12	12	12	doz.		9
MG348/23		Valve rocker-shaft O/S		1	1	1		4	2
MG348/24		" " " " N/S		1	1	1		4	2
X110/47		Locking screw for ditto		2	2	2			3
X110/48		Copper washer for ditto		2	2	2			3
MG348/182		Distance tube for valve rocker (1 37/32" long)		4	4	4			5
MG348/183		" " " " " (1 1/32" long)		4	4	4			4
MG348/184		" " " " " (13/16" long)		4	4	4			4
P110/179		" " " " " (3/4" long)		4	4	4			4
MG348/185		Belleville washer for ditto		12	12	12	doz.		9
MG348/186		Steady bracket for rocker-shaft		2	2	2		1	9
MG348/119		Rear end support bracket for rocker-shaft		1	1	1		12	10
MG348/169		Camshaft		1	1	1		2	3
X363/31		Slotted nut for ditto		1	1	1			3
X348/25		Washer for ditto		1	1	1	doz.		6
2362		Tachometer drive adapter		1	1	1		2	10
MG348/19		Camshaft front bearing housing with cap		1	1	1		19	4
X110/49		Dowel for cap		2	2	2	doz.		8
X348/26		Stud for cap		2	2	2	doz.	1	0
X101/1		Nut for securing cap		2	2	2	doz.	1	3
X101/2		Spring washer for ditto		2	2	2	doz.		8

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG348/175		Camshaft front bearing white metal (top) ...		2	2	2	1	0	
MG348/176		"bottom" ... " " " " (front		1	1	1	1	0	
MG348/177		Camshaft front bearing white metal (rear							
		bottom) ... " " " " ...		1	1	1	1	0	
X101/1		Nut for securing camshaft front bearing							
		housing ... " " " " ...		2	2	2	doz.	1	3
X101/2		Spring washer for ditto ... " " " " ...		2	2	2	doz.		8
MG348/20		Camshaft intermediate and rear bearing housing							
		with cap ... " " " " ...		3	3	3	14	6	
X110/49		Dowel for cap ... " " " " ...		6	6	6	doz.		8
X348/26		Stud for cap ... " " " " ...		3	3	3	doz.	1	0
X101/1		Nut for securing cap ... " " " " ...		3	3	3	doz.	1	3
X101/2		Spring washer for ditto ... " " " " ...		3	3	3	doz.		8
MG348/173		Camshaft intermediate and rear bearing white							
		metal (bottom half) ... " " " " ...		3	3	3	1	6	
MG348/174		Camshaft intermediate and rear bearing white							
		metal (top half) ... " " " " ...		3	3	3	1	6	
X101/1		Nut for securing camshaft intermediate and							
		rear bearings ... " " " " ...		9	9	9	doz.	1	3
X101/2		Spring washer for ditto ... " " " " ...		3	3	3	doz.		8
P287/145		Plug for camshaft bearing ... " " " " ...		4	4	4			3
X110/48		Washer for ditto ... " " " " ...		4	4	4	doz.		3
MG348/18		Camshaft and vertical drive bevel wheels...		1 pr.	1 pr.	1 pr.	pr. 1	12	10
X101/4		Key for camshaft ... " " " " ...		1	1	1			3
MG348/171		Thrust washer for camshaft ... " " " " ...		2	2	2			10
MG348/172		Belleville washer for camshaft ... " " " " ...		2	2	2			7
P110/202		Washer for camshaft ... " " " " ...		1	1	1	1	0	
MG348/296		Thrust washer for vertical drive pinion ...		1	1	1	1	0	
P110/194		Sleeve for vertical drive pinion ... " " " " ...		1	1	1	9	0	
X110/44		Roller bearing for vertical drive pinion ...		2	2	2	5	10	
P110/43		Oil retainer plate for ditto with felt ...		1	1	1	3	4	
X110/98		Felt washer for ditto ... " " " " ...		1	1	1			3
P110/196		Oil thrower for vertical drive pinion ...		1	1	1			7
MG348/121		Oil drain housing for vertical drive pinion ...		1	1	1	6	2	
X101/1		Nut for securing ditto ... " " " " ...		2	2	2	doz.	1	3
X101/2		Spring washer for ditto ... " " " " ...		2	2	2	doz.		8
P110/204		Shim for oil drain housing (.003" thick) ...		As required					3
P110/205		" " " " " (.005" thick) ...		As required					3
P110/206		" " " " " (.007" thick) ...		As required					3
P110/207		" " " " " (.010" thick) ...		As required					5
P110/208		" " " " " (.015" thick) ...		As required					5
P110/209		" " " " " (.020" thick) ...		As required					8
P110/197		Universal joint fork for vertical drive pinion ...		1	1	1	4	9	
X110/43		Key for ditto ... " " " " ...		1	1	1			3
P110/198		Nut for ditto ... " " " " ...		1	1	1			7
P110/199		Copper washer for ditto ... " " " " ...		1	1	1	doz.		8
MG348/34		Cylinder head gasket ... " " " " ...		1	1	1	5	0	
MG348/129		Cylinder head cover ... " " " " ...		1	1	1	2	1	0
MG348/279		Joint for ditto ... " " " " ...		1	1	1	2	9	
MG348/16		Nut for securing cylinder head cover ...		6	6	6	1	7	
X348/53		Spring ring for ditto ... " " " " ...		6	6	6	doz.		6
MANIFOLDS AND CARBURETTERS									
MG468/13		Induction manifold (studded) with balance plug							
		(for two carburetters) ... " " " " ...		1	1	1	1	8	10
X468/4		Stud for carburetters ... " " " " ...		4	4	4	doz.	1	0
MG468/110		Balance plug for induction manifold ...		1	1	1			7
X468/2		Fibre washer for ditto ... " " " " ...		1	1	1	doz.		5
MG348/259		Joint for induction manifold ... " " " " ...		1	1	1	6	11	
X105/3		Nut for securing induction manifold ...		5	5	5	doz.	1	3
X468/3		Lock nut for securing induction manifold ...		4	4	4	doz.		6
X105/4		Spring washer for ditto ... " " " " ...		9	9	9	doz.		8
A469		Carburetter complete with links (2) ...		1 pr.	1 pr.	1 pr.	pr. 10	0	0
MG420/114		Joint for carburetters ... " " " " ...		2	2	2			3
X468/3		Lock nut for securing carburetter ...		4	4	4			6
MG348/126		Exhaust manifold (front) ... " " " " ...		1	1	1	1	2	6
MG348/127		" " " " (rear) ... " " " " ...		1	1	1	1	2	6
MG348/256		Joint for exhaust manifold (Nos. 1 and 6							
		cylinders) ... " " " " ...		2	2	2			3
MG348/257		Joint for exhaust manifold (Nos. 2 and 5							
		cylinders) ... " " " " ...		2	2	2			3
MG348/258		Joint for exhaust manifold (Nos. 3 and 4							
		cylinders) ... " " " " ...		2	2	2			3

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	DESCRIPTION	No. Used			Price Each		
		2-seater	4-seater	Saloon	£	s.	d.
X287/11	Nut for securing exhaust manifold	8	8	8			4
X110/37	Washer for ditto	8	8	8	doz.		8
MG348/120	Water outlet pipe	1	1	1		1	3
MG348/262	Joint for ditto	3	3	3			2
X101/1	Nut for securing water outlet pipe	6	6	6	doz.	1	3
X101/2	Spring washer for ditto	6	6	6	doz.		8
DYNAMO AND VERTICAL DRIVE							
X468/5	Copper washer for dynamo spindle (for use with dynamo A484 only)	1	1	1			2
P110/8	Universal joint fork for dynamo with oil thrower (for use with dynamo A448 only)	1	1	1		5	6
MG468/7	Universal joint fork for dynamo with oil thrower (for use with dynamo A484 only)	1	1	1		6	6
P110/4	Dynamo coupling disc	1	1	1		5	6
P110/282	Packing washer for dynamo coupling (.010" thick)	As required			doz.	1	4
P110/283	Packing washer for dynamo coupling (.020" thick)	As required			doz.	1	4
P110/284	Packing washer for dynamo coupling (.030" thick)	As required			doz.	1	4
P110/285	Packing washer for dynamo coupling (.040" thick)	As required			doz.	1	4
P110/286	Packing washer for dynamo coupling (.050" thick)	As required			doz.	1	4
MG468/124	Bolt for dynamo coupling (for use with dynamo A448 only)	2	2	2			6
X468/11	Bolt for dynamo coupling (for use with dynamo A448 only)	2	2	2			3
P110/277	Bolt for dynamo coupling (for use with dynamo A484 only)	4	4	4			6
X101/1	Nut for ditto	4	4	4	doz.	1	3
X101/2	Spring washer for ditto	4	4	4	doz.		8
P110/257	Shim for dynamo base (.003" thick)	As required					4
P110/258	" " " " (.005" thick)	As required					4
P110/259	" " " " (.007" thick)	As required					5
P110/260	" " " " (.015" thick)	As required					7
MG348/276	Shim for crankshaft bevel wheel (.003" thick)	As required					3
MG348/277	" " " " (.005" thick)	As required					3
MG348/278	" " " " (.007" thick)	As required					3
A448	Dynamo complete with nuts 4½" dia. (when ordering please quote Type No.)	1	1	1		7 12	6
P110/198	Nut for dynamo spindle (for use with dynamo A448 only)	1	1	1			7
P110/199	Washer for ditto (for use with dynamo A448 only)	1	1	1	doz.		8
A484	Dynamo complete with nuts 4½" dia. (when ordering please quote Type No.)	1	1	1		10 0	0
X105/14	Set screw for securing dynamo	4	4	4			3
X101/2	Spring washer for ditto	4	4	4	doz.		8
MG348/21	Crankshaft and dynamo bevel wheel (for use with dynamo A448 only)	1 pr.	1 pr.	1 pr.	pr.	1 13	2
MG468/8	Crankshaft and dynamo bevel wheel (for use with dynamo A484 only)	1 pr.	1 pr.	1 pr.	pr.	1 13	2
MG468/114	Tab washer for dynamo bottom bevel (for use with dynamo A484 only)	1	1	1	doz.	1	2
P110/276	Tab washer for dynamo bottom bevel (for use with dynamo A448 only)	1	1	1	doz.	1	9
P287/160	Shim for dynamo bottom bevel	As required					7
WATER PUMP DETAILS							
MG348/5	Water pump complete	1	1	1		2 11	0
MG348/35	Water pump body (studded)	1	1	1		16 1	0
X110/101	Stud for water pump cover (1½" long)	4	4	4	doz.	1	0
X348/18	" " " " (2" long)	2	2	2	doz.	1	0
MG348/255	Joint for water pump cover	1	1	1			2
MG348/109	Water pump cover	1	1	1		6 8	0
X101/1	Nut for securing ditto	6	6	6	doz.	1	3
X101/2	Spring washer for ditto	6	6	6	doz.		8
MG348/155	Water pump adapter	1	1	1		9 10	0
MG489/230	Felt retainer for ditto	1	1	1		10 0	2
1310	Felt for ditto	1	1	1			2
MG348/152	Water pump spindle	1	1	1		11 4	0

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG348/153		Slip washer for water pump spindle ...		1	1	1	1	8	
MG348/154		Water pump pinion ...		1	1	1	6	2	
X110/43		Key for ditto ...		1	1	1		3	
MG348/151		Water pump rotor ...		1	1	1	4	2	
1318		Bolt for securing ditto ...		1	1	1		2	
1319		Tab washer for ditto ...		1	1	1		2	
1315		Bush for water pump spindle ...		1	1	1	1	2	
1317		Gland nut for water pump spindle ...		1	1	1	2	7	
1316		Packing for ditto ...		1	1	1	1	0	
MG489/217		Spring for gland nut ...		1	1	1		9	
X348/12		Bolt for securing water pump ...		2	2	2		2	
X105/4		Spring washer for ditto ...		2	2	2	doz.	8	
MG348/2		Water inlet pipe ...		1	1	1	10	10	
X105/3		Nut for securing ditto ...		2	2	2	doz.	1	3
X105/4		Spring washer for ditto ...		2	2	2	doz.	8	
MG348/299		Hose for water inlet pipe ...		1	1	1		6	
A399		Clips for ditto ...		2	2	2		1	0
P287/187		Joint for water inlet pipe ...		1	1	1		1	0

ENGINE LUBRICATING SYSTEM

P110/28	Oil filler with baffle ...	1	1	1	1	10	
P110/143	Clamp plate for ditto ...	1	1	1	1	4	
X110/1	Set screw for ditto ...	1	1	1	1	doz.	1 3
X101/2	Spring washer for ditto ...	1	1	1	1	doz.	8
P110/469	Cap for oil filler ...	1	1	1	1	4	2
MG348/107	Oil base ...	1	1	1	1	3 12	6
MG348/254	Joint for ditto ...	1	1	1	1	3	11
X101/1	Nuts for securing oil base ...	14	14	14	14	doz.	1 3
X101/2	Spring washer for ditto ...	14	14	14	14	doz.	8
X110/3	Set screw for oil base ...	4	4	4	4		3
MG348/197	Drain plug for oil base ...	1	1	1	1	2	0
X348/16	Fibre washer for ditto ...	1	1	1	1	doz.	9
MG363/102	Plug for oil base ($\frac{3}{8}$ " gas) ...	1	1	1	1		4
X363/5	Fibre washer for ditto ...	1	1	1	1	doz.	6
X363/22	Stud for dipstick adapter ...	2	2	2	2	doz.	1 0
MG468/112	Dipstick adapter ...	1	1	1	1		2 9
MG348/261	Joint for dipstick adapter ...	1	1	1	1	doz.	9
X105/3	Nut for securing ditto ...	2	2	2	2	doz.	1 3
X105/4	Spring washer for ditto ...	2	2	2	2	doz.	8
MG420/1	Dipstick with knob ...	1	1	1	1	3	2
MG348/284	Oil gauge adapter ...	1	1	1	1	4	0
MG348/285	Joint for ditto ...	1	1	1	1		2
X105/3	Nut for ditto ...	2	2	2	2	doz.	1 3
X105/4	Spring washer for ditto ...	2	2	2	2	doz.	8
P110/106	Oil gauge tap ...	1	1	1	1	2	3
X348/39	Copper washer for ditto ...	1	1	1	1		1
P279	Oil strainer assembly ...	1	1	1	1	10	0
P287/159	Fibre washer for ditto ...	1	1	1	1	doz.	1 0
MG348/12	Oil suction pipe (sump to pump) ...	1	1	1	1		3 6
MG348/213	Union for ditto (on pump) ...	1	1	1	1		1 3
X363/16	Washer for union ...	1	1	1	1	doz.	1 4
MG348/6	Oil pump assembly ...	1	1	1	1	1	17 9
MG348/111	Oil pump body ...	1	1	1	1	13	4
MG348/135	Oil pump cover ...	1	1	1	1	5	7
MG348/159	Joint for cover ...	1	1	1	1		4
MG348/164	Plug for cover ...	1	1	1	1		4
MG348/162	Combined spindle and gear for oil pump ...	1	1	1	1	6	8
MG348/160	Oil pump driven gear ...	1	1	1	1	10	10
MG348/161	Spindle for driven gear ...	1	1	1	1		3
P239/109	Relief valve for oil pump ...	1	1	1	1		7
MG348/165	Cap nut for relief valve ...	1	1	1	1	2	3
X363/16	Washer for relief valve ...	1	1	1	1	doz.	1 4
P110/158	Spring for relief valve ...	1	1	1	1		4
MG348/250	Joint for oil pump body ...	1	1	1	1	doz.	1 0
X420/1	Set screw for securing oil pump ($1\frac{7}{8}$ " long) ...	2	2	2	2		7
X420/2	" " " " " ($2\frac{5}{8}$ " long) ...	2	2	2	2		9
X420/3	" " " " " ($2\frac{1}{2}$ " long) ...	1	1	1	1		9
X101/2	Spring washer for ditto ...	5	5	5	5	doz.	8
MG348/9	Main oil feed pipe (pump to filter) ...	1	1	1	1	2	2
X348/32	Union for ditto ...	2	2	2	2		6
X363/5	Copper washer for ditto ...	1	1	1	1	doz.	6
MG468/11	Oil filter assembly ...	1	1	1	1	1	17 6
MG348/36	Oil filter case (studded) ...	1	1	1	1	14	7
X348/34	Stud for securing cap ...	4	4	4	4	doz.	1 0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG468/122		Cap for oil filter...		1	1	1	4	8	
MG468/123		Joint for cap ...		1	1	1		9	
X105/3		Nut for securing cap ...		4	4	4	doz.	1	3
X105/4		Spring washer for ditto ...		4	4	4	doz.		8
A730		Tecalemit oil cleaner element ...		1	1	1	9	6	
X348/36		Spring for element location ...		1	1	1	doz.	1	2
MG348/221		Socket for element ...		1	1	1		9	
MG348/219		Oil relief valve body ...		1	1	1	3	6	
MG348/220		Plug for ditto ...		1	1	1		3	
MG348/301		Oil relief valve ball ...		1	1	1	doz.	1	3
X348/35		Spring for ditto ...		1	1	1	doz.	1	0
MG348/222		Plate for ditto ...		1	1	1	doz.	2	3
MG348/223		Joint for oil filter case ...		1	1	1	doz.	1	0
X105/3		Nut for securing oil filter case ...		4	4	4	doz.	1	3
X105/4		Spring washer for ditto ...		4	4	4	doz.		8
MG348/8		Front bearing and cylinder head oil feed pipe ...		1	1	1	4	4	
P287/163		Joint for flange ...		1	1	1		4	
X110/39		Set screw for securing flange ...		1	1	1		3	
X110/40		Fibre washer for ditto ...		1	1	1	doz.		4
X348/29		Union for pipe on filter ...		1	1	1		4	
X348/37		Washer for ditto ...		1	1	1	doz.	1	0
MG348/166		Union for pipe on front bearing housing ...		1	1	1		6	
X348/15		Washer for ditto ...		1	1	1	doz.	1	0
P287/144		Restrictor pin for cylinder head oil feed pipe ...		1	1	1		1	0
MG348/13		Main oil feed pipe (bearings) ...		1	1	1	3	10	
MG348/260		Joint for ditto ...		2	2	2	doz.	1	0
X105/14		Set screw for ditto ...		4	4	4		3	
X101/2		Spring washer for ditto ...		4	4	4	doz.		8
MG348/166		Union for ditto ...		1	1	1		6	
MG468/1		Cylinder head oil drain pipe (front) ...		1	1	1	6	8	
X348/50		Joint for ditto (top) ...		1	1	1		3	
X348/49		" " (bottom) ...		1	1	1		3	
X101/1		Nut for flange (bottom) ...		2	2	2	doz.	1	3
X101/2		Spring washer for ditto ...		2	2	2	doz.		8
MG468/9		Cylinder head oil drain pipe (rear) ...		1	1	1	5	7	
X348/51		Joint for flange (top) ...		1	1	1		3	
X348/23		Set screw for flange ...		1	1	1		4	
X239/4		Washer for ditto ...		1	1	1	doz.		6
X468/8		Union for rear drain pipe (bottom) ...		1	1	1	2	9	
X468/9		Washer for ditto ...		1	1	1	doz.		6

ENGINE ELECTRICAL DETAILS

A375	Starter (when ordering spares please quote Type No.)	1	1	1	6	2	0
X110/10	Set screw for securing ditto ...	1	1	1			3
X110/12	Bolt for securing ditto ...	2	2	2			3
X101/10	Nut for ditto ...	2	2	2	doz.	1	3
X101/11	Spring washer for ditto ...	3	3	3	doz.		8
P110/111	Starter packing piece ...	1	1	1		1	9
A658	Distributor (when ordering spares please quote Type No.)	1	1	1	2	17	6
X287/13	Set screw for securing ditto ...	1	1	1			2
X101/2	Spring washer for ditto ...	1	1	1	doz.		8
MG420/105	Distributor adapter ...	1	1	1		9	3
MG420/106	Distributor drive shaft ...	1	1	1		4	2
MG420/107	Bush for ditto ...	1	1	1		2	0
MG348/298	Thrust washer for shaft ...	1	1	1			8
MG420/111	Oil pump and distributor drive gear ...	1	1	1		7	9
X110/11	Set screw for securing distributor adapter ...	3	3	3			3
X348/13	Dowel bolt for ditto ...	1	1	1			3
X105/3	Nut for ditto ...	1	1	1	doz.	1	3
X105/4	Spring washer for ditto ...	4	4	4	doz.		8

CLUTCH DETAILS

MG477/1	Clutch cover complete ...	1	1	1	17	9	
MG477/103	Clutch pressure plate ...	1	1	1	18	9	
MG477/104	Driving bolt ...	4	4	4		1	1
MG477/105	Nut for ditto ...	4	4	4			2
MG477/106	Spring for ditto ...	4	4	4			2
MG477/107	Clutch operating pin ...	4	4	4		1	0
MG477/108	Clutch finger lever ...	4	4	4		2	1
MG477/109	Spring for finger lever ...	4	4	4		2	1
MG477/110	Pin for lever ...	4	4	4			8

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG477/2		Clutch plate complete (driven) ...		1	1	1	1	4	0
MG477/114		Clutch spring ...		12	12	12	4		
MG477/3		Clutch withdrawal race ...		1	1	1	1	3	8
MG483/106		Clutch operating shaft ...		1	1	1	1	15	2
MG483/105		Clutch operating fork ...		1	1	1	3	10	4
MG483/127		Key for operating shaft ...		3	3	3			6
MG483/128		Clutch lever (operating) ...		1	1	1	1	8	10
MG483/129		Compensating lever ...		1	1	1	1	8	10
MG483/130		Clevis pin between compensating lever and clutch lever ...		1	1	1		4	10
MG483/101		Clutch pedal ...		1	1	1	2	8	0
MG483/131		Pin between clutch pedal and compensating lever ...		1	1	1		9	6
MG483/132		Return spring for clutch pedal ...		1	1	1	1		8
MG483/133		Distance washer for operating shaft ...		1	1	1			10
MG483/134		Set screw for securing clutch pedal ...		1	1	1			6
MG483/135		Pull rod for busbar actuating lever ...		1	1	1		3	2
MG483/136		Fork end for ditto (compensating lever) ...		1	1	1	1	2	6
MG483/137		" " " (busbar lever) ...		1	1	1		6	6
MG483/138		Clevis pin for ditto ...		2	2	2		1	0
MG483/109		Busbar actuating lever ...		1	1	1	1	7	9
MG483/110		Spring for ditto ...		1	1	1		4	3
MG483/111		Cover for spring ...		1	1	1		3	0
MG483/125		Collar for cover ...		1	1	1		1	6
MG483/126		Distance piece for spring ...		1	1	1		1	0
MG483/112		Spring guide (male) ...		1	1	1		13	7
MG483/113		" " (female) ...		1	1	1		16	0
MG483/140		Clevis pin for fork end ...		2	2	2		1	0
MG483/139		Support bracket for spring guide ...		1	1	1		12	0
MG483/141		Actuating rod stop (on support bracket) ...		1	1	1			6
MG483/142		" " " (on pull rod) ...		1	1	1		1	0

GEARBOX DETAILS

MG483	Pre-selector gearbox complete with remote control, less clutch pedal and operating details ...	1	1	1	80	6	0
MG483/100	Clutch housing ...	1	1	1	3	15	0
2332	Inspection cover ...	1	1	1		1	4
MG483/1	Rear engine bearer cross tube ...	1	1	1	1	3	10
S17/5	Silentbloc for ditto ...	2	2	2		3	10
MG404/282	Propeller shaft coupling flange ...	1	1	1	1	0	0
MG483/4	Speedometer reduction box complete ...	1	1	1	3	0	0

GEARBOX REMOTE CONTROL ASSEMBLY

MG483/3	Remote control assembly ...	1	1	1	10	0	0
MG404/300	Housing for remote control ...	1	1	1	2	0	0
MG404/301	Gear control turret (R.H.) ...	1	1	1		10	6
MG404/348	" " (L.H.) ...	1	1	1		10	6
MG404/331	Change speed shaft ...	1	1	1		4	0
MG404/305	Bevel wheel (on shaft) ...	1	1	1	1	0	0
MG404/306	" " (on change speed lever) ...	1	1	1	1	0	0
MG404/308	Change speed lever ...	1	1	1		8	0
MG404/309	Knob for change speed lever ...	1	1	1		8	8
MG404/317	Fulcrum pin for lever ...	1	1	1		5	0
MG404/318	Distance piece on ditto ...	1	1	1		1	0
MG404/321	Mixture control lever ...	1	1	1		8	8
MG404/310	Sector plate for change speed lever (counter-sunk) ...	1	1	1		2	8
MG404/311	Sector plate for change speed lever (plain) ...	1	1	1		2	8
MG404/313	Plunger for change speed lever ...	1	1	1		1	0
MG404/314	Guide for ditto ...	1	1	1		1	4
MG404/315	Spring for ditto ...	1	1	1		1	6
MG404/316	Thrust button for ditto ...	1	1	1		1	0
MG404/307	Change speed gate ...	1	1	1		4	0
MG404/322	Mixture control rod ...	1	1	1		5	0
MG404/320	Mixture control instruction plate ...	1	1	1		5	0
2872	Cover-plate for gear control turret (L.H.) ...	1	1	1		1	6
MG483/143	Petrol tap control rod ...	1	1	1		1	6
MG404/329	Knob for ditto ...	1	1	1		6	0
MG404/328	Petrol tap instruction plate ...	1	1	1		2	0
MG483/144	Slow running rod ...	1	1	1		1	6
MG404/327	Knob for ditto ...	1	1	1		6	0
MG404/326	Instruction plate for ditto ...	1	1	1		2	0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG404/330		Rubber bush for petrol tap and slow running control rods		2	2	2		1	0
MG404/332		Change speed gear selector lever		1	1	1		9	0
MG404/333		Change speed gear selector rod		1	1	1		1	0
MG404/338		Fork end for ditto		2	2	2		4	0
BRAKE GEAR									
2009		Brake pedal:		1	1	1		5	10
1007		Fulcrum pin for ditto		1	1	1		1	9
1365		Rollers for ditto... ..		23	23	23	set	1	9
P245		Brake push rod		1	1	1		5	7
933		Clevis pin for ditto		2	2	2		6	
269		Return spring for brake pedal		1	1	1		3	
270		Anchor bracket for ditto		1	1	1		7	
P336		Brake cross shaft assembly		1	1	1	2	8	4
842		Roller bearing retainer (on N/S)		1	1	1		2	6
841		Roller for cross shaft (on N/S)		32	32	32	set	2	6
844		Blanking disc for brake cross shaft (on N/S)		1	1	1		3	
860		Foot brake adjusting rod		1	1	1		1	6
845		Hand brake adjusting rod		1	1	1		2	11
858		Clevis pin for foot brake adjuster		1	1	1		4	
851		Clevis pin for hand brake adjuster		1	1	1		4	
846		Wing nuts for hand brake and foot brake adjuster		2	2	2		2	9
849		Knob for hand brake lever		1	1	1		1	3
853		Screw for ditto		1	1	1		4	
852		Spring for knob		1	1	1		4	
854		Hand brake pawl rod		1	1	1		8	
857		Hand brake lever ratchet pawl		1	1	1	2	2	
855		Hand brake pawl stud		1	1	1		4	
856		Hand brake pawl screw		2	2	2		8	
838		Bush for brake cross shaft O/S		1	1	1		1	6
1071		Fibre washer for brake cross shaft trunnion		4	4	4		4	
922		Trunnion for brake cross shaft		2	2	2		8	
1791		Steady bracket for brake cross shaft		1	1	1	10	1	
2767		Return spring for brake cross shaft		1	1	1	doz.	1	4
2764		Clip for ditto (on cross shaft)		1	1	1		5	
270		Anchor bracket for ditto		1	1	1		7	
877		Hand brake ratchet		1	1	1		4	2
878		Hand brake lever stop		1	1	1		2	2
2933		Rubber buffer for ditto		1	1	1	doz.	1	8
1051		Return spring for hand brake lever		1	1	1		3	
P337		Front brake cable complete		2	2	2		1	0
MG391		Rear brake cable complete		2	—	—		1	0
P338		Rear brake cable complete		—	2	2		1	0
1806		Concertina type rubber dust excluder for brake cables		4	4	4		9	
P109/100		Clevis pin for brake cables		4	4	4		3	
1963		Rubber ferrules for rear brake cables		2	2	2		2	0
S2/20		Clips for ditto (on rear springs)		2	2	2		3	
CONTROLS									
MG368		Accelerator cross shaft (magneto ignition)		1	1	1		1	1
2330		Connecting rod for ignition control (magneto ignition)		1	1	1		1	0
2325		Bell crank lever for ignition control (magneto ignition)		1	1	1		2	2
2326		Bracket for ditto (magneto ignition)		1	1	1		3	2
2327		Fibre washer for ditto (magneto ignition)		1	1	1		4	
MG390		Ball coupling for ignition control (magneto ignition)		1	1	1		1	4
MG478		Accelerator cross shaft assembly (coil ignition)		1	1	1		1	1
MG368/108		Jet control return spring		1	1	1		4	
265		Accelerator return spring		1	1	1		4	
P122		Coupling rod to throttle (ball jointed)		1	1	1		1	4
2328		Jet control connecting rod		1	1	1		2	
181		Yoke end for ditto		1	1	1		6	
2934		Clevis pin for ditto		1	1	1	doz.	1	0
A334/100		Flexible connection for petrol tap control		1	1	1		6	2
1111		Anti-rattle springs for controls		5	5	5	doz.	1	4
2329		Bracket for slow running rod		1	1	1		5	
1113		Accelerator pedal stop		1	1	1		7	

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
STEERING GEAR									
MG360		Steering gear assembly less wheel							
		Ceased Chassis No. K0321	—	—	1		6	15	0
MG453		Steering gear assembly less wheel							
		Comm. on Saloon at Chassis No. K0322	1	1	1		6	15	0
MG360/3		Steering box, outer tube, and cover-plates assembled							
		Ceased on Saloon at Chassis No. K0321	—	—	1		2	6	6
MG453/2		Steering box, outer tube, and cover-plates assembled							
		Comm. on Saloon at Chassis No. K0322	1	1	1		2	6	6
MG360/2		Steering box with outer tube							
		Ceased Chassis No. K0321	—	—	1		1	12	6
MG453/1		Steering box with outer tube							
		Comm. on Saloon at Chassis No. K0322	1	1	1		1	12	6
P345/117		Steering box	1	1	1			14	4
MG360/100		Outer tube ... Ceased Chassis No. K0321	—	—	1			16	1
MG453/100		" " ...							
		Comm. on Saloon at Chassis No. K0322	1	1	1			16	1
P345/114		Cover-plate for steering box	1	1	1			9	6
P345/115		Shim for cover-plate	As required						6
P345/116		Dowel for cover-plate	2	2	2				2
P345/122		Stud for cover-plate	3	3	3				3
P345/121		Nut for securing cover-plate	3	3	3				2
P345/106		Bottom cap for steering box	1	1	1		3	6	
P345/107		Shim for bottom cap	As required						2
P345/122		Stud for bottom cap	2	2	2				3
P345/121		Nut for securing bottom cap	2	2	2				2
P345/2		Assembly of cage and balls for cup and cone							
		bearing	2	2	2			3	0
P345/112		Cage for balls	2	2	2			1	5
P345/124		Steel balls	30	30	30	doz.			7
P345/110		Ball race cup	2	2	2			2	7
P345/111		Ball race cone	2	2	2			2	0
MG360/1		Inner column with cam							
		Ceased Chassis No. K0321	—	—	1		1	16	0
MG453/3		Inner column with cam							
		Comm. on Saloon at Chassis No. K0322	1	1	1		1	16	0
MG360/101		Inner column ... Ceased Chassis No. K0321	—	—	1			15	10
MG453/101		" " ...							
		Comm. on Saloon at Chassis No. K0322	1	1	1			15	10
P345/113		Steering cam	1	1	1			18	5
P345/109		Felt bush for column (top)	1	1	1				10
P345/1		Assembly of followers and hemispheres	1	1	1		13	9	
P345/101		Follower	1	1	1			7	6
P345/105		Hemisphere	4	4	4	set		6	4
P345/108		Rocker-shaft	1	1	1		19	0	
P345/103		Felt washer for drop arm	1	1	1				6
P345/118		Steering drop arm	1	1	1		10	8	
P345/123		Flat washer for ditto	1	1	1	doz.	1	9	
P345/104		Nut for rocker-shaft	1	1	1				6
P193/110		Key for steering wheel	1	1	1				10
A310		Steering wheel	1	1	1		2	2	0
1953		Bracket for steering box							
		Ceased Chassis No. K0321	—	—	1			3	0
1952		Bracket for steering box							
		Comm. on Saloon at Chassis No. K0322	1	1	1		3	0	
1954		Dowel for ditto	2	2	2				2
1919		Steering column clamp	1	1	1		2	2	
2064		Steering column support bracket	1	1	1		2	9	
RADIATOR AND CONNECTIONS									
MG444		Radiator complete	1	—	—		14	0	0
P341		" " ... Ceased Chassis No. K0321	—	1	1		13	10	0
MG475		" " ... Comm. Chassis No. K0322	—	1	1		14	0	0
MG444/1		Radiator case with badge	1	—	—		6	17	6
P341/1		Radiator case with badge							
		Ceased Chassis No. K0321	—	1	1		6	17	6
MG475/1		Radiator case with badge							
		Comm. Chassis No. K0322	—	1	1		6	17	6
MG497/102		Radiator badge	1	1	1			5	0
P341/102		Radiator stone guard (honeycomb type)	1	1	1		13	6	
P214/109		Radiator stay rod lug	2	2	2				8
MG444/106		Bonnet hinge rod bracket (on radiator)	1	1	1				8

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
MG444/102		Headlamp bracket lug Comm. on 4-seater and Saloon at Chassis No. K0322		2	2	2	2	5	
2626		Rubber moulding for headlamp bracket lug Comm. on 4-seater and Saloon at Chassis No. K0322		2	2	2		4	
MG444/103		Tie bar for ditto Comm. on 4-seater and Saloon at Chassis No. K0322		1	1	1	1	6	
MG444/104		Stud for cylinder head to radiator bracket (on radiator) ... Comm. on 4-seater and Saloon at Chassis No. K0322		6	6	6		2	
P214/100		Filler cap for radiator ...		1	1	1	12	0	
P214/101		Rubber ring for cap ...		1	1	1		7	
A153/100		Radiator thermo union ...		1	1	1	1	0	
P282/100		Drain tap for radiator ...		1	1	1	1	9	
P214/103		Fibre washer for ditto and thermo union ...		2	2	2		2	
S23/3		Bonnet rest tape (6' long) ...		1	1	1	1	2	
1066		Fibre washer for radiator mounting ...		2	2	2		3	
130		Steel washer for radiator mounting ...		2	2	2	1	6	
2571		Bracket cylinder head to radiator ...		1	—	—	3	10	
2572		Packing plate for ditto... ..		1	1	—	1	5	
2713		Bracket (cylinder head to radiator) Comm. Chassis No. K0322		—	1	1	4	3	
2334		Top water hose connection (front) ...		2	2	2	1	2	
2335		" " " " (rear) ...		1	1	1	1	2	
A332		Clip for ditto ...		4	4	4		9	
1979		Bottom water hose connection ...		1	1	1	1	6	
A110		Clip for ditto ...		2	2	2	10		
1980		Radiator stay rod ...		2	2	2		9	
1069		Fork ends for ditto ...		4	4	4		6	
1068		Radiator stay rod eye bolt ...		2	2	2		4	
A363		Thermostat ...		1	1	1	1	13	6
A370		Clip for thermostat by-pass tube ...		4	4	4		9	

EXHAUST SYSTEM AND SILENCERS

1993	Gasket for exhaust pipe ...	2	2	2		6
1991	Front exhaust pipe ...	1	1	1	17	2
A300	Silencer ...	1	—	—	1	7 6
A371	" " " " ...	—	1	1	1	15 0
1868	Clip for silencer ...	2	2	2		6
1865	Bracket for silencer clip (front) ...	1	1	1		8
1994	" " " " (rear) ...	1	1	1		9
831	Fume excluder clip ...	2	2	2		8
2323	Rear exhaust pipe ...	1	1	1	7	9
1992	Clip for ditto ...	1	1	1	2	0

PETROL TANK AND PIPES

MG438	Petrol tank complete ...	1	—	—	3	18 9
MG438/101	Main feed pipe adapter with copper tube ...	1	—	—	2	0
MG438/102	Reserve feed pipe adapter with gauze ...	1	—	—	2	9
S3/16	Union for ditto ...	2	—	—		6
P214/103	Fibre washer for ditto ...	2	—	—		2
A672	Quick filler cap for petrol tank ...	1	—	—	15	0
2620	Petrol tank strap ...	2	—	—	3	11
2437	Bracket for ditto ...	2	—	—	5	0
1904	Rubber moulding for straps ...	2	—	—		10
S23/2	Rubber packing for tank mounting ...	1	—	—	foot	1 2
2583	Petrol pipe (tank to main pipe) ...	1	—	—	1	6
2584	" " (tank to reserve pipe) ...	1	—	—	1	10
S3/2	Union adapter for pipes ...	2	—	—		6
2582	Petrol pipe (along frame) (main and reserve supply) ...	2	—	—	3	8
S3/2	Union adapter for pipe... ..	2	—	—		6
1859	Petrol pipe (main pipes to tap) ...	2	—	—	2	3
A335	Petrol tap ...	1	—	—	7	2
2320	Bracket for ditto ...	1	—	—		3
2015	Petrol pipe (tap to Petrolift) Ceased Chassis No. K2015	1	—	—	1	8
2878	Petrol pipe (tap to petrol pump) Comm. Chassis No. K2016	1	—	—	2	6
A242	Petrolift ... Ceased Chassis No. K2015	1	—	—	2	10 0

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
2375		Battery carrier		1	—	—	12	4	0
1833		" " " " " " " "		—	1	1	10	0	0
A249		Cut-out and junction box		1	1	1	1	5	0
A364		Auxiliary junction box... ..		1	1	1	3	0	0
A499		Ignition coil							
		Comm. on 2-seater at Chassis No. K2016, 4-seater and Saloon at Chassis No. K0322 (when ordering spares please quote Type No.)		1	1	1	1	10	0
A425		Ignition cables (magneto ignition)		1 set	1 set	1 set	set	9	7
A426		" " (coil ignition)		1 set	1 set	1 set	set	9	6
A409		Harnessed cables		1 set	—	—	set	4	0
A327		" " " " " " " "		—	1 set	1 set	set	3	15
2429		Rubber bush for ditto (through dash panel)		1	1	1			4
S2/2		Wiring clip for battery cables		10	10	10			3
S2/28		Wiring clip for battery cable sheathing		9	9	9			4
S2/6		Wiring clip for harnessed cables and battery positive lead		4	4	4			5
S2/26		Wiring clip for windscreen wiper cable		1	1	1			4
S2/3		Wiring clip for sidelamp cables		2	2	2			3
S2/12		Binding clip		18	18	18			4
2099		Aluminium cover for wiring on front of dash		1	1	1	5	10	
2100		Aluminium cover for wiring on rear of dash Ceased on 2-seater at Chassis No. K2015, 4-seater and Saloon at Chassis No. K0321		1	1	1	4	10	
A407		Headlamps (12-volt)		1 pr.	—	—	pr.	9	7
A351		" (12-volt)		—	1 pr.	1 pr.	pr.	6	6
2712		Mounting nut for headlamps Comm. Chassis No. K0321		—	2	2		1	9
A500		Sidelamps (12-volt)		1 pr.	1 pr.	1 pr.	pr.	1	7
A717		Stop and tail-lamp		1	1	—		19	0
A406		Reverse lamp		1	1	—		12	6
A447		Switch for ditto		1	1	—		2	9
2727		Mask for switch		1	1	—		1	0
A346		Direction indicator with stop light		—	—	1	3	0	0
A360		Tail and reverse lamp		—	—	1	1	1	0
A447		Switch for ditto		—	—	1		2	9
2727		Mask for switch		—	—	1		1	0
A493		Switch for stop light (on brake push rod)		1	1	1		2	6
2630		Bracket for ditto Comm. on 2-seater at Chassis No. K2015, 4-seater at Chassis No. K0321		1	1	—		1	3
S2/21		Clip for switch		1	1	1			8
A431		Dashlamp		2	2	2		8	6
A447		Switch for ditto		1	1	1		2	9
2727		Mask for switch		1	1	1		1	0
A357		Horn (12-volt)		1	1	1	1	5	0
A382		Windscreen wiper motor with cable		1	1	—	2	2	0
A358		Windscreen wiper blade assembly		1	1	—		14	10
A348		Windscreen wiper motor with cable		—	—	1	2	2	0
A344		Windscreen wiper blade assembly		—	—	1		14	10
A389		Driving mirror		1	1	—		13	6
A286		" " " " " " " "		—	—	1		5	0
2430		Rubber bush for rear harness		1	1	1			4
2449		Rubber bush for cables (through undertray) Ceased on 2-seater at Chassis No. K2015, 4-seater and Saloon at Chassis No. K0321		2	2	2			4
BONNET, WINGS AND FAIRINGS									
2557		Front wing O/S (unpainted)		1	—	—	2	18	6
2558		" " N/S (unpainted)		1	—	—	2	18	6
2608		Front wing support stay O/S... ..		1	—	—		9	3
2609		" " " " " " " " N/S... ..		1	—	—		9	3
S17/4		Silentbloc for ditto		2	—	—		3	4
2610		Bracket for headlamp O/S		1	—	—	1	4	6
2611		" " " " " " " " N/S		1	—	—	1	4	6
2585		Rubber packing for ditto (internal)		2	—	—			3
2586		" " " " " " " " (external)		2	—	—			7
2751		Bolt for headlamp bracket		2	—	—			9
2752		Lock nut for ditto		2	—	—			6
2563		Rubber packing for sidelamp		2	—	—			3
2562		Bolt for sidelamp		2	—	—			4
2557		Front wing O/S (unpainted)		—	1	—	2	18	6
2558		" " N/S (unpainted)		—	1	—	2	18	6

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
1825		Front wing O/S (unpainted)		—	—	1	2	18	6
1826		" " N/S (unpainted)		—	—	1	2	18	6
2010		Front wing support stay O/S							
		Ceased Chassis No. K0321		—	1	1	1	0	10
2011		Front wing support stay N/S							
		Ceased Chassis No. K0321		—	1	1	1	0	10
2017		Rubber packing strip for ditto							
		Ceased Chassis No. K0321		—	2	2	2		1
2537		Front shock absorber bracket O/S							
		Ceased Chassis No. K0321		—	1	1	4		4
2538		Front shock absorber bracket N/S							
		Ceased Chassis No. K0321		—	1	1	4		4
2041		Headlamp standard O/S							
		Ceased Chassis No. K0321		—	1	1	6		2
2042		Headlamp standard N/S							
		Ceased Chassis No. K0321		—	1	1	6		2
2312		Rubber packing for ditto (on top of wing)							
		Ceased Chassis No. K0321		—	2	2			8
2307		Backing plate for front wing support stay O/S							
		Ceased Chassis No. K0321		—	1	1	6		2
2308		Backing plate for front wing support stay N/S							
		Ceased Chassis No. K0321		—	1	1	6		2
2311		Rubber packing between backing plate and wings							
				—	2	2			8
2535		Bracket for wing stay tie rods on cylinder head							
		Ceased Chassis No. K0321		—	1	1	1	3	4
2536		Tie rods for wing stays							
		Ceased Chassis No. K0321		—	2	2	1		7
2534		Distance pieces for tie rods							
		Ceased Chassis No. K0321		—	8	8			3
2521		Rubber moulding for tie rods							
		Ceased Chassis No. K0321		—	2	2			8
2533		Rubber packing between wing stay and frame							
		Ceased Chassis No. K0321		—	2	2			
2991		Front wing support stay							
		Comm. Chassis No. K0322		—	2	2	9		4
S17/4		Silentbloc for ditto, Comm. Chassis No. K0322		—	2	2	3		4
2992		Top bracket for wing stay							
		Comm. Chassis No. K0322		—	2	2	1		0
2853		Headlamp bracket O/S							
		Comm. Chassis No. K0322		—	1	1	13		1
2854		Headlamp bracket N/S							
		Comm. Chassis No. K0322		—	1	1	13		1
2585		Rubber packing for ditto (interior)							
		Comm. Chassis No. K0322		—	2	2			3
2586		Rubber packing for ditto (exterior)							
		Comm. Chassis No. K0322		—	2	2			7
2751		Bolt for headlamp bracket							
		Comm. Chassis No. K0322		—	2	2			9
2752		Lock nut for ditto							
		Comm. Chassis No. K0322		—	2	2			6
2563		Rubber packing for sidelamp							
		Comm. Chassis No. K0322		—	2	2			3
2562		Bolt for sidelamps							
		Comm. Chassis No. K0322		—	2	2			4
2635		Rear wing O/S (unpainted)		1	—	—	1	14	0
2636		" " N/S (unpainted)		1	—	—	1	14	0
1828		" " O/S (unpainted)		—	1	1	1	8	8
1829		" " N/S (unpainted)		—	1	1	1	8	8
2652		Rear wing tie bar		1	—	—			14 7
1945		Special bolts for ditto		2	—	—			10
318		Rubber packing for ditto		2	—	—			5
2637		Running board O/S		1	—	—	10		10
2638		" " N/S		1	—	—	10		10
2590		Step channelling for running-boards (22" long)		6	—	—	2		4
2591		Rubber for ditto (22" long)		6	—	—	1		2
815		Rubber buffer between rear wing and body ...		2	—	—			2
2559		Running-board O/S		—	1	—	1	8	8
2560		" " N/S		—	1	—	1	8	8
2590		Step channelling for ditto (36½" long)		—	6	—	4		8
2591		Rubber for ditto (36½" long)		—	6	—	2		4
1986		Running-board O/S		—	—	1	16		9
2065		" " N/S		—	—	1	16		9
2590		Step channelling for ditto (36½" long)		—	—	2	4		8
2590		" " " (25" long)		—	—	2	3		3
2591		Rubber for ditto (36½" long)		—	—	2	2		4
2591		" " " (25" long)		—	—	2	1		8

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	MG	DESCRIPTION	MG	No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
3071		Rubber moulding between wing and running-boards O/S		1	1	1	1	4	
3072		Rubber moulding between wing and running-boards N/S		1	1	1	1	4	
2020		Front fairing		1	1	1	17	4	
MG497/102		M.G. medallion for ditto		1	1	1	5	0	
S23/I		Rubber insertion between front fairing and side-members (18" long)		2	2	2			5
S23/I		Rubber insertion between front fairing and radiator (30" long)		1	1	1			9
361		C.P. dome nut for securing front fairing		4	4	4			6
380		C.P. washer for ditto		4	4	4			4
MG583		Bonnet complete (unpainted)		1	1	—	3	3	0
MG583/100		Bonnet side O/S (unpainted)		1	1	—	19	3	
MG583/101		" " N/S (unpainted)		1	1	—	19	3	
MG582/102		Bonnet side hinge rod		2	2	2			1 7
MG583/102		Bonnet top O/S (unpainted)		1	1	—	1	4	10
MG583/103		" " N/S (unpainted)		1	1	—	1	4	10
MG582/105		Bonnet top hinge rod		1	1	1			1 7
MG582		Bonnet complete (unpainted)		—	—	1	3	3	0
MG582/100		Bonnet side O/S (unpainted)		—	—	1	19	3	
MG582/101		" " N/S (unpainted)		—	—	1	19	3	
MG582/103		Bonnet top O/S (unpainted)		—	—	1	1	4	10
MG582/104		" " N/S (unpainted)		—	—	1	1	4	10
A262		Bonnet fasteners							
		Ceased on 2-seater at Chassis No. K2015,							
		4-seater and Saloon at Chassis No. K0321		4	4	4	4	2	
A502		Bonnet fasteners							
		Comm. on 2-seater at Chassis No. K2016,							
		4-seater and Saloon at Chassis No. K0322		4	4	4	5	4	
2062		Bonnet hinge rod bracket		1	1	1			6
259		Bonnet hinge rod lug		1	1	1			8
B236/166		Bonnet board O/S		1	—	—	2	0	0
B236/167		" " N/S		1	—	—	2	0	0
B224/184		" " O/S		—	1	—	2	0	0
B224/185		" " N/S		—	1	—	2	0	0
B223/152		" " O/S		—	—	1	1	5	0
B223/153		" " N/S		—	—	1	1	5	0
2321		Bracket for bonnet boards		2	2	2			7
B224/217		Aluminium rear bonnet rest O/S		1	1	—	7	0	
B224/218		" " " " N/S		1	1	—	7	0	
B223/100		" " " " O/S		—	—	1	7	0	
B223/101		" " " " N/S		—	—	1	7	0	
S23/3		Rubber for bonnet rest (rear) (9' long)		1	1	1	1	10	
380		C.P. washers for bonnet boards		4	4	4			4
2348		Rain channel							
		Ceased on 2-seater at Chassis No. K2015,							
		4-seater and Saloon at Chassis No. K0321		1	1	1	2	6	
BODY MOUNTING BRACKETS, ETC.									
2483		Front body bracket O/S		1	1	—	2	9	
2484		" " " " N/S		1	1	—	2	9	
2485		Body bracket (on brake cross shaft cross tube)		2	2	—	10	2	
2486		Rear body bracket		2	2	—	4	2	
1814		Support block and cap for ditto		2	2	—	1	10	
1815		"U" clip for ditto		2	2	—			5
2580		Angle bracket for body mounting (rear)		2	—	—	1	4	
1930		Backing plate for ditto		2	—	—			6
1408		Body mounting plates (rear)		—	4	4			7
1812		Front body bracket		—	—	2			11
2004		Body bracket on brake cross shaft cross tube... ..		—	—	2	5	0	
1813		Rear body bracket		—	—	2	2	1	
1814		Support block and cap for ditto		—	—	2	1	10	
1815		"U" clip for ditto		—	—	2			5
2467		Body to dash tie bar							
		Ceased on 2-seater at Chassis No. K2015,							
		4-seater and Saloon at Chassis No. K0321		2	2	2	2	8	
2901		Celotex insulating board for heel board		—	—	1	3	10	

Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
PROPELLER SHAFT SHROUD AND FITTINGS									
2579		Propeller shaft shroud							
		Ceased Chassis No. K2015	1	—	—		1	2	6
2870		Propeller shaft shroud							
		Comm. Chassis No. K2016	1	—	—		1	2	6
2361		Propeller shaft shroud							
		Ceased Chassis No. K0321	—	1	—		11	9	
2871		Propeller shaft shroud							
		Comm. on Tourer at Chassis No. K0322	—	1	1		16	4	
S23/1		Rubber strip for propeller shaft shroud (8½" long)	—	1	1				3
1841		Platform for propeller shaft shroud (front) ...	1	1	1				11
1981		" " " " (rear) ...	2	2	2				11
1814		Support blocks and caps for platforms ...	3	3	3		1	10	
1815		"U" clips for ditto	3	3	3				5
SPARE WHEEL CARRIER FITTINGS									
MG445/2		Spare wheel top shoe with strap	1	—	—		1	2	6
MG445/103		Bracket for securing top shoe to body ...	1	—	—		1	13	0
MG445/108		Swivel bolt for ditto	1	—	—				1 10
MG445/1		Spare wheel bottom support with tension device, medallion and buckle	1	—	—		4	7	6
P110/158		Springs for tension device	2	—	—				4
1814		Support block and cap for securing spare wheel carrier to cross tube	2	—	—		1	10	
2750		"U" clip for ditto	2	—	—		1	2	
P309		Dust excluder for spare wheel centre	1	—	—		7	0	
1972		Rubber buffer for ditto	1	—	—		1	4	
2528		Bracket for spare wheel trough and rear number-plate O/S... ..	—	—	1		1	8	
2529		Bracket for spare wheel trough and rear number-plate N/S... ..	—	—	1		3	10	
2522		Spare wheel trough	—	—	1		7	9	
1950		Spare wheel hub	—	—	1		14	7	
1982		Lock nut and sleeve for ditto	—	—	1		16	0	
2739		Spare wheel hub	—	1	—		14	7	
1982		Lock nut and sleeve for ditto	—	1	—		16	0	
2733		Strap and buckle for spare wheel	—	1	—		3	0	
2-SEATER BODY DETAILS									
B236		2-seater body complete	1	—	—		Price on application		
DOORS, LOCKS AND HINGES									
B236/3		Door (upholstered) less fittings O/S	1	—	—		5	0	0
B236/133		Door hinge (top) O/S	1	—	—		4	0	
B236/134		" " (bottom) O/S	1	—	—		4	0	
B236/135		Door hinge pins	2	—	—		1	0	
B225/119		Door handle O/S	1	—	—		5	0	
B225/101		Door lock O/S complete	1	—	—		9	6	
B225/108		Door lock catch plate	1	—	—		2	6	
B239/110		Door check strap	1	—	—		6	0	
B224/155		Staple for ditto (C.P.)	1	—	—		1	0	
B235/116		Door rubber buffer shoe and plate	2	—	—				7
B220/194		Socket for side curtain (on door)	1	—	—		1	4	
B224/137		Securing clamp for side curtain (on door) ...	1	—	—		2	5	
B236/4		Door (upholstered) less fittings N/S	1	—	—		5	0	0
B236/140		Door hinge (top) N/S	1	—	—		4	0	
B236/141		Door hinge (bottom) N/S	1	—	—		4	0	
B236/135		Door hinge pins	2	—	—		1	0	
B225/120		Door handle N/S	1	—	—		5	0	
B225/142		Door lock N/S complete	1	—	—		9	6	
B225/108		Door lock catch plate	1	—	—		2	6	
B239/110		Door check strap	1	—	—		6	0	
B224/155		Staple for ditto (C.P.)	1	—	—		1	0	
B235/116		Door rubber buffer, shoe and plate	2	—	—				7
B220/194		Socket for side curtain (on door)	1	—	—		1	4	
B224/137		Securing clamp for side curtain (on door) ...	1	—	—		2	5	
B236/136		Door tread plate	2	—	—		4	0	

Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.		DESCRIPTION		No. Used			Price Each		
				2-seater	4-seater	Saloon	£	s.	d.
SEATS AND FITTINGS									
B236/5		Bucket seat O/S complete with cushion and adjusting fitting	1	—	—	8	0	0	
B236/148		Bucket seat O/S (upholstered) less cushion and adjusting fittings	1	—	—	4	15	0	
B236/150		Cushion for bucket seat O/S	1	—	—	2	5	0	
A660		Adjusting fitting for bucket seat	1	—	—	1	6	6	
B236/6		Bucket seat N/S complete with cushion and adjusting fitting	1	—	—	8	0	0	
B236/149		Bucket seat N/S (upholstered) less cushion and adjusting fitting	1	—	—	4	15	0	
B236/151		Cushion for bucket seat N/S	1	—	—	2	5	0	
A660		Adjusting fitting for bucket seat	1	—	—	1	6	6	
CARPETS									
B236/156		Carpet for gearbox (manual)	1	—	—	3	5	0	
B236/146		" " (pre-selector)	1	—	—	3	5	0	
B236/157		Carpet for propeller shaft shroud	1	—	—	14	0	0	
B224/172		Passenger foot rest with rubber mat	1	—	—	9	0	0	
2886		Bracket for ditto (bottom)	1	—	—			3	
B223/156		Rubber mat for ditto	1	—	—	2	0	0	
B236/158		Carpet centre O/S	1	—	—	14	0	0	
B236/159		" " N/S	1	—	—	14	0	0	
2707		Leather cover for speedometer reduction box	1	—	—	5	4	0	
WINDSCREEN WIPER DETAILS									
B236/7		Windscreen complete	1	—	—	9	7	6	
B236/2		Windscreen frame complete, less glass	1	—	—	7	0	0	
B236/117		Windscreen frame (bare)	1	—	—	1	10	0	
B236/102		Windscreen side support (bottom) O/S	1	—	—	1	17	6	
B236/103		" " " (bottom) N/S	1	—	—	1	17	6	
B236/110		" " " (top) O/S	1	—	—	1	10	0	
B236/113		" " " (top) N/S	1	—	—	1	10	0	
B220/160		Windscreen adjusting ratchet	2	—	—	7	6	0	
B220/161		Spring for ratchet	2	—	—			6	
B220/162		Thumb screw for adjusting windscreen	2	—	—	6	0	0	
B236/107		Anti-rattle fitting for windscreen O/S	1	—	—	3	2	0	
B236/108		" " " N/S	1	—	—	3	2	0	
B236/106		Windscreen tightening fly screw (top)	2	—	—	2	6	0	
B236/162		Windscreen glass	1	—	—	1	17	5	
B236/111		Windscreen rubber surround	1	—	—	2	6	0	
HOOD AND SIDESCREEN DETAILS									
B236/8		Hood complete	1	—	—	7	10	0	
B236/1		Hood frame complete	1	—	—	4	0	0	
B236/116		Bolt for fixing frame with C.P. dome nut	2	—	—	4	0	0	
B236/115		Hood canopy	1	—	—	3	10	0	
B236/119		Bracket for securing hood to windscreen, with flyscrew	2	—	—	6	0	0	
B236/9		Rigid sidescreen O/S with securing bracket and peg	1	—	—	3	1	0	
B236/129		Locating peg (rear) for ditto	1	—	—	1	0	0	
B236/121		Securing bracket (front) for ditto	1	—	—	2	6	0	
B236/125		Sidescreen flap O/S	1	—	—	10	6	0	
B236/10		Rigid sidescreen N/S with securing bracket and peg	1	—	—	3	1	0	
B236/130		Locating peg (rear) for ditto	1	—	—	1	0	0	
B236/128		Securing bracket (front) for ditto	1	—	—	2	6	0	
B236/126		Sidescreen flap N/S	1	—	—	10	6	0	
B236/122		Tonneau cover	1	—	—	2	5	0	
FACIA PANEL AND TOOLBOX									
B236/114		Facia panel (drilled)	1	—	—	2	10	0	
B223/3		Toolbox complete (bulkhead type)							
		Comun. Chassis No. K2016	1	—	—	1	19	0	
2882		Support bracket for toolbox (long, on dash panel) ... Comm. Chassis No. K2016	1	—	—	1	4	0	
2906		Support bracket for toolbox (short, on scuttle) Comun. Chassis No. K2016	1	—	—			6	

Please Quote Chassis, Engine and Body Numbers when ordering Parts

		No. Used			Price Each		
Part No.	DESCRIPTION	2-seater	4-seater	Saloon	£	s.	d.
4-SEATER BODY DETAILS							
B224	4-seater body complete	—	1	—	Price on application		
DOORS, LOCKS AND HINGES							
B224/1	Door (upholstered) less fittings O/S	—	1	—	6	0	0
B224/141	Door hinge (top) O/S	—	1	—	6	0	0
B224/191	Door hinge (bottom) O/S	—	1	—	6	0	0
B224/143	Door hinge pin	—	2	—	8	0	0
B224/146	Door lock complete O/S	—	1	—	19	0	0
B224/193	Door lock catch plate O/S	—	1	—	2	0	0
B224/144	Door handle O/S	—	1	—	6	0	0
B225/148	Door check strap	—	1	—	2	0	0
B235/116	Door rubber buffer with shoe and plate	—	1	—	7	0	0
B224/137	Clamp for securing sidescreen (on door)	—	2	—	2	5	0
B224/2	Door (upholstered) less fittings N/S	—	1	—	6	0	0
B224/142	Door hinge (top) N/S	—	1	—	6	0	0
B224/192	Door hinge (bottom) N/S	—	1	—	6	0	0
B224/143	Door hinge pins...	—	2	—	8	0	0
B224/147	Door lock complete N/S	—	1	—	19	0	0
B224/194	Door lock catch plate N/S	—	1	—	2	0	0
B224/145	Door handle N/S	—	1	—	6	0	0
B225/148	Door check strap	—	1	—	2	0	0
B235/116	Door rubber buffer with shoe and plate	—	1	—	7	0	0
B224/137	Clamp for securing sidescreen (on door)	—	2	—	2	5	0
B224/189	Tread plate for door (front half)	—	2	—	2	0	0
B224/190	" " " " (rear half)	—	2	—	2	0	0
SEATS AND FITTINGS							
B224/3	Front seat complete with slide and cushion O/S	—	1	—	8	0	0
B224/195	Front seat (upholstered) less cushions and adjusting fittings O/S	—	1	—	5	5	0
B224/161	Front seat sliding bar O/S	—	1	—	12	0	0
B224/197	Plunger for ditto	—	1	—	9	0	0
B224/198	Spring for plunger	—	1	—	5	0	0
B224/167	Knurled thumb screw for bar	—	1	—	1	2	0
B224/199	Spring hand lever for adjusting seat	—	1	—	3	9	0
B224/200	Adjusting plate on floorboards for front seat	—	1	—	3	4	0
2540	Distance washer for ditto	—	3	—	2	0	0
B224/163	Front seat slide (rear)	—	2	—	8	0	0
B224/168	Cushion for front seat O/S	—	1	—	2	0	0
B224/4	Front seat complete with adjusting slides and cushion N/S	—	1	—	8	0	0
B224/196	Front seat (upholstered) less cushion and adjusting fittings N/S	—	1	—	5	5	0
B224/162	Front seat sliding bar N/S	—	1	—	12	0	0
B224/197	Plunger for ditto	—	1	—	9	0	0
B224/198	Spring for plunger	—	1	—	5	0	0
B224/167	Knurled thumb screw for bar	—	1	—	1	2	0
B224/199	Spring hand lever for adjusting seat	—	1	—	3	9	0
B224/200	Adjusting plate on floorboards for front seat	—	1	—	3	4	0
2540	Distance washer for ditto	—	3	—	2	0	0
B224/163	Front seat slide (rear)	—	2	—	8	0	0
B224/169	Cushion for front seat N/S	—	1	—	2	0	0
B224/101	Rear seat pan	—	1	—	1	10	0
B224/201	Locating brackets for ditto	—	3	—	1	6	0
B224/102	Knurled thumb nut for securing rear seat pan	—	3	—	1	0	0
B224/170	Cushion for rear seat (less air bag)	—	1	—	6	10	0
B224/171	Air bag for rear seat cushion	—	1	—	16	0	0
B224/160	Rear squab complete	—	1	—	6	0	0
B224/202	Hinge for ditto	—	2	—	1	0	0
CARPETS							
1845	Rubber draught excluder for floorboard (5' 6" long)	—	2 lths.	—	10	0	0
B224/205	Carpet for manual gearbox with rubber mat	—	1	—	3	5	0
B224/174	Carpet for pre-selector gearbox with rubber mat	—	1	—	3	5	0
B224/177	Carpet centre O/S	—	1	—	1	4	0
B224/176	" " N/S	—	1	—	1	4	0
B224/206	Carpet (rear) O/S	—	1	—	14	0	0
B224/207	" (rear) N/S	—	1	—	14	0	0

Please Quote Chassis, Engine and Body Numbers in all Correspondence

		No. Used			Price Each		
Part No.	DESCRIPTION	2-seater	4-seater	Saloon	£	s.	d.
SALOON BODY DETAILS							
B223	Saloon body complete	—	—	1	Price on application		
DOORS, LOCKS AND HINGES							
B223/7	Front door (upholstered) less fittings and glass O/S	—	—	1	21	0	0
B223/162	Front door hinge (top) O/S	—	—	1	11	6	—
B223/163	" " " (bottom) O/S	—	—	1	2	0	—
B223/118	Hinge pin for front door	—	—	2	—	—	6
B223/144	Front door lock complete with safety locking lever O/S	—	—	1	9	6	—
B223/168	Door lock bolt locating plate with bush	—	—	2	8	10	—
B223/155	Cover-plate for ditto (top)	—	—	1	1	0	—
B223/171	" " " (bottom)	—	—	1	1	0	—
B223/172	Striking plate for door lock	—	—	2	2	0	—
B223/124	Front door handle O/S (outside)	—	—	1	5	0	—
B223/120	" " " O/S (inside)	—	—	1	4	0	—
B223/173	Remote control fitting for ditto O/S	—	—	1	7	0	—
B237/126	Door pull	—	—	1	4	0	—
B223/115	Door check strap	—	—	1	2	0	—
B223/139	Front door glass O/S (fixed)	—	—	1	15	0	—
B223/138	" " " O/S (sliding)	—	—	1	16	7	—
A582	Anti-rattle fitting for glass	—	—	1	4	0	—
B223/175	Front window pull O/S	—	—	1	4	2	—
B223/8	Front door (upholstered) less fitting and glass N/S	—	—	1	21	0	0
B223/164	Front door hinge (top) N/S	—	—	1	11	6	—
B223/165	" " " (bottom) N/S	—	—	1	2	0	—
B223/118	Hinge pin for front door	—	—	2	—	—	6
B223/166	Front door lock complete N/S	—	—	1	9	6	—
B223/168	Door lock bolt locating plate with bush	—	—	2	8	10	—
B223/155	Cover-plate for ditto (top)	—	—	1	1	0	—
B223/171	" " " (bottom)	—	—	1	1	0	—
B223/172	Striking plate for door locks	—	—	2	2	0	—
B223/14	Front door handle N/S (outside) with key	—	—	1	15	0	—
B223/199	Key for ditto (pattern or lock to be supplied with order)	—	—	2	2	0	—
B223/119	Front door handle N/S (inside)	—	—	1	4	0	—
B223/174	Remote control fitting for ditto N/S	—	—	1	6	0	—
B237/126	Door pull	—	—	1	4	0	—
B223/115	Door check strap	—	—	1	2	0	—
B223/139	Front door glass N/S (fixed)	—	—	1	15	0	—
B223/138	" " " N/S (sliding)	—	—	1	16	7	—
A582	Anti-rattle fitting for glass	—	—	1	4	0	—
B223/176	Front window pull N/S	—	—	1	4	2	—
B223/9	Rear door (upholstered) less fittings and glass O/S	—	—	1	18	5	0
B223/117	Rear door hinge (top) O/S	—	—	1	2	2	—
B223/160	" " " (bottom) O/S	—	—	1	1	8	—
B223/198	Hinge pin for rear door	—	—	2	—	—	6
B223/179	Rear door lock complete O/S	—	—	1	9	6	—
B223/168	Door lock bolt locating plate with bush	—	—	2	8	10	—
B223/155	Cover-plate for ditto (top)	—	—	1	1	0	—
B223/171	" " " (bottom)	—	—	1	1	0	—
B223/172	Striking plate for door lock	—	—	2	2	0	—
B223/122	Rear door handle O/S (inside)	—	—	1	4	0	—
B223/115	Door check strap	—	—	1	2	0	—
B223/137	Rear door glass O/S (fixed)	—	—	1	9	8	—
B223/136	" " " O/S (sliding)	—	—	1	9	11	—
A582	Anti-rattle fitting for ditto	—	—	1	4	0	—
B223/177	Rear window pull O/S	—	—	1	4	10	—
B223/10	Rear door (upholstered) less fittings and glass N/S	—	—	1	18	5	0
B223/116	Rear door hinge (top) N/S	—	—	1	2	2	—
B223/161	" " " (bottom) N/S	—	—	1	1	8	—
B223/198	Hinge pin for rear door	—	—	2	—	—	6
B223/180	Rear door lock complete N/S	—	—	1	9	6	—
B223/168	Door lock bolt locating plate with bush	—	—	2	8	10	—
B223/155	Cover-plate for ditto (top)	—	—	1	1	0	—
B223/171	" " " (bottom)	—	—	1	1	0	—
B223/172	Striking plate for door lock	—	—	2	2	0	—
B223/121	Rear door handle N/S (inside)	—	—	1	4	0	—
B223/115	Door check strap	—	—	1	2	0	—
B223/137	Rear door glass N/S (fixed)	—	—	1	9	8	—
B223/136	" " " N/S (sliding)	—	—	1	9	11	—
A582	Anti-rattle fitting for glass	—	—	1	4	0	—
B223/178	Rear window pull N/S	—	—	1	4	10	—

Please Quote Chassis, Engine and Body Numbers in all Correspondence

		No. Used			Price Each		
Part No.	DESCRIPTION	2-seater	4-seater	Saloon	£	s.	d.
SEATS AND FITTINGS							
B223/11	Front seat complete with fittings less cushion O/S	—	—	1	5	10	0
B223/170	Front seat (upholstered) less cushion and adjustable fitting	—	—	1	4	5	0
B224/200	Seat adjusting slide on floorboard (front)	—	—	1	3	4	0
2540	Distance washer for ditto	—	—	3		2	2
B223/181	Cross tube for frame with channel slide O/S	—	—	1	2	3	0
B224/197	Plunger for ditto	—	—	1		9	9
B224/198	Spring for ditto	—	—	1		5	5
B224/167	Knurled thumb screw for ditto	—	—	1	1	2	2
B223/183	Spring hand lever for adjusting seat	—	—	1	3	9	0
B224/163	Front seat slide (rear) on floorboards	—	—	2	8	0	0
B223/130	Cushion for front seat O/S	—	—	1	3	0	0
B223/12	Front seat complete with adjusting fittings, less cushion N/S	—	—	1	5	10	0
B223/170	Front seat (upholstered) less cushion and adjustable fittings	—	—	1	4	5	0
B224/200	Seat adjusting slide on floorboard (front)	—	—	1	3	4	0
2540	Distance washer for ditto	—	—	3		2	2
B223/182	Cross tube for frame with channel slide N/S	—	—	1	2	3	0
B224/197	Plunger for ditto	—	—	1		9	9
B224/198	Spring for ditto	—	—	1		5	5
B224/167	Knurled thumb screw for ditto	—	—	1	1	2	2
B223/183	Spring hand lever for adjusting seat	—	—	1	3	9	0
B224/163	Front seat slide (rear) on floorboards	—	—	2	8	0	0
B223/131	Cushion for front seat N/S	—	—	1	3	0	0
2523	Seat to floorboard fixing bracket (top)	—	—	2	1	2	2
2524	" " " " (bottom)	—	—	2	1	2	2
B223/185	Rear seat pan	—	—	1	2	10	0
B223/186	Locating bracket for ditto	—	—	3	1	6	6
B223/187	Nut for securing rear seat pan	—	—	3	1	6	6
B223/132	Cushion case for rear seat	—	—	1	6	0	0
B223/133	Air bag for rear seat cushion	—	—	2	18	0	0
FACIA PANEL							
B223/109	Facia panel (drilled)	—	—	1	3	10	0
B223/112	Pockets for facia panel	—	—	2	5	0	0
B223/110	Lid for pockets	—	—	2	11	0	0
B223/114	Writing tablets	—	—	2	2	6	6
CARPETS							
B223/146	Carpet for gearbox with rubber mat	—	—	1	2	0	0
B223/147	Carpet (centre) O/S	—	—	1	13	0	0
B223/148	" (centre) N/S	—	—	1	13	0	0
B223/149	" (rear) O/S	—	—	1	7	0	0
B223/150	" (rear) N/S	—	—	1	7	0	0
B223/151	Carpet for propeller shaft shroud	—	—	1	1	15	0
B224/172	Passenger foot rest with rubber mat... ..	—	—	1	9	0	0
2886	Bracket for ditto (bottom)	—	—	1		3	3
B223/156	Rubber mat for passenger foot rest and gearbox carpet	—	—	2	2	0	0
2707	Leather cover for speedometer reduction box	—	—	1	5	4	4
WINDSCREEN AND SLIDING ROOF							
B223/2	Windscreen complete with glass	—	—	1	8	1	0
B223/1	Windscreen frame complete	—	—	1	5	15	0
B223/135	Windscreen glass	—	—	1	2	5	8
B223/192	Windscreen rubber surround	—	—	1	4	6	6
A573	Windscreen winder complete	—	—	1	1	13	0
S35/1	Corrugated rubber tube for windscreen winder chain	—	—	1	1	0	0
2896	Support bracket for ditto	—	—	1		9	9
2897	Fixing strip for ditto	—	—	1		3	3
B223/140	Rear light glass	—	—	1	16	10	0
B239/156	Adjustable clamp bracket for sliding roof	—	—	2	1	6	6
B239/157	Front slide for ditto	—	—	2		5	5
B239/158	Leather washer for slides	—	—	4		1	1
B239/159	Cup washer for clamp bracket	—	—	2		3	3
B239/160	Knurled knob for clamp bracket	—	—	2		8	8
B223/127	Centre pull handle for sliding roof	—	—	1	4	0	0
B223/193	Channel for front slides	—	—	2	4	0	0
B223/194	Rear slide for roof	—	—	2	2	8	8
B237/139	Felt-lined slide for ditto	—	—	2	1	6	6

Please Quote Chassis, Engine and Body Numbers when ordering Parts

		No. Used			Price Each		
Part No.	DESCRIPTION	2-seater	4-seater	Saloon	£	s.	d.
LUGGAGE LID AND TOOLBOX							
B223/13	Luggage lid panel complete	—	—	1	8	15	0
B223/195	Support for ditto O/S	—	—	1	8	0	
B223/196	" " " N/S	—	—	1	8	0	
B224/153	Lock for luggage lid	—	—	2	3	0	
B224/151	Escutcheon plate for ditto	—	—	2	1	4	
B224/154	Key for ditto	—	—	1	1	0	
B224/155	C.P. staple for luggage strap	—	—	8	1	0	
B223/197	Hinge for luggage lid	—	—	2	9	0	
B223/3	Toolbox (bulkhead type) complete						
	Comm. Chassis No. K0322	—	—	1	1	19	0
2882	Support bracket for toolbox (long, on dash panel)	—	—	1	1	4	
2906	Support bracket for toolbox (short, on scuttle)	—	—	1			6
	Comm. Chassis No. K0322	—	—	1			
INTERIOR BODY FITTINGS							
B223/5	Interior light with switch and mirror O/S	—	—	1	12	6	
B223/6	" " " " " N/S	—	—	1	12	6	
A457	" Ashtray (on front doors)	—	—	2	1	6	
A583	" (rear)	—	—	2	9	6	
B223/143	Rear blind	—	—	1	11	0	
TOOL KIT							
P330/100	Tool roll	1	1	1	4	0	
P330/101	Screwdriver (10")	1	1	1	1	6	
P330/103	Adjustable spanner	1	1	1	2	8	
P330/104	Pliers (6")	1	1	1	1	0	
P330/113	Spanner ($\frac{1}{4} \times \frac{3}{16}$ ") (double ended)	1	1	1		6	
P330/114	" ($\frac{3}{8} \times \frac{5}{16}$ ") (double ended)	1	1	1		10	
P330/115	" ($\frac{1}{2} \times \frac{7}{16}$ ") (double ended)	1	1	1	1	3	
1733	Contact breaker spanner	1	1	1		6	
1734	Grease gun (for grouped system)	1	1	1	10	6	
A288	" " (for propeller shaft)	1	1	1	6	0	
1735	Tyre pump	1	1	1	7	0	
1736	Jack with handle	1	1	1	1	1	0
2008	Starting handle	1	1	1	5	6	
P330/117	Hammer for Rudge hubs	1	1	1	6	6	
2368	Cylinder head spanner	1	1	1	2	6	
2372	Plug spanner	1	1	1	2	9	
1959	Spanner ($\frac{1}{8}$ " Whitworth) (single ended)	1	1	1		10	
2742	Sump drain plug spanner	1	1	1	1	3	
2867	Tappet spanner with .006" feeler gauge	1	1	1	1	0	

Please Quote Chassis, Engine and Body Numbers in all Correspondence

PRINTED IN GREAT BRITAIN BY
THE MORRIS-OXFORD PRESS LTD.
COWLEY : OXFORD : ENGLAND

28329—3/35/750

Telephone : 251 (4 lines)

Telegrams : "EMGEE"



Governing Director - - - - LORD NUFFIELD
Managing Director - - - CECIL KIMBER, M.I.A.E.