


MMM & T Type Misc. Chromework

MMM & T Type Insignia

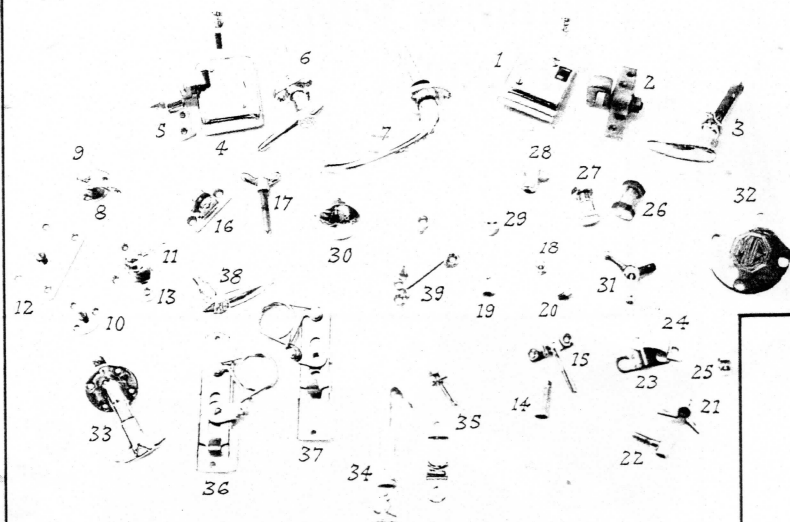

Pic.	Part	Description and Remarks	Model	Qty.
1	1150	Early pattern door locks. (Up to PA chassis No. 1350.)	D/F/J/L/ early PA	Pair
2	1151	Early pattern door lock striker plates and wedges. (Up to PA chassis No. 1350.)	D/F/J/L/ early PA	Pair
3	1152	Early style plain door handle. (Swept wing Js use Part No. 1155.)	D/F/J/L	Pair
4	1153	Standard pattern door locks.	Late J/P/K/N, TA,B,C,D,F	Pair
5	1154	Standard pattern door lock striker plate and wedge.	Late J/P/K/N, TA,B,C,D,F	Pair
6	1155	MG crested door handles. (N types used larger version of 1155.)	Late J/P/K/ TA,B,C	Pair
7	T1156	Door handles.	TD/F	Pair
8	1157	Side screen thumb nut base plate (female).	K/P/N	2/4
9	1158	Side screen flat top thumb screw (male).	K/P/N	2/4
10	T1159	Side screen thumb nut base plate (male).	TA,B	4
11	T1160	Side screen thumb nut domed (female).	TA,B,C,D,F	4
12	T1161	Side screen thumb nut base plate, square (male).	TC	4
13	T1162	Side screen thumb nut base plate triangular (male).	TD,F	4
14	1163	Side screen door top socket. (2 sockets per door top.)	M/D/F/J/L	4
14	1163	Side screen door top socket. (1 socket per door top.)	P/K/N/TA, B,C,D,F	2
15	1164	Side screen frame T pegs.	M,D,F,J,L P,K,N	4
16	1165	Hood frame to wheel arch support brackets.	All MMM models	Pair
17	T1166	Hood frame to windscreen fixing bolt.	TA,B,C,D,F	2
18	1167	Chrome dome nut, 1/4" BSF: to fit front apron.	L/K/P/N	4
19	1168	Chrome dome nut, 3/16" BSF: to hold tank straps.	All 2 seaters	2
20	T1169	Tank end panel securing bolts (dome, chrome).	TA,B,C,D,F	4
21	1170	Front bonnet hinge end support. (also rear on PB/NB.)	All MMM	1
22	1171	Rear bonnet hinge end support. (except PB/NB.)	All MMM	1
23	T1172	Bonnet hinge end support bracket (outer). (Front and rear are same.)	TA,B,C,D,F	2
24	T1172A	Bonnet hinge end support bracket (inner). (Front and rear are same.)	TA,B,C,D,F	2
25	1173	Bonnet top rest stops (dome, chrome) with nuts.	All MMM	4
26	1174	Headlamp bracket to radiator securing bolt/nut (brass). (Painted body colour.)	L/K/P/N	2
27	T1175	Headlamp bracket to radiator securing bolt/nut (chrome).	TA,B,C,D	2
28	1176	Handbrake/footbrake adjusting wing nut (T types / available) were longer)	All MMM/ T type	2/1
29	1177	Handbrake top button (chrome).	All models	1
30	1178	Wing fixing bolts. (Cycle wing models / 4 front / 2 rear.)	F2/early J2	6
30	1178	Wing fixing bolts. (Swept wing J (2 front / 2 rear).	Late J2	4
30	1178	Wing fixing bolts. (Rear wings only.)	P/L/K/N	2
31	1179	Dumb-bell wing nut for seat rake adjusters. (P/N originally used female wing nut.)	P/N/TA, B,C,D,F	2
32	1180	MG crested 'Brooklands' steering wheel centre plate. (Not available for 3 spoke steering wheel.)	J/L/K/P/ N/TA	1
33	1181	Bonnet catch.	D/F/J/ early L1	4
34	1182	Bonnet catch. (Only late L1 and early K types used these.)	J2/F2/L1/ L2/K	4
35	1183	Bonnet catch rests and pins (set 4). (Only late L1 and early K types used these.)	J2/F2/L1/ L2/K	1 set
36	1184	Bonnet catch slide and spring mechanism Right-hand.	Late K/P/N/ TA,B,C,D	2



Pic.	Part	Description and Remarks	Model	Qty.
37	1184A	Bonnet catch slide and spring mechanism Left-hand.	Late K/P/N/ TA,B,C,D	2
38	1185	Bonnet catch handle Right-hand (drivers' side).	Late K/P/N/ TA,B,C,D	2
38	1186	Bonnet catch handle Left-hand (passenger side).	Late K/P/N/ TA,B,C,D	2
39	1187	Bonnet strap end fixings - chrome.	Any model	2
MMM & T Type Insignia.				
1	1200	MG badge (brown/cream) — Radiator. MG badge (brown/cream) — Spare wheel cradle. MG badge (brown/cream) — Front apron flap. MG badge (brown/cream) — spare wheel k/off.	All models J2/F2/L2 L/K/P/N P/N/TA, B,C,D	1 1 1 1
1A	1201	MG Car Co Ltd. guarantee plate.	All MMM/TA B	1
2	1202	MG Car Co Ltd. guarantee plate.	TC	1
2A	T1203	MG Car Co Ltd. guarantee plate.	TD	1
2B	T1204	MG Car Co Ltd. guarantee plate.		
3	1205	Rocker cover box information/data plate. (Fits on carburettor side.)	D/F/J/L/K	1
4	1206	Body type plate. (Fits under guarantee plate.)	All MMM, except M	1
5	T1207	Body type plate. (Fits under guarantee plate.)	TA,B,C,D	1
6	1208	Footbrake adjustment instruction plate. (Fits on drivers' floorboard.)	All MMM	1
7	1209	Body makers plate 'CARBODIES'. (Fitted in petrol cap door on D/F1/J1 model. Behind drivers seat on upright panel on all others.)	All MMM	1
8	1210	Decal/label for SU petrolift.	D/F/early J & L	1
9	1211	'MG Car Co Ltd.' under-door threshold plate (sill). (Late TCs/TD were plain sills.)	All models	Pair
10	1212	Special 'Abbey Coachwork' plates — made to order.	'Abbey' bodied models	Pair
11	T1213	Patent plate.	TC,D	1
12	T1214	Auto-lube system, plates for holding grouped nipples.	TA,B	Pair
13	T1215	Decal/label for air cleaner canister.	TA,C	1
14	T1216	Decal/label for air cleaner/oil bath.	TD	1
15	1217	Union jack plaques — enamelled, not painted.	Any model	Pair

* Available only in secondhand condition.



P/N/T Bonnet catches are rarely fitted correctly. Only when the catch locks, by passing the handle point through 180° from front to rear are they fitted properly.

