


Automobile Electricity Wiring Diagram—D.309

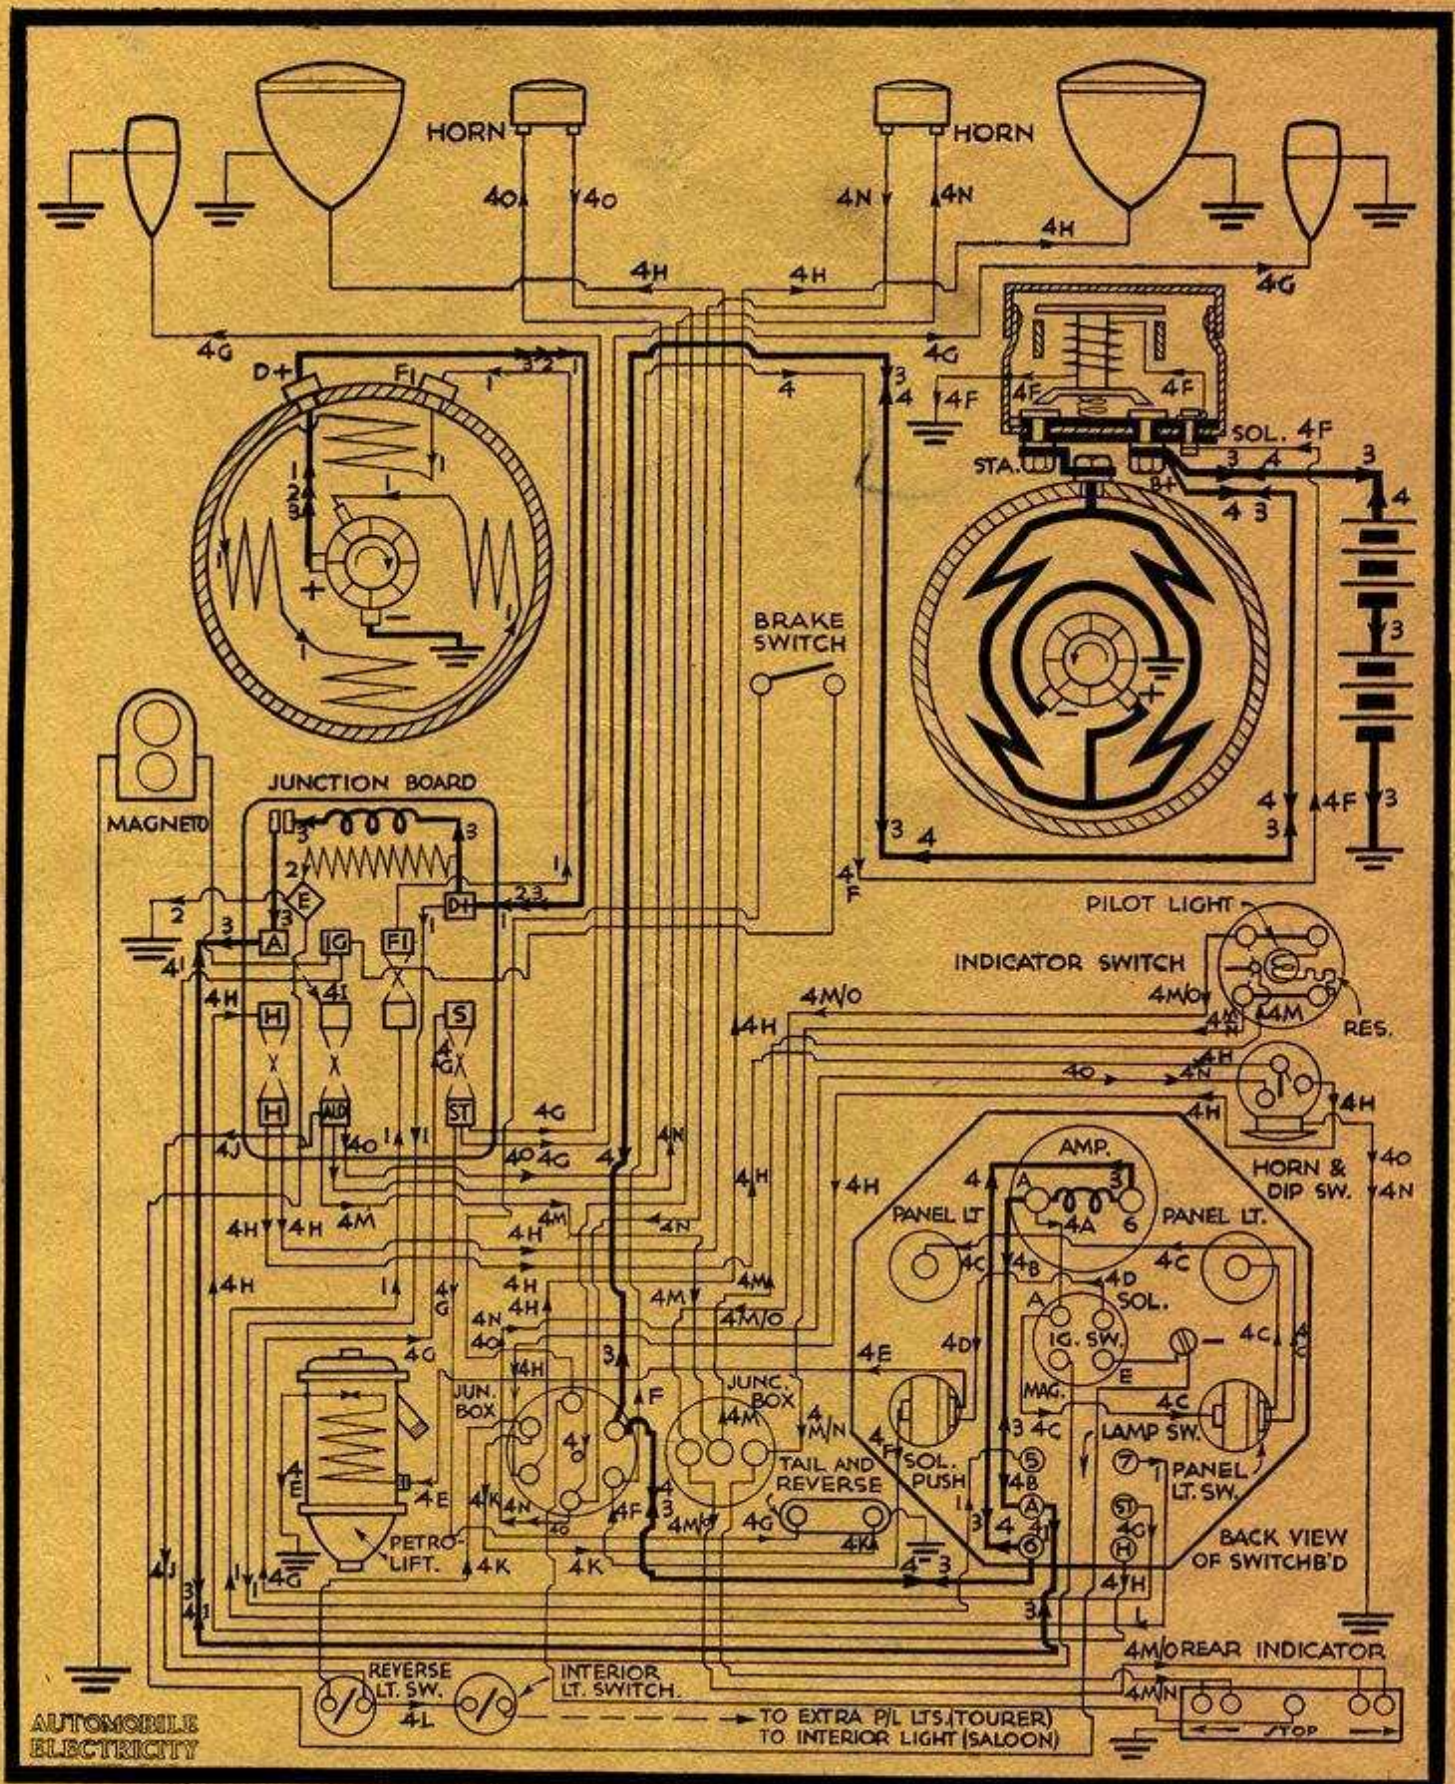

1933 M.G. "Magna" and "Magnette" Cars

CABLES REQUIRED.

HEAD LAMPS
SIDE LAMPS
TAIL LAMP & INDICATORS
DYNAMO-BATTERY MAIN

Being an earth return set every care and making perfect frame-contact.
Ripaults Ripogloss No. R2a76/1
Ripaults Ripogloss No. R276/1
Ripaults Ripogloss No. R276/1
Ripaults Ripogloss No. R376/1

should be taken to see that the battery earthing-strap is in good condition
Ripaults earthing-cables are particularly suitable as replacements.
PETROLIFT
STARTER
HORNS
HIGH TENSION
Ripaults Ripogloss No. R2a76/1
Ripaults Braided No. 536/1
Ripaults Ripogloss No. R276/1
Ripaults Ripogloss No. R266B [Adot.]