PRICE 5s.

THE SPARE PARTS LIST FOR

THE



MIDGET

(PA and PB Type)

THE MG CAR COMPANY LTD
ABINGDON-ON-THAMES

APRIL, 1934
Revised FEBRUARY, 1936

IMPORTANT

The Spare Parts List has been compiled and illustrated to assist as far as possible the correct ordering of replacement parts, and it will be found that the reference numbers on the illustrations correspond with those in the left-hand columns of the spares list.

When ordering replacements it is of the greatest assistance to our Service Department if the part required is given its correct reference number and description, and the chassis and engine numbers should be quoted in all correspondence as well as on the order itself, as delay and misinterpretation of orders are thus avoided.

We would also draw your attention to the fact that you will get quicker service if you place all your orders with our Distributors in your territory, who are holding very adequate stocks of M.G. Spares.

The name and address of the nearest Distributors is given in Instruction Manual supplied with the car, and we feel sure that all your requirements will receive every consideration and attention.

May we request you therefore to get into touch with our Distributors for all your future orders ?

The prices quoted are nett at the Distributors' or Dealers' premises, but in the event of parts having to be forwarded, packing and posting charges will of course be extra.

Except in the case of those who have opened approved accounts, all parts that can be will be forwarded C.O.D.

We cannot stress too highly the *danger* of fitting non-genuine M.G. parts.

Unfortunately cases have come to our notice where accidents have actually been caused by this practice, and we strongly advise all M.G. owners to insist and see that for all repairs and replacements only genuine M.G. parts are fitted.

M.G. parts are specially designed and manufactured to withstand the stresses imposed by a high-speed sports car, and we would warn all owners that the fitting of non-genuine parts renders the guarantee *null* and *void*.

The Company only fit the highest grade and best known proprietary fitments, but we give no guarantee whatsoever in respect of tyres, lamps, electrical equipment, speedometers, clocks, or any other proprietary fittings of any type supplied with the car or otherwise, as such proprietary fittings are usually covered by a guarantee issued by their respective manufacturers.

All questions involving the replacement or repair of any such proprietary fittings should therefore be taken up direct with the manufacturers concerned, and not with The M.G. Car Company Ltd.

G.K.—G.T.

Every possible precaution has been taken to ensure accuracy of this list. The right is, however, reserved to vary the list of spare parts and prices without notice.

CHASSIS NUMBER.....

ENGINE NUMBER.....

BODY NUMBER.....

REGISTRATION NO.....

NAME .....

ADDRESS .....

.....

DATE.....

AGENT .....

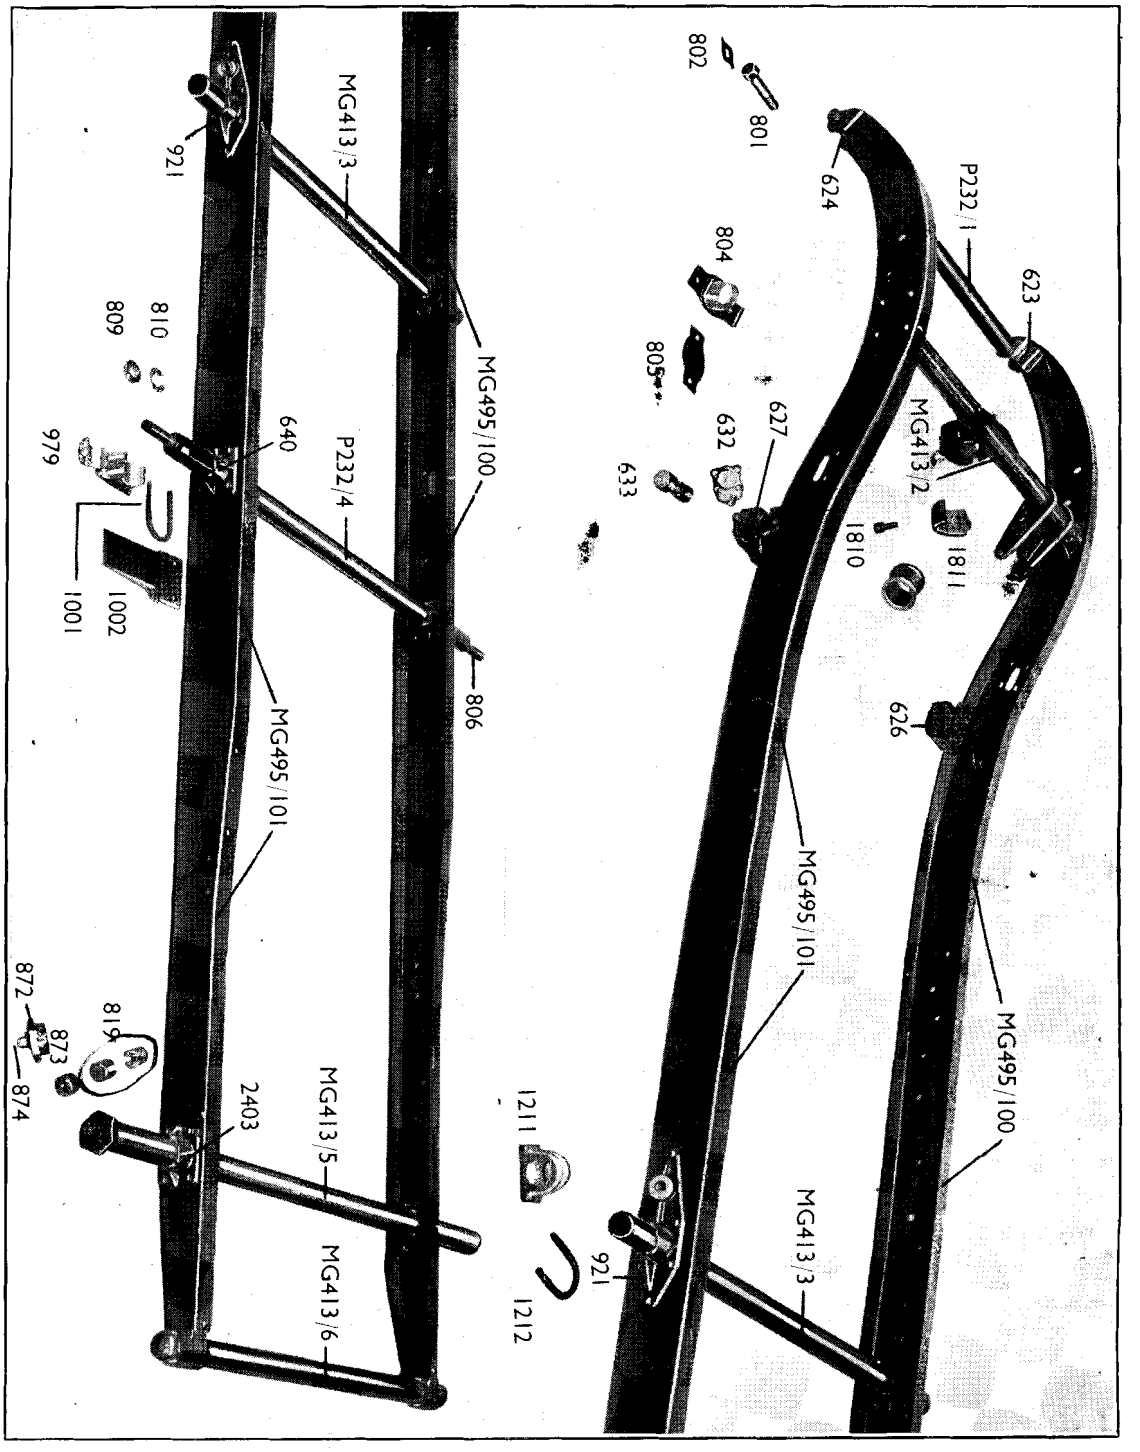
PLEASE FILL IN AND QUOTE REFERENCES IN CORRESPONDENCE AND WHEN ORDERING PARTS.

INDEX

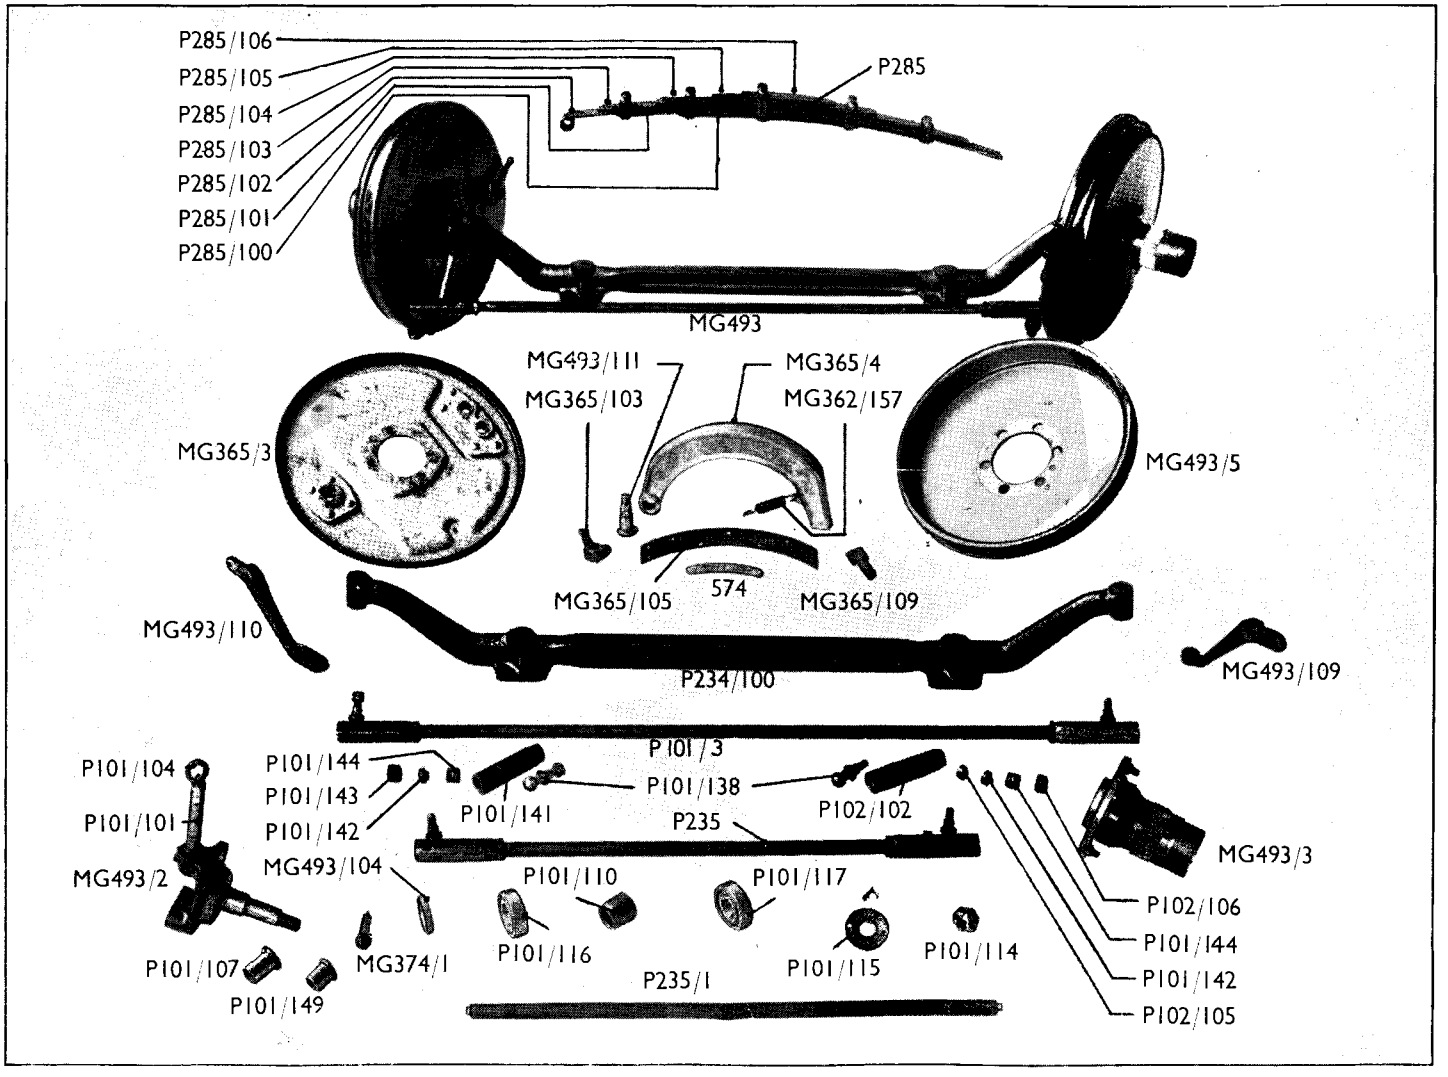
	Page
Accessories and Sundries	33 - 34
Axle (Front)	2 5
Axle (Rear)	6 —9
Battery Carrier	37
Body Details (Two-seater)	41— 42
Body Details (Four-seater)	45— 46
Body Mounting	41
Bonnet	38
Brake Gear	26
Chassis Frame	3
Controls	27
Dashboard and Fume Excluders	34
Electrical Equipment	37
Exhaust System	30
Headlamp Brackets	37
Hub Caps	33
Instruments	37
Instruction Plate for Greaser Nipples	33
Lubricating System (Chassis)	34
Petrol Tank and Pipes	33
Petrol Tap and Control	33
Petrol Pump	33
Power Unit and Installation	9—26
Bell Housing and Rear Main Bearing	10
Carburetters	17
Clutch Details	21—22
Clutch Housing Rubber Seal	34
Coil	37
Connecting Rods and Pistons	13
Crankshaft and Intermediate Main Bearings	10
Cylinder Block	9—10
Cylinder Head and Valve Gear	13—14
Dynamo and Vertical Drive	17
Electrical Details	21
Engine Nose Piece and Front Main Bearing	10
Flywheel	10
Gearbox and Remote Control	22— 26
Lubricating Details (Engine)	17— 21
Manifolds	14—17
Water Inlet Pipe	17
Propeller Shaft	9
Propeller Shaft Shroud and Fittings	38
Radiator and Connections	30
Running-boards	38
Shock Absorbers	33 34
Spare Wheel Carrier	41
Springs (Front)	5
Springs (Rear)	9
Steering Gear	29— 30
Steering Column Draught Excluders	34
Tool Kit	46
Undertray	34
Wings and Stays	37—38
Wheels	33

Do not forget to quote Chassis, Engine and Body Numbers in all correspondence

Part No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
	CHASSIS FRAME AND DETAILS					
MG495	**Chassis frame assembly,** comprising 2 side members, 6 cross tube assemblies, 2 front and 2 rear dumb-irons, 2 front sliding trunnion brackets, 2 front and rear suspension pins and shock absorber tie bar ... ... Ceased at Chassis No. PA1286	1	1	11	17	6
MG568	**Chassis frame assembly** (as above) Comm. at Chassis No. PA1287	1	1	11	17	6
P232/1	Front cross tube assembly	1	1		7	6
801	Front spring suspension pin	2	2		2	5
MG413/2	Engine bearer cross tube assembly Ceased at Chassis No. PA1286	1	1	1	8	2
MG568/1	Ditto ... ... Comm. at Chassis No. PA1287	1	1	1	8	2
1811	Cap for front engine mounting	1	1		2	9
1810	Special bolt for ditto	2	2			10
MG413/3	Third cross tube assembly	1	1		16	0
P232/4	Rear spring front cross tube assembly	1	1	1	3	0
806	Rear spring front suspension pin	2	2		5	4
MG413/5	Rear spring rear cross tube assembly...	1	1	2	5	0
819	Rear spring sliding trunnion roller	4	4		3	8
820	Washer for ditto	2	2			6
873	Distance piece for ditto	2	2			11
872	Cap for cross tube	2	2		4	9
MG413/6	Rear cross tube assembly	1	1		17	4
MG495/100	Side member O/S (drilled)	1	1	1	15	0
MG495/101	„ „ N/S (drilled)	1	1	1	15	0
623	Front dumb-iron O/S	1	1		5	10
624	„ „ N/S	1	1		5	10
625	Taper washer for ditto	2	2			4
626	Bracket for front spring sliding trunnion O/S ...	1	1		10	1
627	„ „ „ „ „ „ N/S ...	1	1		10	1
633	Front spring sliding trunnion roller	4	4		3	8
632	Cover for front spring sliding trunnion bracket	2	2		1	7
921	Combined cross tube end bracket and brake cross shaft support	2	2		4	10
640	End bracket for rear spring front cross tube ...	2	2		2	6
2403	End bracket for rear spring rear cross tube ...	2	2		2	9
1969	Rear shock absorber tie bar	1	1		2	5
804	Rubber buffer and plate for front axle stop ...	2	2		1	7
805	Backing plate for ditto	2	2			4
815	Rear axle striking pad (rubber)	2	2			3
817	Set screw for ditto	2	2			2
874	Combined greaser and set screw for rear spring rear cross tube	2	2			10
2918	Combined brake pedal and engine bearer bracket	1	1		9	6
958	Rear engine bearer bracket N/S	1	1		6	9
959	Location screw for ditto	1	1	doz.	1	3
	FRONT AXLE AND SPRINGS (*Illustration, page 4*)					
MG493	**Front axle assembly** less spring and wheels	1	1	12	17	6
P234/100	Front axle beam	1	1	2	6	6
MG493/1	Steering knuckle with bushes O/S	1	1		16	8
MG493/2	„ „ „ „ N/S	1	1		16	8
P101/107	Bush for steering knuckle (top)	2	2		2	8
P101/149	„ „ „ „ (bottom)	2	2		2	6
P101/115	Washer for steering knuckle (wheel bearings) ...	2	2	doz.		9
P101/113	Slotted nut for steering knuckle O/S	1	1		1	0
P101/114	„ „ „ „ „ N/S	1	1		1	0
P101/101	Steering knuckle king pin	2	2		6	6
MG374/1	Cotter pin for ditto	2	2		1	2
X101/1	Nut for cotter pin	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
P101/104	Thrust washer for steering knuckle	2	2		1	3
X493/6	Disc for steering knuckle top bush	2	2			1
MG493/109	Steering arm O/S	1	1		7	6
MG493/110	„ „ N/S	1	1		7	6
MG365/2	Brake anchor bracket assembly O/S	1	1	1	4	10
MG365/3	„ „ „ „ N/S	1	1	1	4	10
MG365/118	Bush for brake cam bracket	2	2		1	6
X234/2	Bolt for securing brake anchor bracket ($1\frac{1}{16}$" long)	4	4			3
X493/1	Ditto ($2\frac{1}{8}$" long)	2	2			11
X493/2	Ditto ($2\frac{7}{16}$" long)	2	2			11
X101/10	Nut for ditto	8	8	doz.	1	3

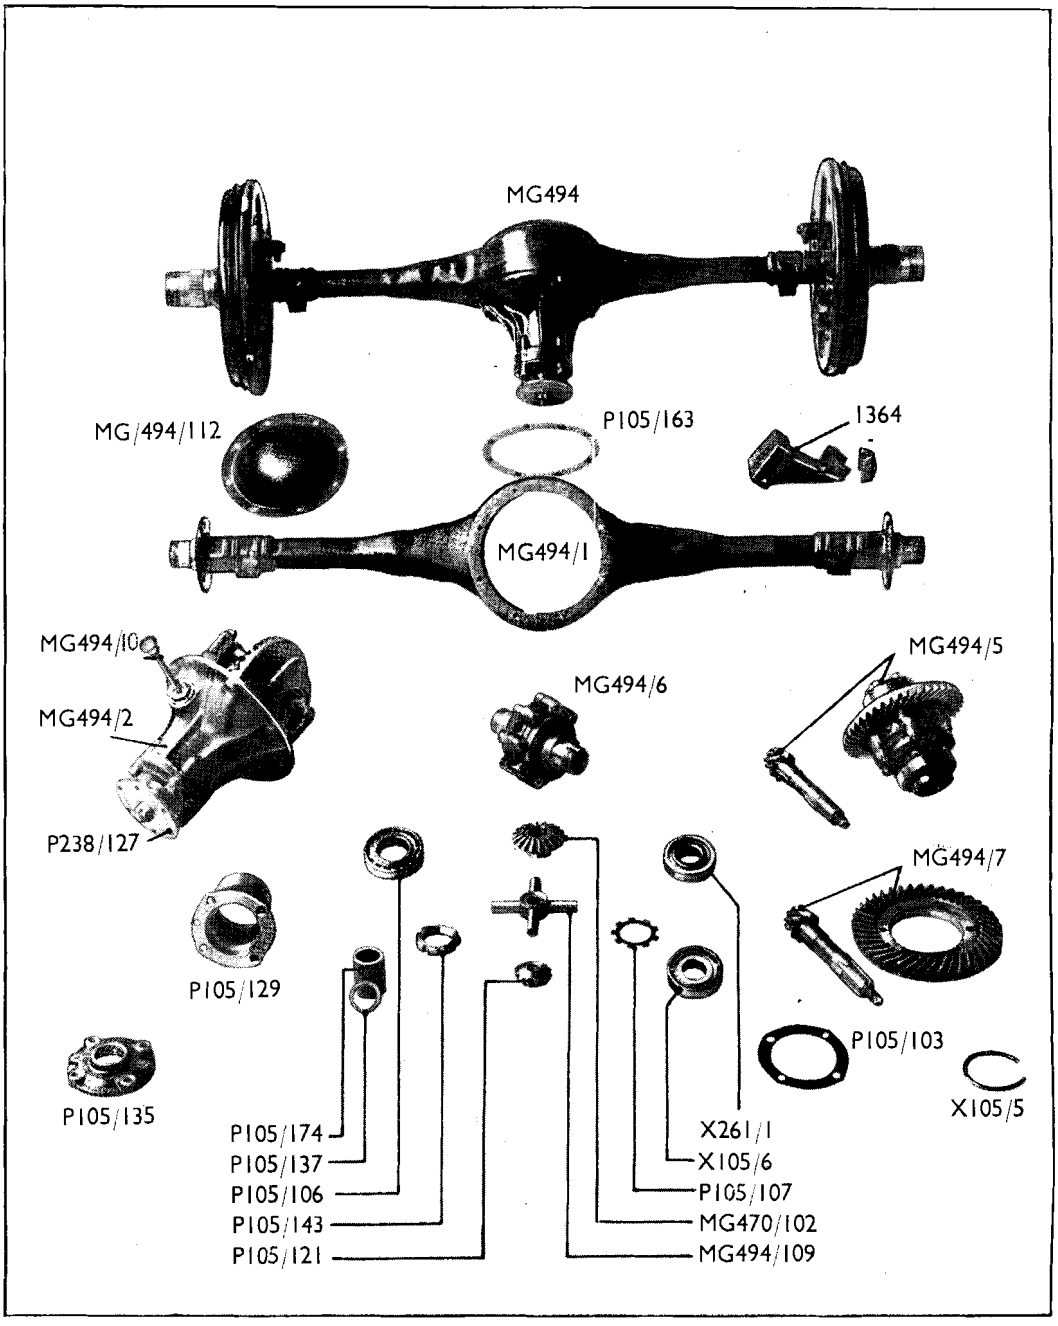


Please Quote Chassis, Engine and Body Numbers in all Correspondence

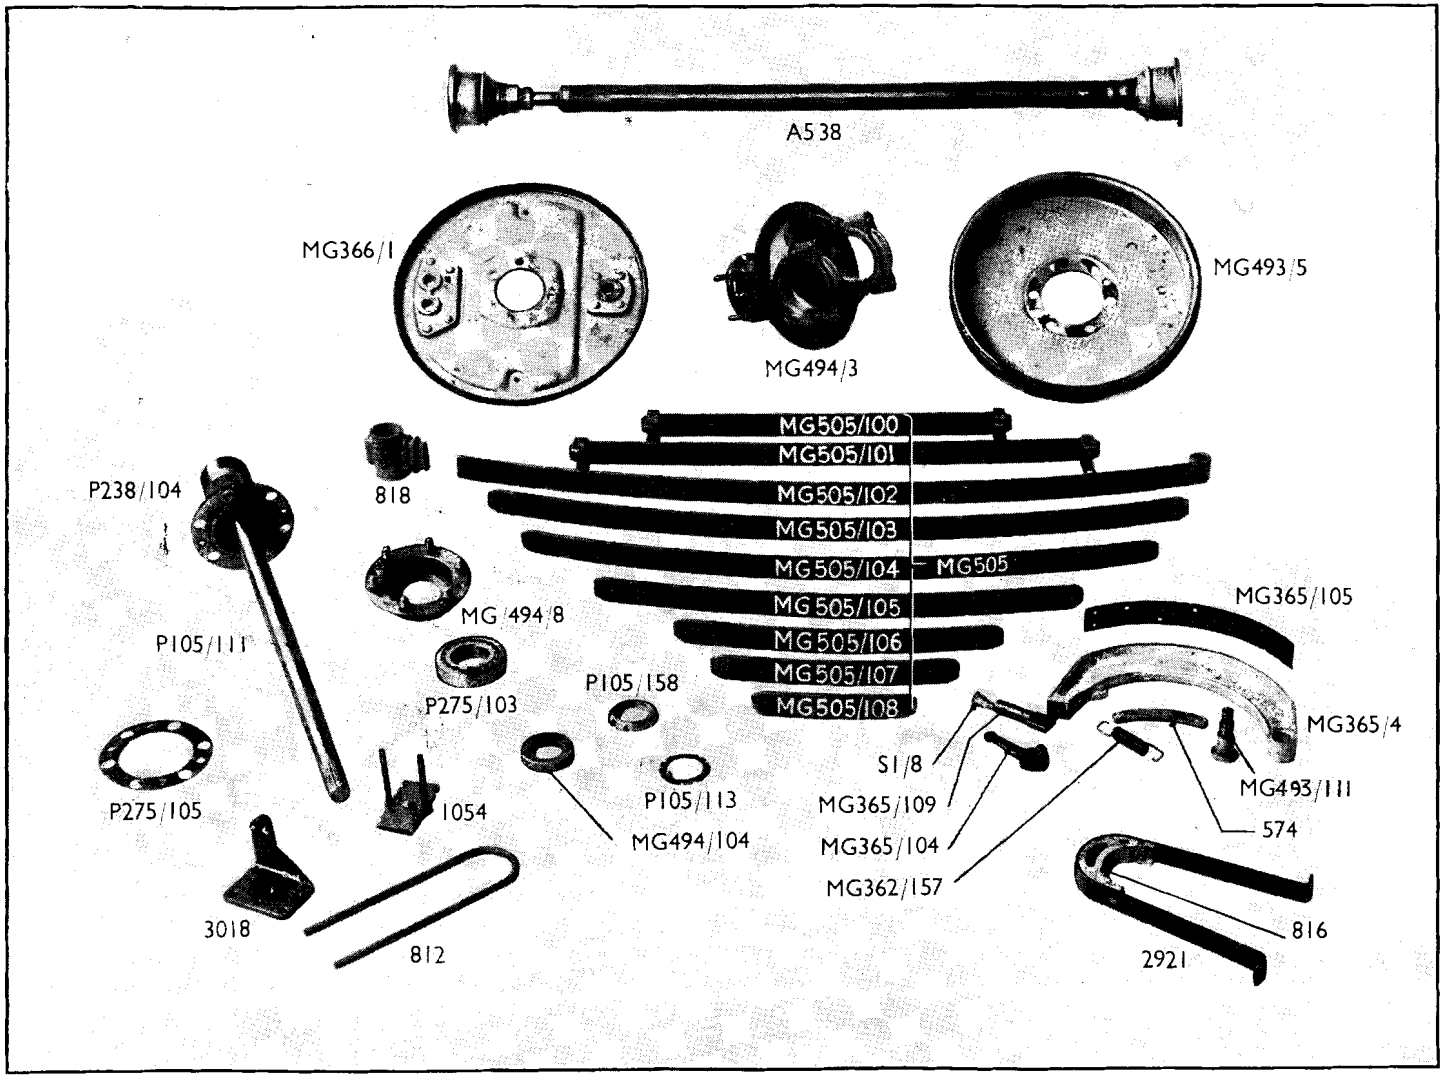

P285/106
P285/105
P285/104
P285/103
P285/102
P285/101
P285/100
P285
MG493
MG493/111
MG365/103
MG365/4
MG362/157
MG365/3
MG493/5
MG365/105
574
MG365/109
MG493/110
P234/100
MG493/109
P101/3
P101/104
P101/144
P101/143
P101/142
P101/141
P101/138
P102/102
P235
MG493/3
P101/101
MG493/2
MG493/104
P101/110
P101/117
P102/106
P101/144
P101/142
P102/105
P101/107
P101/149
MG374/1
P101/116
P101/115
P101/114
P235/1

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
X101/11	Spring washer for brake anchor bracket bolts ...	8	8	doz.		8
MG493/113	Tab washer for brake anchor bracket bolts ...	2	2	doz.	1	0
MG365/109	Brake cam O/S	1	1		3	0
MG365/107	„ „ N/S	1	1		3	0
MG365/104	Brake cam lever O/S	1	1		3	0
MG365/103	„ „ „ N/S	1	1		3	0
S1/8	Stauffer greaser for brake cam	2	2			9
X101/4	Key for brake cam lever	2	2			3
X101/5	Bolt for ditto	2	2			3
X101/1	Nut for ditto	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
MG365/4	Brake-shoe with lining assembled	4	4		13	7
MG365/102	Brake-shoe (bare)	4	4		4	2
MG365/105	Lining for brake-shoe	4	4		3	0
MG493/112	Rivets for lining	56	36	doz.		6
MG362/157	Spring for brake-shoe	2	2			3
574	Damper weight for brake-shoe	4	4		2	0
576	Clevis pin for ditto	8	8			3
575	Spring for ditto	8	8			3
X101/12	Washer for ditto	16	16	doz.		8
MG493/111	Fulcrum pin for brake-shoe	4	4		1	1
X493/4	Nut for ditto	4	4			2
X365/2	Spring washer for ditto	4	4	doz.		8
MG493/3	Front hub with studs O/S	1	1		18	10
MG493/4	„ „ „ „ N/S	1	1		18	10
P234/103	Front hub studs	12	12			9
X234/1	Nut for ditto	12	12	doz.		10
X493/5	Spring washer for ditto	12	12	doz.		8
MG493/106	Oil retainer for front hub	2	2		3	0
MG493/104	Distance washer for steering knuckle	2	2			6
P101/116	Hub bearing (inner)	2	2		10	6
P101/110	Distance tube for hub bearing	2	2		1	0
P101/117	Hub bearing (outer)	2	2		10	9
MG493/5	Brake-drum	2	2	1	14	10
P101/112	Countersunk screw for brake-drum	4	4	doz.	1	0
2324	Grub screw for brake anchor bracket	2	2	doz.	1	3
P101/3	**Track rod assembly**	1	1		18	6
P101/9	Track rod tube	1	1		6	6
P101/136	Lock nut for ditto (R.H. thread)	1	1			4
P101/137	„ „ „ „ (L.H. thread)	1	1			4
P101/140	Adjustable end for ball joint (R.H. thread) ...	1	1		5	6
P101/141	„ „ „ „ „ (L.H. thread) ...	1	1		5	6
P101/144	Spring for ball joint	2	2			3
P101/142	Ball cup (inner)	2	2			10
P101/143	End plug for ball joint	2	2		1	0
P101/138	Steering ball	2	2		2	0
P101/139	Nut for ditto	2	2			4
P235	**Draglink assembly**	1	1		17	2
P235/1	Draglink tube	1	1		5	0
P102/102	Adjustable end for ball joint (R.H. thread) ...	1	1		5	6
P101/141	„ „ „ „ „ (L.H. thread) ...	1	1		5	6
P101/136	Lock nut for ditto (R.H. thread)	1	1			4
P101/137	„ „ „ „ (L.H. thread)	1	1			4
P101/138	Steering ball	2	2		2	0
P101/142	Ball cup (inner)	2	2			10
P102/105	End cup (outer)	1	1		1	0
P102/106	End plug for ditto	2	2			3
P101/143	Ball cup plug (outer)	1	1		1	0
P101/144	Spring for ball joint	2	2			3
P285	**Front spring complete O/S and N/S**	2	2		17	4
P285/100	Front spring top rebound leaf	2	2		3	0
P285/101	Front spring second rebound leaf	2	2		3	5
P285/102	Front spring main leaf	2	2		5	3
P285/103	Front spring second leaf	2	2		2	9
P285/104	Front spring third leaf	2	2		2	3
P285/105	Front spring fourth leaf	2	2		2	5
P285/106	Front spring fifth leaf	2	2		2	0
1045	Front shock absorber bracket (on springs) O/S	1	1		4	2
1046	„ „ „ (on springs) N/S	1	1		4	2
1190	Front spring bottom plate	2	2		1	6
2422	Bolt for securing front springs	8	8			10
2309	Stiffening strip for front springs	4	4			8
401	Taper packing for front axle	2	2			7
802	Tab washer for front spring suspension pin ...	2	2			4
803	Dust excluder for front spring (rubber) ...	2	2		1	0

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	REAR AXLE AND SPRINGS AND PROPELLER SHAFT			
MG494	**Rear axle assembly** less springs and wheels ...	1	1	23 0 0
MG494/1	Rear axle casing	1	1	2 8 6
P238/123	Oil retainer for axle casing O/S	1	1	1 1
P238/122	„ „ „ „ „ N/S	1	1	1 1
X105/11	Taper drain plug for axle casing	1	1	4
MG494/2	Rear axle front cover with differential assembly and crown wheel and pinion	1	1	9 4 6
MG494/3	Rear axle front cover with caps and studs	1	1	1 11 6
P238/119	Studs for differential bearing caps	4	4	6
P101/139	Nut for ditto	4	4	4
X463/2	Stud for bevel pinion housing	4	4	2
P105/129	Bevel pinion housing	1	1	16 4
X105/5	Spring ring for ditto	1	1	7
P105/137	Bevel pinion washer	1	1	5
X105/6	Bevel pinion roller bearing	1	1	18 6
P105/174	Distance piece for bevel pinion bearing ...	1	1	1 0
X261/1	Bevel pinion thrust bearing	1	1	1 5 6
P105/175	Shim for bevel pinion (.002″ thick)	as reqd.		3
P105/176	„ „ „ „ (.003″ thick)	as reqd.		3
P105/103	„ „ „ „ (.005″ thick)	as reqd.		3
P105/104	„ „ „ „ (.010″ thick)	as reqd.		3
P105/105	„ „ „ „ (.020″ thick)	as reqd.		3
P105/135	Cap for bevel pinion housing	1	1	7 9
P105/127	Set screw for ditto	2	2	3
X105/3	Nut for securing cap	4	4 doz.	1 3
X105/4	Spring washer for ditto	4	4 doz.	8
P238/127	Universal joint flange for propeller shaft Ceased at Chassis No. PA1754	1	1	9 4
MG494/118	Ditto ... Comm. at Chassis No. PA1755	1	1	9 4
X105/12	Slotted nut for ditto	1	1	3
X105/13	Washer for ditto	1	1	3
MG494/101	Oil filler plug and dipstick adapter	1	1	3 0
MG494/106	Spring retainer for oil level dipstick	1	1	2
X364/7	Set screw for spring retainer	2	2 doz.	5
MG494/10	Dipstick with knob	1	1	3 10
MG494/5	Differential complete with crown wheel and pinion	1	1	4 17 0
MG494/6	Differential case complete	1	1	1 6 0
MG470/102	Differential wheel	2	2	8 6
P105/121	Differential pinion	4	4	7 4
MG494/109	Differential spider	1	1	7 0
MG494/7	Crown wheel and bevel pinion (8/43 ratio)	1 pr.	1 pr.	2 7 10
X494/1	Differential case bolts	8	8	7
P105/116	Nuts for ditto	8	8	3
P105/106	Differential bearing	2	2	14 3
P105/143	Adjusting nut for differential bearing	2	2	1 9
P105/107	Lock washer for ditto	2	2	3
P105/163	Joint for front cover	1	1	4
X105/1	Screw for front cover (1″ long)	6	6 doz.	1 3
X105/2	„ „ „ „ (1⅜″ long)	2	2 doz.	1 3
X105/3	Nut for ditto	8	8 doz.	1 3
X105/4	Spring washer for ditto	8	8 doz.	8
P238/128	Spring packing washer for ditto	8	8 doz.	5
MG494/112	Rear axle rear cover	1	1	1 6
P105/163	Joint for ditto	1	1	4
X494/2	Set screw for ditto	8	8 doz.	1 2
X105/4	Spring washer for ditto	8	8 doz.	8
MG470/106	Rear axle shaft	2	2	19 6
P238/104	Rear hub (L.H.)	1	1	14 6
P238/103	„ „ (R.H.)	1	1	14 6
MG366/1	Brake anchor bracket assembly O/S	1	1	1 4 10
MG366/2	„ „ „ „ N/S	1	1	1 4 10
MG365/118	Bush for brake cam bracket	2	2	1 6
X105/8	Bolt for securing brake anchor bracket (top) ...	4	4	3
X234/2	„ „ „ „ „ (bottom)	4	4	3
X101/10	Nut for ditto	8	8 doz.	1 3
MG365/109	Brake cam O/S	1	1	3 0
MG365/107	„ „ N/S	1	1	3 0
MG365/104	Brake cam lever O/S	1	1	3 0
MG365/103	„ „ „ N/S	1	1	3 0
S1/8	Stauffer greaser for brake cam	2	2	9
X101/4	Key for brake cam lever	2	2	3
X101/5	Bolt for ditto	2	2	3

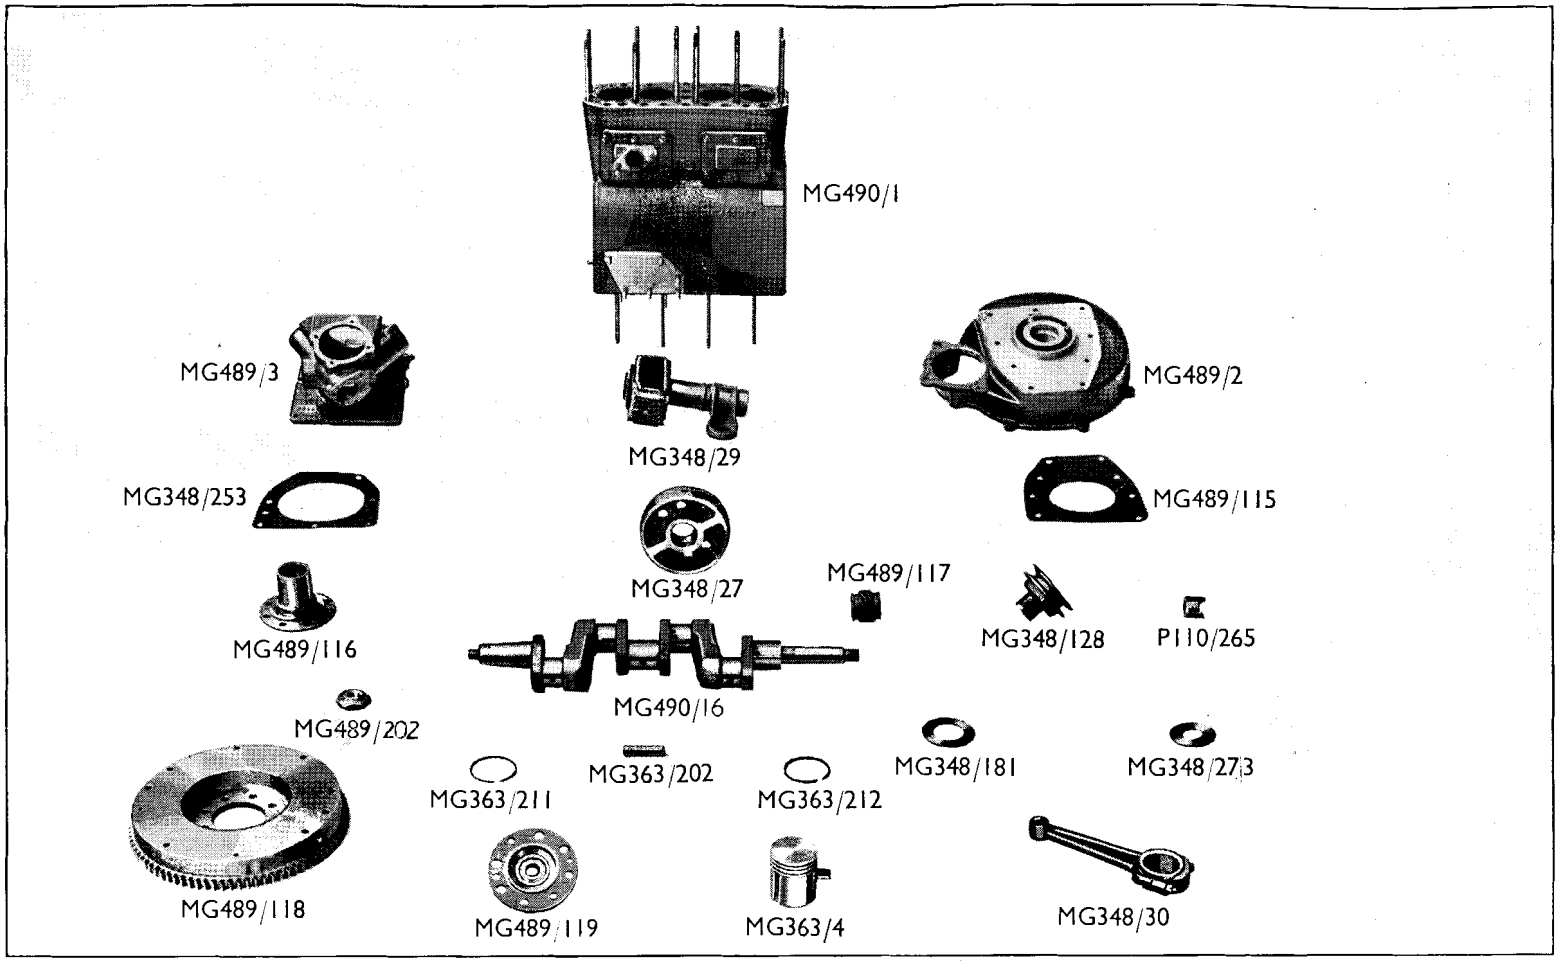


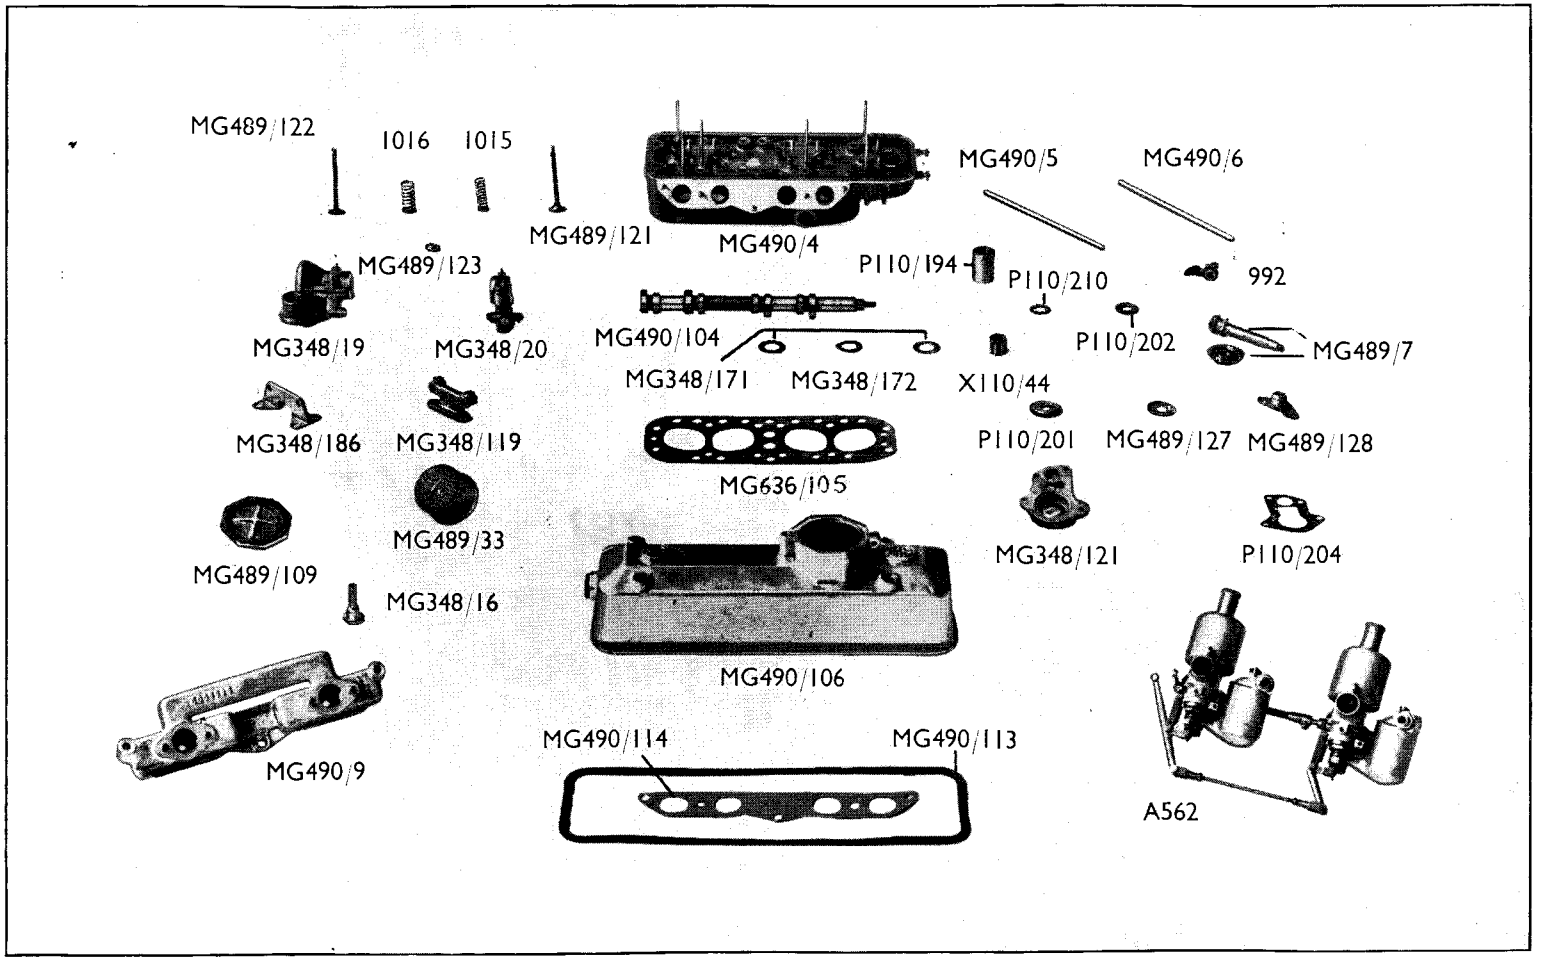
Please Quote Chassis, Engine and Body Numbers in all Correspondence


A538
MG366/1
MG494/3
MG493/5
MG505/100
MG505/101
MG505/102
MG505/103
MG505/104
MG505/105
MG505/106
MG505/107
MG505/108
MG505
818
P238/104
MG494/8
P105/111
P275/103
P105/158
MG365/105
MG365/4
S1/8
MG493/111
574
MG365/109
MG365/104
MG362/157
816
2921
P105/113
MG494/104
P275/105
1054
3018
812

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
X101/1	Nut for brake cam lever bolt	2	2	doz.	1	3
X101/2	Spring washer for brake cam lever bolt... ...	2	2	doz.		8
MG365/4	Brake-shoe with lining assembled	4	4		13	7
MG365/102	Brake-shoe (bare)	4	4		4	2
MG365/105	Lining for brake-shoe	4	4		3	0
MG493/112	Rivets for lining	36	36	doz.		6
MG362/157	Spring for brake-shoe	2	2			3
574	Damper weight for brake-shoe	4	4		2	0
576	Clevis pin for ditto	8	8			3
575	Spring for ditto	8	8			3
X101/12	Washer for ditto	16	16	doz.		8
MG493/111	Fulcrum pin for brake-shoe	4	4		1	1
X493/4	Nut for ditto	4	4			2
X365/2	Spring washer for ditto	4	4	doz.		8
MG494/8	Rear hub bearing housing assembled with studs ...	2	2		8	0
P238/105	Studs for rear hub	12	12			9
X234/1	Nuts for ditto	12	12	doz.		10
X493/5	Spring washer for ditto	12	12	doz.		8
P275/105	Joint for rear hub bearing housing	2	2			3
MG494/104	Oil retainer for rear hub	2	2		3	0
P275/103	Rear hub ball bearing	2	2	1	4	0
P105/113	Locking washer for ditto	2	2			3
P105/158	Nut for rear hub bearing (R.H.)	1	1		1	10
P105/159	„ „ „ „ „ (L.H.)	1	1		1	10
MG493/5	Brake-drum	2	2	1	14	10
MG470/105	Countersunk screw for drum	4	4			2
2324	Grub screw for brake anchor bracket	2	2	doz.	1	3
1364	Spring pad and steady bracket	2	2		7	0
MG505	**Rear spring complete O/S and N/S**	2	2	1	3	0
MG505/100	Rear spring top rebound leaf	2	2		3	4
MG505/101	Rear spring second rebound leaf	2	2		3	9
MG505/102	Rear spring main leaf	2	2		5	8
MG505/103	Rear spring second leaf	2	2		3	5
MG505/104	Rear spring third leaf	2	2		3	2
MG505/105	Rear spring fourth leaf	2	2		2	11
MG505/106	Rear spring fifth leaf	2	2		2	9
MG505/107	Rear spring sixth leaf	2	2		2	3
MG505/108	Rear spring seventh leaf	2	2		2	3
3018	Rear shock absorber bracket (on springs) O/S	1	1		5	10
3019	„ „ „ „ (on springs) N/S	1	1		5	10
1054	Rear spring top plate	2	2		2	4
812	Rear spring "U" clip	4	4			11
810	Radius washer for rear spring front suspension pin	2	2			6
809	Outer washer for ditto	2	2			6
818	Dust excluder for rear spring (rubber)	2	2		1	2
2921	Rear axle strap	2	2			5
816	Rubber block for ditto	2	2		1	0
A538	Propeller shaft ... Ceased at Chassis No. PA1754	1	1	4	9	0
A725	„ „ ... Comm. at Chassis No. PA1755	1	1	4	1	0
811	Bolts for propeller shaft flange Ceased at Chassis No. PA1754	12	12			4
S33/29	Ditto ... Comm. at Chassis No. PA1755	8	8			8
	POWER UNIT AND INSTALLATION (*Illustrations, pages* 11–23)					
MG490	**Power unit complete with gearbox and remote control** Ceased at Chassis No. PA2250	1	1	Price on application		
MG636	Ditto ... ... Comm. at Chassis No. PB30251	1	1	Price on application		
	CYLINDER BLOCK					
MG490/1	Cylinder block studded with cover-plates Ceased at Engine No. 2524AP	1	1	6	6	3
MG636/1	Ditto ... ... Comm. at Engine No. 501APB	1	1	8	13	9
X110/38	Core disc for cylinder block	2	2			4
MG348/102	Cylinder jacket cover-plate (front)	1	1		1	0
MG348/1	Cylinder jacket cover-plate (rear) complete	1	1		6	1
X489/24	Stud for water inlet pipe ($2\frac{5}{8}$" long)	1	1			2
X287/5	„ „ „ „ „ ($1\frac{3}{16}$" long)	1	1	doz.	1	3
MG348/297	Joint for cylinder jacket cover-plate	2	2			4
X110/4	Set screw for securing cover-plate	12	12			3
X110/5	Washer for ditto	12	12	doz.		4
P287/107	Drain cock	1	1		1	9
X287/4	Fibre washer for ditto	1	1	doz.		4

Part No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
X348/2	Stud for cylinder head (4 9/16" long)	1	1		1	9
X348/3	" " " " (4 5/16" long)	1	1		1	9
X348/4	" " " " (5 1/16" long)	1	1			5
X348/5	" " " " (4 13/16" long)	5	5			5
X348/6	" " " " (4 15/16" long)	4	4			5
X110/93	Dowel for locating front bearing housing ...	1	1	doz.		9
X348/26	Stud for oil drain pipe (centre and rear) ...	4	4	doz.	1	0
X489/6	Stud for oilbase (4 3/8" long)	4	4			4
X489/7	" " " (4 1/4" long)	4	4			4
X489/9	Stud for oil filter case (2" long)	4	4			2
X348/8	" " " " " (1 1/16" long)	2	2	doz.	1	0
X489/26	Stud for oil breather N/S Comm. at Engine No. 2123 AP	4	4			2
MG489/220	Plug for crankcase Comm. at Engine No. 2123 AP	2	2			6
	BELL HOUSING AND REAR MAIN BEARING					
MG489/2	Bell housing and rear main bearing	1	1	2	1	6
MG348/178	Rear main bearing (bush)	1	1		11	9
X110/13	Grub screw for ditto	1	1			2
MG348/100	Bolt (bell housing to cylinder block)	9	9			8
X105/4	Spring washer for ditto	6	6	doz.		8
X239/4	Copper washer for ditto	3	3	doz.		6
MG489/115	Joint for bell housing	1	1			2
	FRONT MAIN BEARING, HOUSING AND ENGINE NOSE PIECE					
MG489/3	Front bearing housing with front main bearing ...	1	1	3	0	6
MG420/101	Front main bearing (bush)	1	1		14	8
MG348/179	Grub screw for ditto	1	1			10
MG348/253	Joint for front bearing housing	as reqd.				3
X110/2	Set screw (housing to cylinder block)	7	7			3
X105/4	Spring washer for ditto	7	7	doz.		8
MG348/29	Engine nose piece and front bearing housing cover	1	1	1	17	2
X363/13	Bolt for front bearing housing cover	4	4			3
X105/4	Spring washer for ditto	4	4	doz.		8
X489/29	Set screw for ditto (securing)	4	4			2
X105/4	Spring washer for ditto	4	4	doz.		8
MG348/251	Joint for front bearing housing cover	1	1	doz.	1	0
MG490/107	Inspection cover for front bearing housing ...	1	1		1	2
MG490/108	Joint for ditto	1	1	doz.		6
X105/7	Set screw for ditto	2	2			3
X105/4	Spring washer for ditto	2	2	doz.		8
828	Rubber bush for engine mounting (front) ...	2	2	halves		4
	CRANKSHAFT, INTERMEDIATE BEARINGS AND FLYWHEEL					
MG490/16	Crankshaft	1	1	5	0	0
MG348/144	Plug for crank pin (alum.) supplied in sticks of six	as reqd.			4	2
MG489/210	Plug for crank pin (steel) supplied in sticks of six	as reqd.			2	9
X110/23	Key for crankshaft (distributor drive gear) ...	2	2			3
X348/17	" " " (dynamo drive gear) ...	1	1			2
MG489/116	Crankshaft flange	1	1	1	1	0
MG348/145	Nut for crankshaft flange Ceased at Engine No. 1000 AP	1	1		1	9
MG489/202	Ditto ... Comm. at Engine No. 1001 AP	1	1		1	9
X110/24	Key for ditto	1	1			6
MG348/181	Thrust washer for crankshaft (rear)	1	1		1	6
MG348/273	" " " " (front)	1	1		1	6
MG348/272	Thrust ring for ditto	1	1		1	6
X348/14	Grub screw for ditto	1	1	doz.		9
MG489/117	Spiral gear for crankshaft	1	1		11	1
MG348/128	Fan pulley	1	1		5	3
P110/265	Starting dog nut	1	1		2	4
MG348/27	Intermediate main bearing assembly	1	1	1	17	9
X287/7	Bolt for ditto (short)	2	2			4
X105/3	Nut for ditto	2	2	doz.	1	3
X105/4	Spring washer for ditto	2	2	doz.		8
P287/115	Bolt for intermediate main bearing (long) ...	2	2		1	5
MG348/300	Lock plate for ditto	2	2			3
MG489/118	Flywheel	1	1	1	9	6
MG348/148	Bolt for ditto	8	8			7
X363/31	Slotted nut for ditto	8	8			3
MG489/119	Housing for first motion shaft spigot bearing ...	1	1		7	0
X110/28	Spigot bearing for first motion shaft	1	1		8	9


MG490/1
MG489/3
MG489/2
MG348/29
MG348/253
MG489/115
MG348/27
MG489/117
MG348/128
P110/265
MG489/116
MG490/16
MG489/202
MG348/181
MG348/273
MG363/211
MG363/202
MG363/212
MG489/118
MG489/119
MG363/4
MG348/30

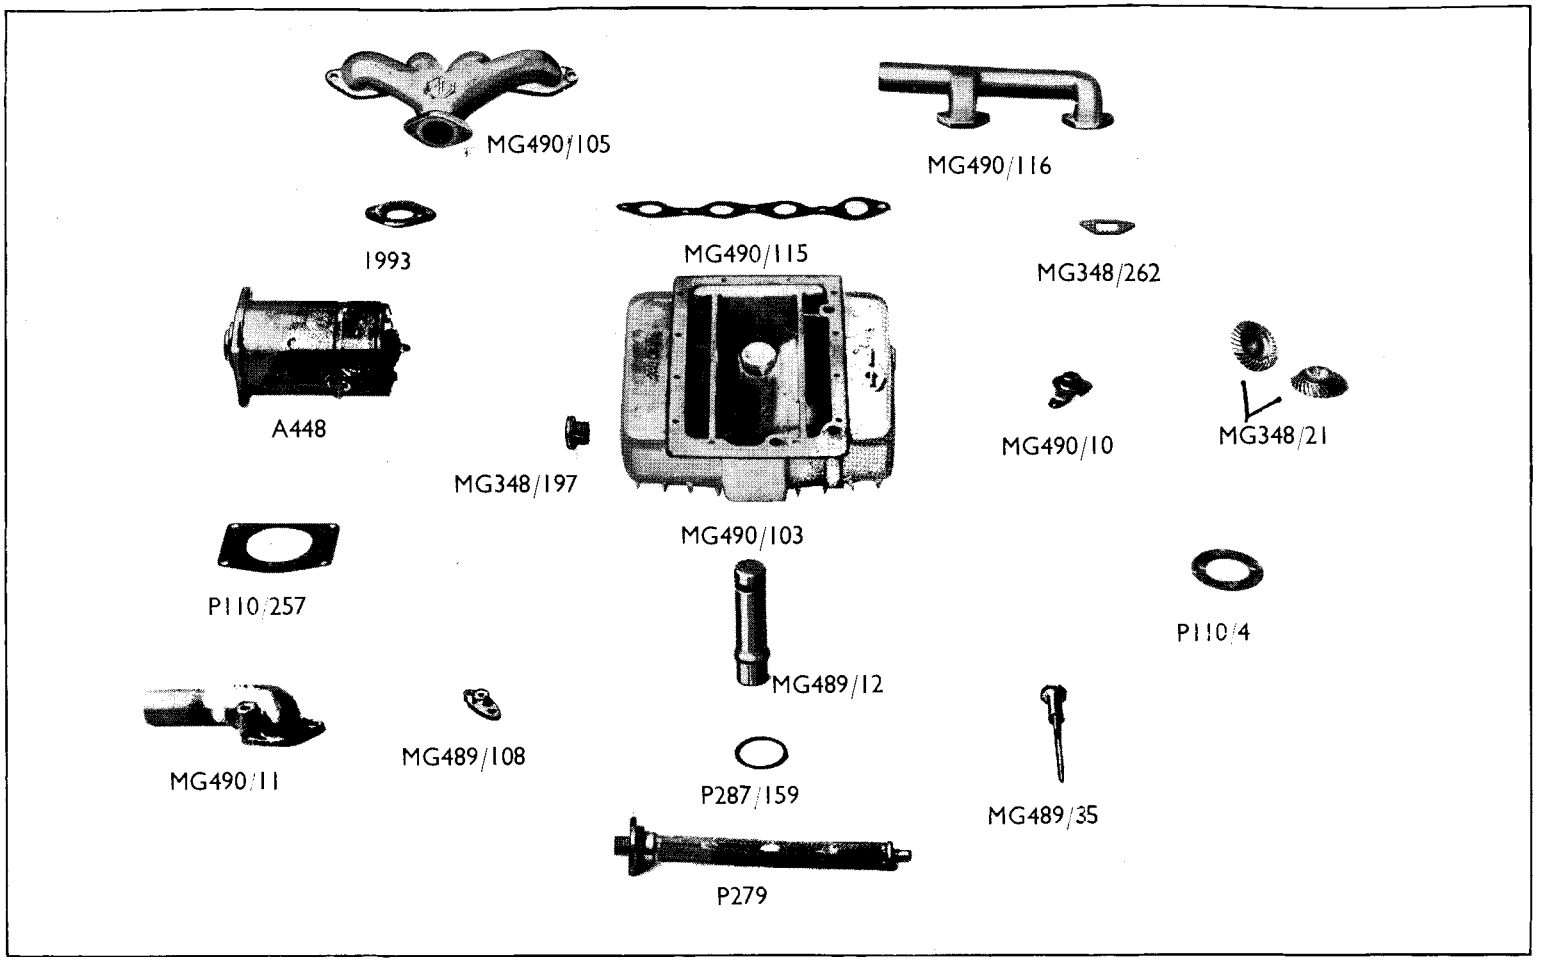

MG489/122
1016
1015
MG489/121
MG490/4
MG490/5
MG490/6
MG489/123
P110/194
P110/210
992
MG348/19
MG348/20
MG490/104
P110/202
MG489/7
MG348/171
MG348/172
X110/44
MG348/186
MG348/119
P110/201
MG489/127
MG489/128
MG636/105
MG489/33
MG489/109
MG348/121
P110/204
MG348/16
MG490/106
MG490/9
MG490/114
MG490/113
A562

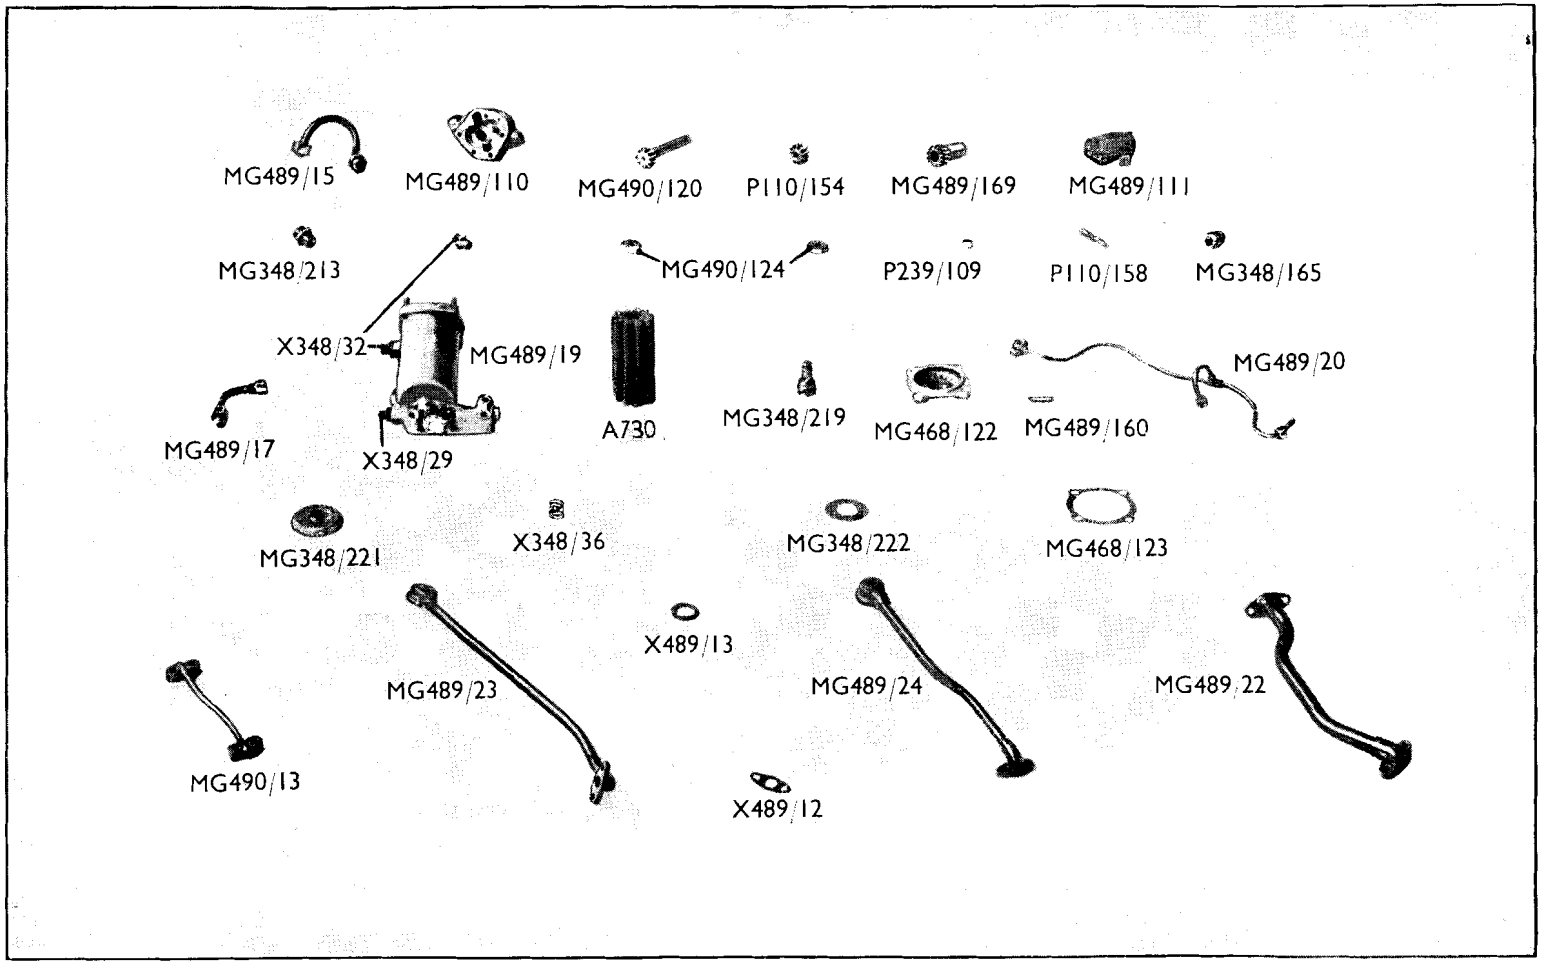
Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
	CONNECTING RODS AND PISTONS (*Illustration, page 11*)					
MG348/30	Connecting rod complete	4	4	1	4	10
MG363/205	Bush for connecting rod (small-end)	4	4		1	2
MG384/121	Bolt for connecting rod	8	8			10
984	Nut for ditto	8	8			3
MG363/4	Piston complete with rings and gudgeon pin (57 mm.) Ceased at Engine No. 2524 AP	4	4	1	0	0
MG636/2	Ditto (60 mm.) Comm. at Engine No. 501 APB	4	4	1	0	0
MG363/211	Piston rings (compression) (57 mm.) Ceased at Engine No. 2524 AP	8	8		1	6
MG636/102	Ditto (compression) 60 mm.) Comm. at Engine No. 501 APB Ceased at Engine No. 637 APB	8	8		1	6
MG636/108	Ditto (compression) (60 mm.) Comm. at Engine No. 638 APB	8	8		1	6
MG363/212	Ditto (scraper) (57 mm.) Ceased at Engine No. 2524 AP	4	4		1	4
MG636/103	Ditto (scraper) (60 mm.) Comm. at Engine No. 501 APB	4	4		1	4
MG363/202	Gudgeon pin (57 mm.) Ceased at Engine No. 2524 AP	4	4		2	4
MG636/104	Ditto (60 mm.) Comm. at Engine No. 501 APB	4	4		2	4
	CYLINDER HEAD AND VALVE GEAR					
MG490/3	Cylinder head assembly complete less manifolds and sparking plugs	1	1	14	16	3
MG490/4	Cylinder head (studded) with valve guides	1	1	4	10	0
MG489/120	Valve guide	8	8		1	2
X110/100	Stud for cylinder head cover	4	4			2
X110/6	Stud for camshaft front bearing housing ...	2	2			3
X348/21	Stud for camshaft intermediate and rear bearing housing ($3\frac{13}{16}$" long)	2	2			2
X110/6	Ditto (1" long)	4	4			3
X348/8	Stud for induction manifold ($1\frac{1}{16}$" long) ...	2	2	doz.	1	0
X348/22	" " " " ($2\frac{5}{8}$" long)	2	2			2
X490/1	" " " " ($1\frac{1}{2}$" long)	1	1	doz.	1	0
X420/4	Stud for exhaust manifold...	5	5			2
X110/20	Stud for water outlet pipe	4	4			3
X110/6	Stud for oil drain housing	2	2			3
X468/10	Stud for cylinder head to radiator bracket ...	2	2			3
X110/38	Core disc	2	2			4
X489/3	Plug for oil gallery	1	1			3
X348/37	Washer for ditto	1	1	doz.	1	0
X101/10	Nut for securing cylinder head	12	12	doz.	1	3
MG489/121	Inlet valve	4	4		3	0
MG489/122	Exhaust valve	4	4		3	0
1015	Valve spring (inner)	8	8			5
1016	" " (outer)	8	8			8
MG489/123	Valve spring collar	8	8			8
P110/184	Split cotters for valves ... ...(halves)	16	16	pair	1	0
992	Valve rocker	8	8		7	2
997	Locking screw for valve rocker	8	8			2
X110/64	Spring washer for ditto	8	8	doz.		3
MG363/106	Eccentric bush for valve rocker	8	8		3	4
X363/11	Spring ring for valve rocker	8	8	doz.		9
MG490/5	Valve rocker-shaft N/S	1	1		3	9
MG490/6	" " O/S	1	1		3	9
X110/47	Locking screw for valve rocker-shaft	2	2			3
X110/48	Copper washer for ditto	2	2	doz.		3
MG348/182	Distance tube for valve rocker-shaft ($1\frac{27}{32}$" long)	2	2			5
MG489/124	" " " " " ($1\frac{3}{32}$" long)	2	2			4
MG489/125	" " " " " ($\frac{11}{16}$" long)	2	2			4
P110/179	" " " " " ($\frac{3}{4}$" long) ...	4	4			4
MG348/185	Belleville washers for ditto	8	8	doz.		9
X287/14	Plain washers for ditto	2	2	doz.		6
MG348/186	Steady bracket for valve rocker-shaft	1	1		2	9
MG348/119	Rear end support bracket for rocker-shaft ...	1	1		12	10
MG490/104	Camshaft	1	1	1	4	3
X363/31	Slotted nut for ditto	1	1			3
X348/25	Washer for ditto	1	1	doz.		6
2362	Tachometer drive adapter	1	1		2	10
MG348/19	Camshaft front bearing housing with cap	1	1		19	4
X110/49	Dowel for cap	2	2	doz.		8
X348/26	Stud for cap	2	2	doz.	1	0

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
X101/1	Nut for camshaft front bearing cap	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
MG348/175	Camshaft front bearing white metal (top) ...	2	2		1	0
MG348/176	„ „ „ „ „ (front bottom)	1	1		1	0
MG348/177	„ „ „ „ „ (rear bottom)	1	1		1	0
X101/1	Nut for securing camshaft front bearing housing	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
MG348/20	Camshaft intermediate and rear bearing housing with cap	2	2		14	6
X110/49	Dowel for cap	4	4	doz.		8
X348/26	Stud for cap	2	2	doz.	1	0
X101/1	Nut for ditto	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
P287/145	Plug for camshaft intermediate and rear bearings	2	2			3
X110/48	Copper washer for intermediate and rear bearing plug	2	2	doz.		3
MG348/173	Camshaft intermediate and rear bearing white metal (bottom half)	2	2		1	6
MG348/174	Ditto (top half)	2	2		1	6
X101/1	Nut for securing camshaft intermediate and rear bearing housing	6	6	doz.	1	3
X101/2	Spring washer for ditto	6	6	doz.		8
MG489/7	Camshaft and dynamo bevel wheels	1 pr.	1 pr.	pair	1	7	6
X101/4	Key for camshaft bevel wheel	1	1			3
MG348/171	Thrust washer for camshaft	2	2			10
MG348/172	Belleville washer for camshaft	2	2			7
P110/202	Washer for vertical drive pinion	1	1		1	0
P110/210	Thrust washer for vertical drive pinion (.172" thick)	as reqd.				7
P110/211	Ditto (.178" thick)	as reqd.				7
P110/194	Sleeve for vertical drive pinion	1	1		9	0
X110/44	Roller bearing for ditto	2	2		5	10
P110/43	Retainer plate for bearing with felt	1	1		4	3
X110/98	Felt washer for ditto	1	1			3
MG489/127	Oil thrower for vertical drive pinion	1	1			4
MG348/121	Oil drain housing for vertical drive	1	1		6	2
X636/1	Nut for securing oil drain housing	4	4			1
X101/2	Spring washer for ditto	4	4	doz.		8
P110/204	Shim for vertical drive (.003" thick)	as reqd.				3
P110/205	„ „ „ „ (.005" thick)	as reqd.				3
P110/206	„ „ „ „ (.007" thick)	as reqd.				3
P110/207	„ „ „ „ (.010" thick)	as reqd.				5
P110/208	„ „ „ „ (.015" thick)	as reqd.				5
P110/209	„ „ „ „ (.020" thick)	as reqd.				8
MG489/128	Universal joint fork for vertical drive	1	1		4	5
X110/43	Key for ditto	1	1			3
P110/198	Nut for ditto	1	1			7
P110/199	Washer for ditto	1	1	doz.		8
MG636/105	Cylinder head gasket	1	1		4	10
MG490/8	Cylinder head cover assembly	1	1	2	0	0
MG490/106	Cylinder head cover (bare)	1	1	1	11	4
MG489/109	Oil filler lid	1	1		4	2
MG489/132	Sealing washer for ditto	1	1			6
MG489/133	Eye bolt for ditto	1	1		3	2
MG489/134	Clamp for cover	1	1		2	10
X489/4	Joint pin for oil filler lid	2	2	doz.	1	0
X101/12	Washer for ditto	2	2	doz.		8
MG489/135	Bolt for oil filler cover clamp	1	1		2	0
X489/5	Joint pin for ditto	1	1			2
X287/17	Washer for ditto	1	1	doz.		6
MG489/136	Nut for oil filler cover clamp	1	1		1	0
MG489/33	Strainer for oil filler	1	1		1	4
MG490/113	Joint for cylinder head cover	1	1		2	10
MG348/16	Fixing nut for cylinder head cover	4	4		1	7

MANIFOLDS AND CARBURETTERS *(Illustration, page 12)*

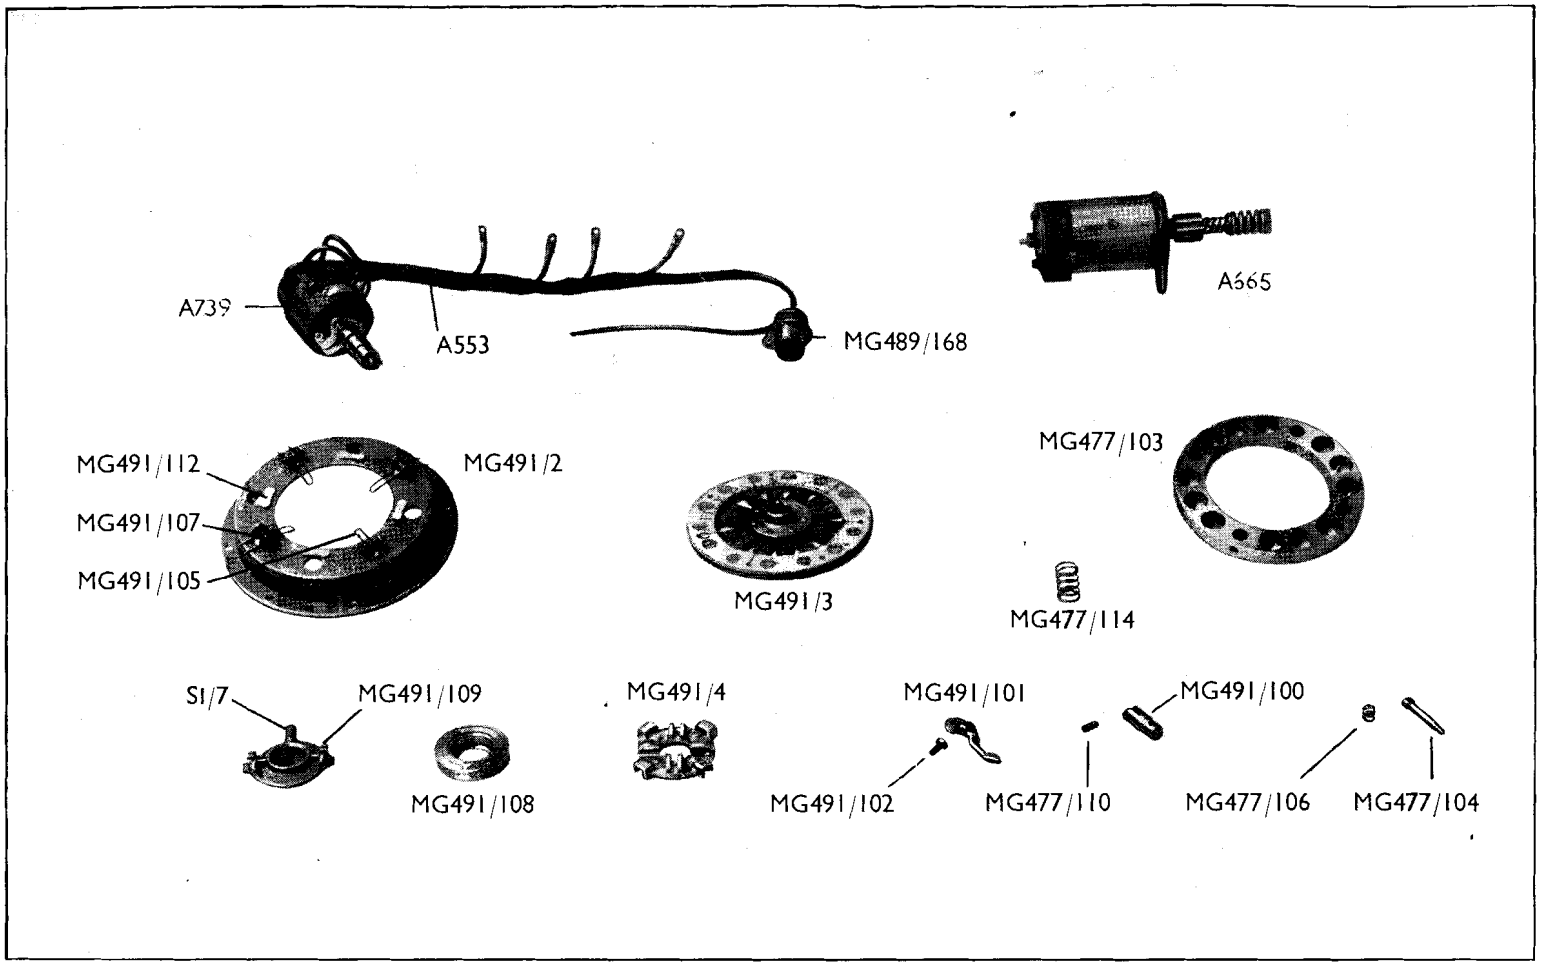
MG490/9	Induction manifold (studded)	1	1	1	0	0
X110/6	Stud for carburetters	4	4			3
MG363/102	Plug for induction manifold	1	1			4
X348/57	Washer for ditto	1	1	doz.		6
MG490/114	Joint for induction manifold	1	1		2	1
X105/3	Nut for securing induction manifold	3	3	doz.	1	3

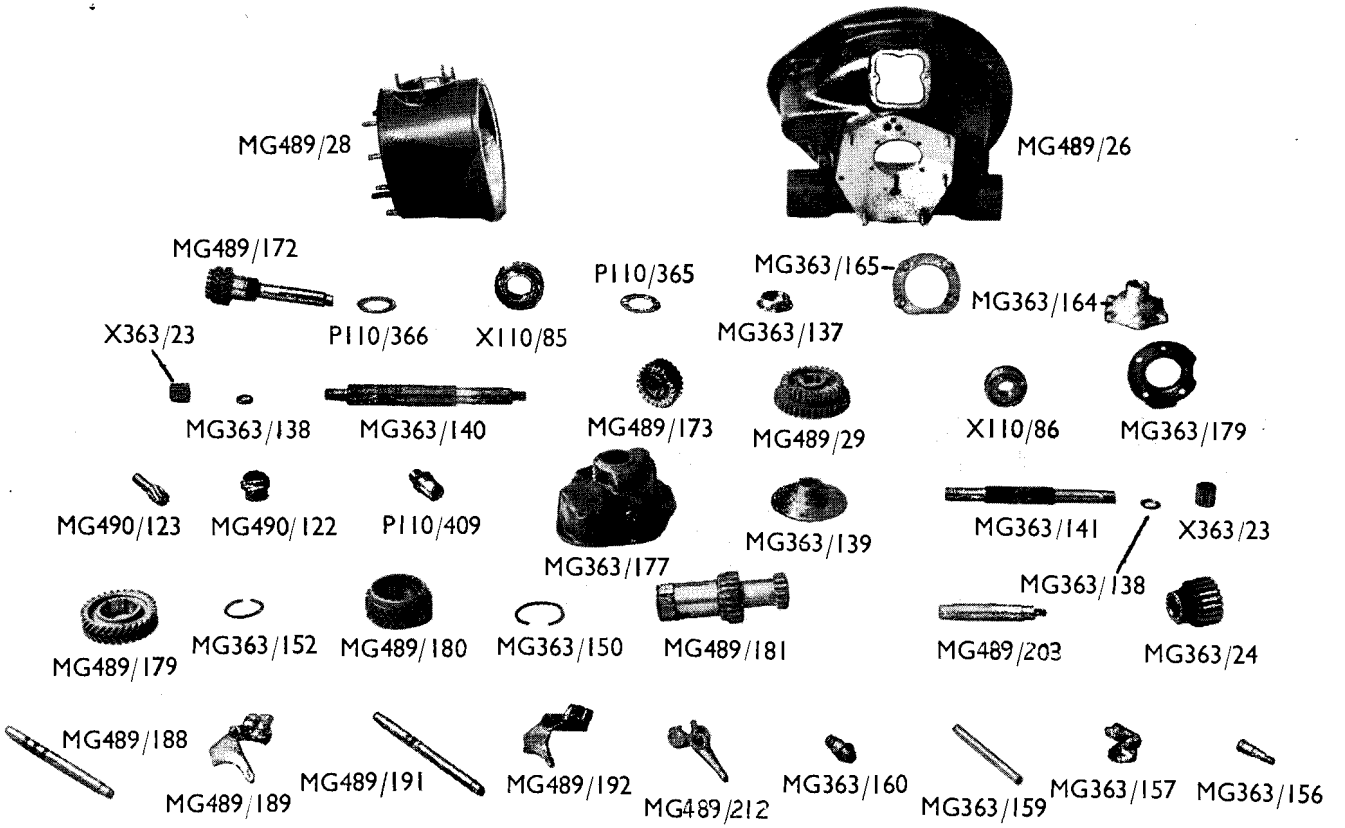

MG490/105
MG490/116
1993
MG490/115
MG348/262
A448
MG348/197
MG490/103
MG490/10
MG348/21
P110/257
P110/4
MG489/12
MG490/11
MG489/108
P287/159
MG489/35
P279


MG489/15
MG489/110
MG490/120
P110/154
MG489/169
MG489/111
MG348/213
MG490/124
P239/109
P110/158
MG348/165
X348/32
MG489/19
MG489/20
MG489/17
X348/29
A730
MG348/219
MG468/122
MG489/160
MG348/221
X348/36
MG348/222
MG468/123
X489/13
MG489/23
MG489/24
MG489/22
MG490/13
X489/12

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
X468/3	Lock nut for securing induction manifold ...	2	2	doz. 6
X105/4	Spring washer for ditto	5	5	doz. 8
A562	Carburetters complete with links	1 pr.	1 pr.	pair 7 0 0
X363/18	Joint for carburetters	2	2	2
X363/15	Nut for securing carburetters	4	4	doz. 1 3
X105/4	Spring washer for ditto	4	4	doz. 8
MG490/105	Exhaust manifold	1	1	1 0 7
MG490/115	Joint for ditto	1	1	1 0
X287/11	Nut for securing exhaust manifold	5	5	4
X110/37	Washer for ditto	5	5	doz. 8
MG490/116	Water outlet pipe	1	1	16 10
MG348/262	Joint for ditto	2	2	2
X101/1	Nut for securing water outlet pipe	4	4	doz. 1 3
X101/2	Spring washer for ditto	4	4	doz. 8
	DYNAMO AND BOTTOM BEVEL WHEELS (*Illustration, page 15*)			
A448	Dynamo (4½″ dia.) with stud	1	1	7 12 6
MG348/21	Dynamo and crankshaft bevel wheels	1 pr.	1 pr.	pair 1 13 2
P110/276	Tab washer for bottom bevel wheel	1	1	doz. 1 9
P110/198	Nut for dynamo spindle	1	1	7
P110/199	Washer for ditto	1	1	doz. 8
MG490/10	Dynamo universal joint fork with oil guard Ceased at Engine No. 2524 AP	1	1	4 8
P110/8	Ditto ... ... Comm. at Engine No. 501 APB	1	1	5 6
P110/4	Dynamo coupling disc	1	1	5 6
P110/282	Packing washer for dynamo coupling (.010″ thick)	as reqd.		doz. 1 4
P110/283	„ „ „ „ „ (.020″ thick)	as reqd.		doz. 1 4
P110/284	„ „ „ „ „ (.030″ thick)	as reqd.		doz. 1 4
P110/285	„ „ „ „ „ (.040″ thick)	as reqd.		doz. 1 4
P110/286	„ „ „ „ „ (.050″ thick)	as reqd.		doz. 1 4
MG636/107	„ „ „ „ „ (.060″ thick)	as reqd.		doz. 1 4
P110/277	Bolt for dynamo coupling Ceased at Engine No. 2524 AP	4	4	6
MG636/106	Ditto ... Comm. at Engine No. 501 APB	4	4	6
X101/1	Nut for ditto	4	4	doz. 1 3
X101/2	Spring washer for ditto	4	4	doz. 8
P287/160	Shim for dynamo bottom bevel wheel (.010″ thick)	as reqd.		7
P110/257	Shim for dynamo base (.003″ thick)	as reqd.		4
P110/258	„ „ „ „ (.005″ thick)	as reqd.		4
P110/259	„ „ „ „ (.007″ thick)	as reqd.		5
P110/260	„ „ „ „ (.015″ thick)	as reqd.		7
MG348/276	Shim for crankshaft bevel wheel (.003″ thick) ...	as reqd.		3
MG348/277	„ „ „ „ „ (.005″ thick) ...	as reqd.		3
MG348/278	„ „ „ „ „ (.007″ thick) ...	as reqd.		3
X105/14	Set screw for securing dynamo	4	4	3
X101/2	Spring washer for ditto	4	4	doz. 8
	WATER INLET PIPE DETAILS (*Illustration, page 15*)			
MG490/11	Water inlet pipe	1	1	10 6
P287/187	Joint for ditto	1	1	1 3
X105/3	Nut for securing water inlet pipe	2	2	doz. 1 3
X105/4	Spring washer for ditto	2	2	doz. 8
	LUBRICATING DETAILS			
MG489/36	Oil breather N/S	1	1	10 6
MG489/216	Joint for ditto	1	1	6
S2/36	Clip for breather tube ...	1	1	4
X101/1	Nut for securing breather ... (Comm. at Engine No. 2123 AP)	4	4	doz. 1 3
X101/2	Spring washer for ditto ... (Comm. at Engine No. 2123 AP)	4	4	doz. 8
X489/27	Stud for breather clip ... (Comm. at Engine No. 2123 AP)	1	1	1
X105/3	Nut for securing clip ... (Comm. at Engine No. 2123 AP)	1	1	doz. 1 3
X105/4	Spring washer for ditto ... (Comm. at Engine No. 2123 AP)	1	1	doz. 8
MG489/12	Oil breather O/S	1	1	2 1
MG490/103	Oil base	1	1	2 14 0
MG490/119	Joint for ditto	1	1	2 5
X101/1	Nut for securing oil base	8	8	doz. 1 3
X101/2	Spring washer for ditto	12	12	doz. 8
X110/3	Set screw for oil base	4	4	3
MG348/197	Drain plug for oil base	1	1	2 0
X348/16	Fibre washer for ditto	1	1	doz. 9
MG363/102	Plug (⅜″ gas)	1	1	4
X489/23	Washer for ditto	1	1	2
MG489/35	Dipstick with knob	1	1	1 10
MG489/108	Dipstick adapter	1	1	3 0

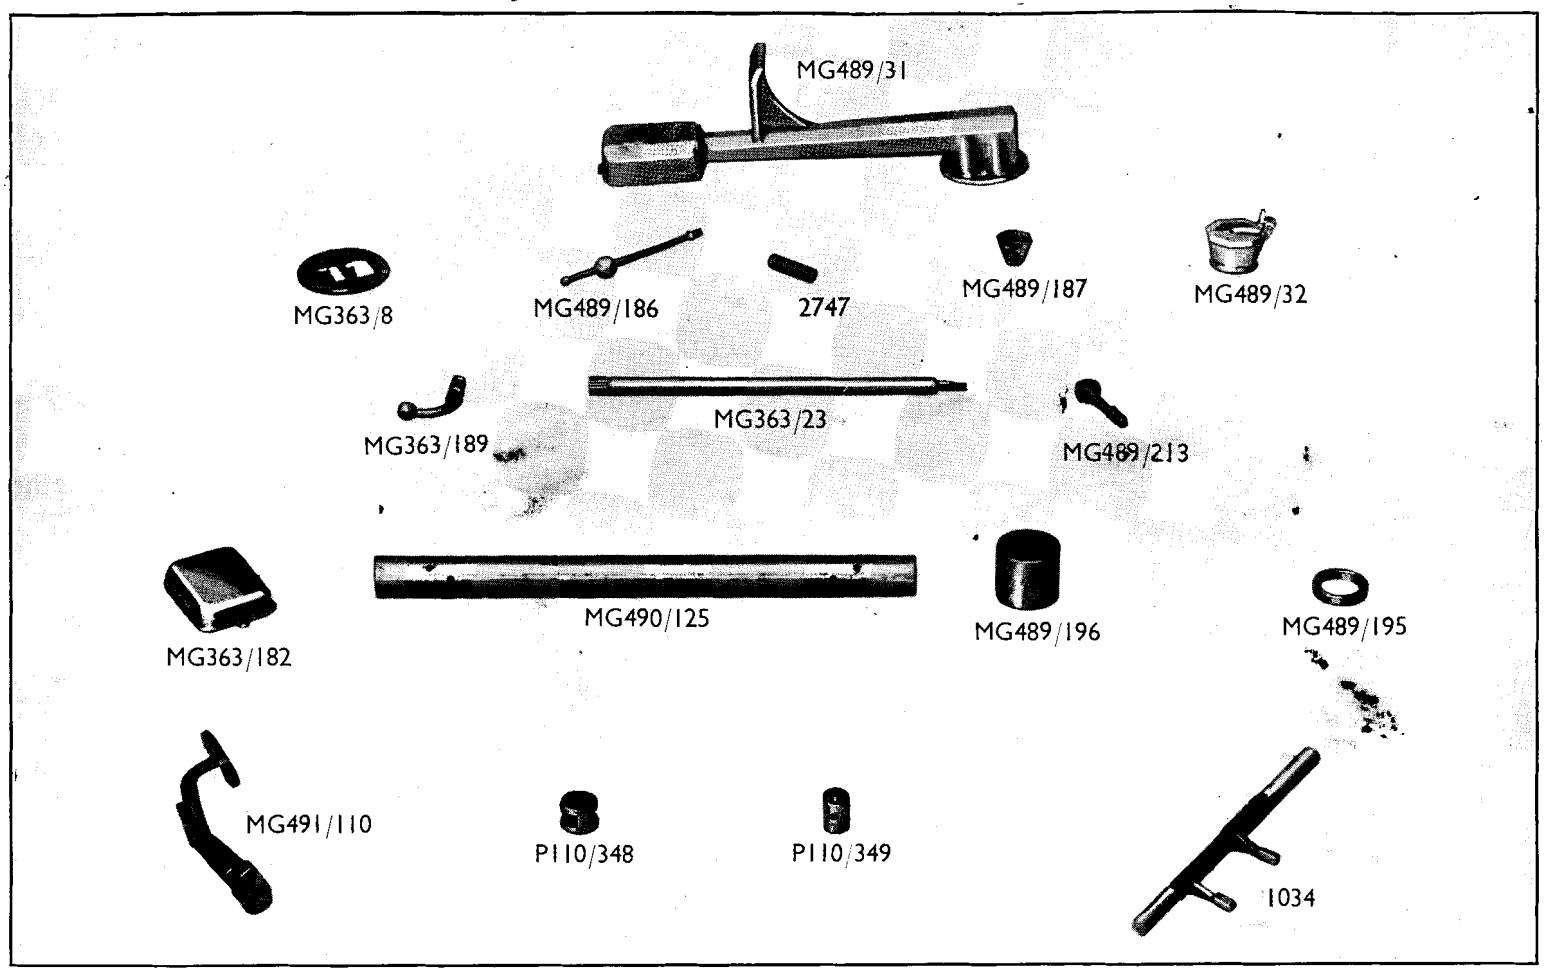
Part No	DESCRIPTION	No. Used 2 seater	No. Used Tourer	Price Each £	s.	d.
X489/8	Joint for dipstick adapter	1	1	doz.		6
X110/6	Stud for dipstick adapter	2	2			4
X101/1	Nut for ditto	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
P279	Oil strainer	1	1		10	6
P287/159	Fibre washer for ditto	1	1	doz.	1	0
MG489/15	Oil suction pipe (sump to pump)	1	1		3	10
X348/33	Washer for union	1	1	doz.		8
MG348/213	Union for pump	1	1		1	3
MG489/16	Oil pump assembly	1	1	1	9	6
MG489/110	Oil pump body	1	1		13	4
MG489/152	Joint for ditto	1	1	doz.		8
MG489/111	Oil pump cover	1	1		5	10
MG489/153	Joint for ditto	1	1	doz.		8
MG348/164	Plug for cover	1	1			4
MG490/120	Combined spindle and gear for oil pump Ceased at Engine No. 2524 AP	1	1		5	6
MG489/154	Ditto ... Comm. at Engine No. 501 APB	1	1		6	8
P110/154	Oil pump driven gear Ceased at Engine No. 2524 AP	1	1		5	0
MG348/160	Ditto ... Comm. at Engine No. 501 APB	1	1		10	10
MG348/161	Spindle for ditto	1	1			3
MG490/124	Packing piece for oil pump driven gear spindle Ceased at Engine No. 2524 AP	2	2		1	6
P239/109	Oil relief valve for oil pump	1	1			7
MG348/165	Cap nut for ditto	1	1		2	3
X363/16	Washer for relief valve	1	1	doz.	1	4
P110/158	Spring for relief valve	1	1			4
X420/1	Set screw for securing oil pump ($1\frac{7}{8}$")	2	2			7
X420/2	" " " " " " ($2\frac{3}{8}$")	2	2			9
X420/3	" " " " " " ($2\frac{1}{2}$")	1	1			9
X489/25	Washer for ditto	5	5	doz.		4
MG489/17	Main oil feed pipe (pump to filter)	1	1		2	1
MG489/218	Union for ditto	2	2		1	0
X348/57	Washer for ditto	2	2	doz.		6
MG489/37	Oil filter assembly	1	1	1	16	9
MG489/19	Oil filter case (studded)	1	1		14	6
X348/34	Stud for securing cap	4	4	doz.	1	0
MG468/123	Joint for oil filter cap	1	1			9
MG468/122	Oil filter cap Ceased at Engine No. [illegible] AP	1	1		4	8
MG489/221	" " " Comm. at Engine No. 2002 AP	1	1		3	4
X105/3	Nut for securing oil filter cap	4	4	doz.	1	3
X105/4	Spring washer for ditto	4	4	doz.		8
A730	Oil filter element	1	1		9	6
X348/36	Spring for element location Ceased at Engine No. 2001 AP	1	1	doz.	1	2
MG348/221	Socket for element location	1	1			9
MG348/219	Oil relief valve ...	1	1		3	6
MG348/301	Ball for ditto ...	1	1	doz.	1	3
X348/35	Spring for ditto ... Ceased at Engine No. 2001 AP	1	1	doz.	1	0
MG348/220	Plug for ditto ...	1	1			3
MG348/222	Plate for ditto ...	1	1	doz.	2	3
MG489/38	Oil relief valve assembly	1	1		1	2
MG489/226	Circlip for oil relief valve body	1	1	doz.		6
MG489/227	Plate for element ... Comm. at Engine No. 2002 AP	1	1			6
MG489/228	Felt washer for element	1	1			6
MG489/229	Spring for element ...	1	1			6
P110/106	Tap for oil gauge	1	1		2	3
X348/39	Washer for ditto	1	1			1
MG489/156	Joint for oil filter case	1	1	doz.		8
X105/3	Nut for securing oil filter case	6	6	doz.	1	3
X105/4	Spring washer for ditto	6	6	doz.		8
[illegible]	Front bearing and cylinder head feed pipe	1	1		4	5
[illegible]	Joint for flange	1	1			2
[illegible]	Set screw for securing flange	1	1			3
[illegible]	Washer for ditto (fibre)	1	1	doz.		4
X110/[illegible]	" " " (steel)	1	1			3
X348/[illegible]	Union for oil filter	1	1			4
X348/[illegible]	Washer for ditto	1	1	doz.	1	0
X348/[illegible]	Union for front bearing oil feed pipe	1	1			4
X348/15	Washer for ditto	1	1	doz.	1	0
P287/144	Restrictor pin for cylinder head oil feed ...	1	1		1	0
MG490/13	Main oil feed pipe (bearings)	1	1		2	9

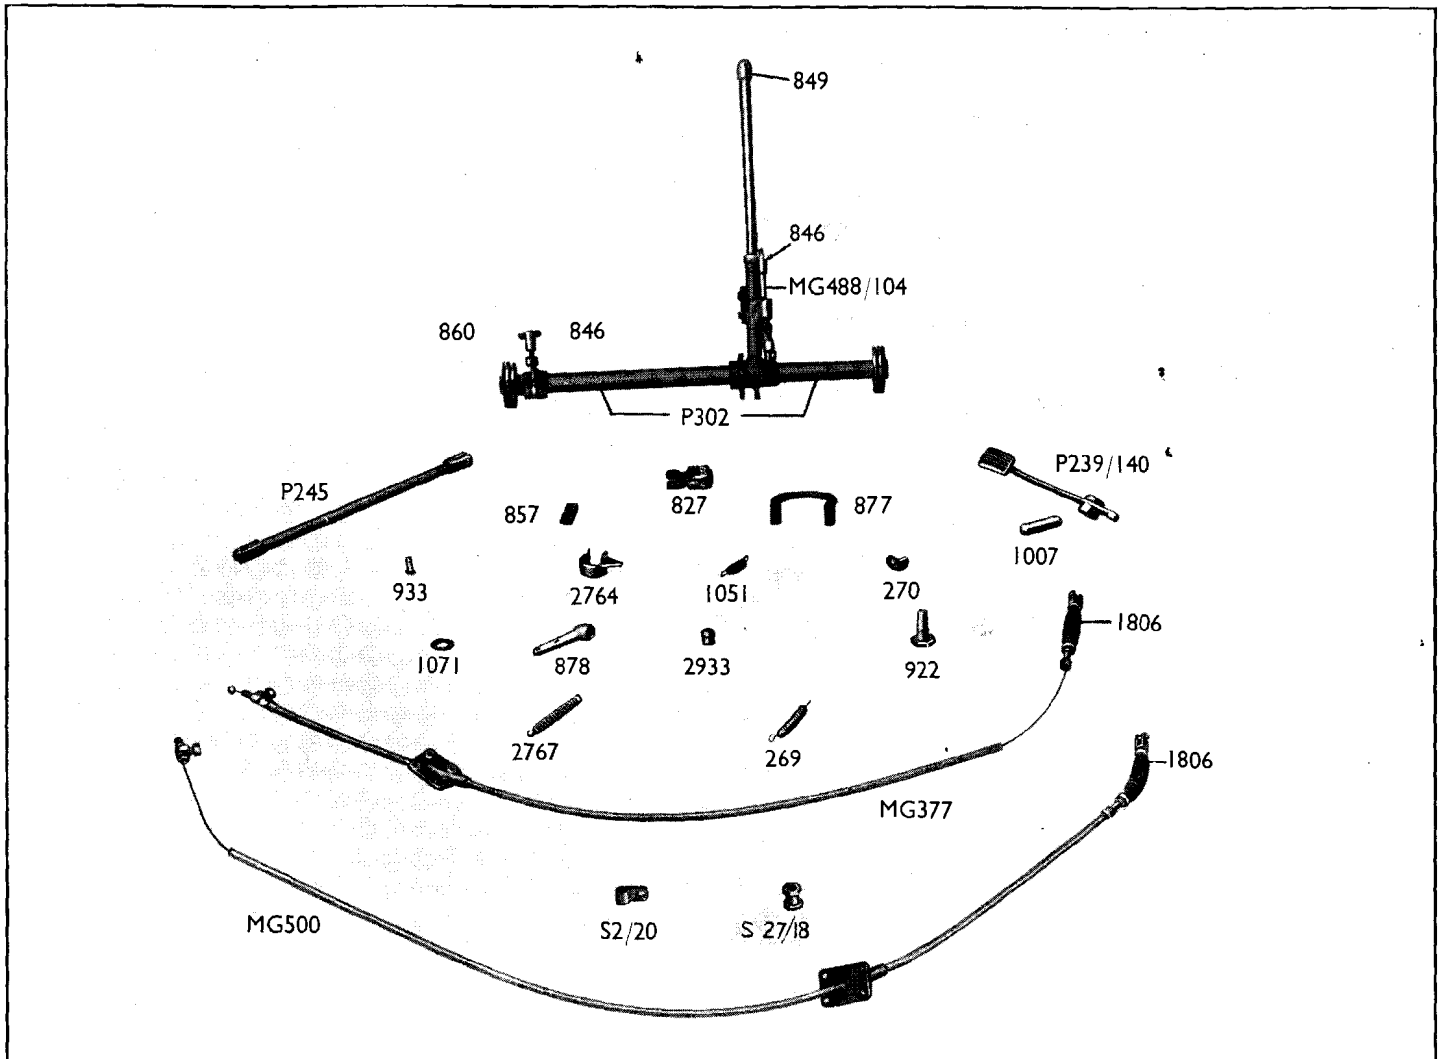

A739
A553
MG489/168
A665
MG491/112
MG491/107
MG491/105
MG491/2
MG491/3
MG477/103
MG477/114
S1/7
MG491/109
MG491/108
MG491/4
MG491/101
MG491/102
MG491/100
MG477/110
MG477/106
MG477/104


MG489/28
MG489/26
MG489/172
P110/365
MG363/165
MG363/164
X363/23
P110/366
X110/85
MG363/137
MG363/138
MG363/140
MG489/173
MG489/29
X110/86
MG363/179
MG490/123
MG490/122
P110/409
MG363/177
MG363/139
MG363/141
X363/23
MG363/138
MG489/179
MG363/152
MG489/180
MG363/150
MG489/181
MG489/203
MG363/24
MG489/188
MG489/189
MG489/191
MG489/192
MG489/212
MG363/160
MG363/159
MG363/157
MG363/156

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
MG489/161	Joint for main oil feed pipe	2	2			2
X105/14	Set screw for ditto	4	4			3
X101/2	Spring washer for ditto	4	4	doz.		8
MG489/22	Cylinder head oil drain pipe (front)	1	1		5	10
X489/10	Joint for ditto (top)	1	1			2
X489/11	„ „ „ (bottom)	1	1			2
X105/14	Set screw for front oil drain pipe (bottom) ...	2	2			3
X101/2	Spring washer for ditto	2	2	doz.		8
X468/11	Bolt for front oil drain pipe (top)	2	2			3
X101/1	Nut for ditto	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
MG489/23	Cylinder head oil drain pipe (rear)	1	1		4	7
X489/12	Joint for ditto (bottom)	1	1			2
X489/13	„ „ „ (top)	1	1	doz.	1	0
X489/21	Set screw for securing rear oil drain pipe Ceased at Engine No. 2000 AP	1	1			2
X489/28	Ditto ... Comm. at Engine No. 2001 AP	1	1			3
X239/4	Washer for ditto	1	1	doz.		6
X101/1	Nut for securing rear oil drain pipe	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
MG489/24	Cylinder head oil drain pipe (centre)	1	1		3	10
X489/12	Joint for ditto (bottom)	1	1			2
X489/13	„ „ „ (top)	1	1	doz.	1	0
X489/21	Set screw for securing centre oil drain pipe Ceased at Engine No. 2000 AP	1	1			2
X489/28	Ditto ... Comm. at Engine No. 2001 AP	1	1			3
X239/4	Washer for ditto	1	1	doz.		6
X101/1	Nut for securing centre oil drain pipe	2	2	doz.	1	3
X101/2	Spring washer for ditto	2	2	doz.		8
	ELECTRICAL DETAILS (*Illustration, page* 19)					
A665	Starter motor	1	1	4	5	0
X489/20	Set screw for securing starter	1	1			2
X110/12	Bolt for securing starter	2	2			3
X101/10	Nut for ditto	2	2	doz.	1	3
X101/11	Spring washer for ditto	3	3	doz.		8
A739	Distributor	1	1	1	17	0
X287/13	Set screw for securing distributor	1	1			2
X101/2	Spring washer for ditto	1	1	doz.		8
MG489/168	Distributor adapter	1	1		6	1
MG489/169	Drive gear for oil pump and distributor ...	1	1		9	4
X110/3	Set screw for securing distributor adapter ...	1	1			3
X101/2	Spring washer for ditto	1	1	doz.		8
	CLUTCH DETAILS (*Illustration, page* 19)					
MG491/2	Clutch cover complete	1	1		19	6
MG491/112	Fulcrum pad for clutch cover	4	4			4
MG491/113	Rivets for ditto	8	8	doz.		6
MG491/107	Fulcrum bracket for operating disc spring ...	4	4			8
MG491/126	Rivets for ditto	8	8	doz.		6
MG477/114	Clutch springs	12	12			4
MG491/121	Clutch pressure plate Ceased at Engine No. 2001 AP	1	1		18	9
MG491/123	Ditto ... Comm. at Engine No. 2002 AP	1	1		18	9
MG477/104	Clutch driving bolt	4	4		1	1
MG477/105	Nut for ditto	4	4			2
MG477/106	Spring for ditto	4	4			2
MG491/100	Clutch operating pin	4	4		1	3
MG491/101	Clutch withdrawal lever	4	4		4	3
MG491/122	Fulcrum pin for ditto	4	4			6
MG491/120	Washer for ditto	8	8			1
MG491/102	Adjusting screw for ditto	4	4			6
MG477/105	Nut for ditto	4	4			2
MG491/3	Clutch plate complete (driven) Ceased at Engine No. 2001 AP	1	1	1	6	6
MG491/5	Ditto ... ... Comm. at Engine No. 2002 AP	1	1	1	2	0
MG491/125	Insulating pads for clutch springs Comm. at Engine No. 2002 AP	12	12			2
MG491/4	Clutch operating disc ring complete	1	1		6	1
MG491/104	Lining for clutch operating disc ring	1	1		1	10
X491/1	Rivets for ditto	4	4	doz.		6
MG491/105	Retaining spring for clutch operating disc ring	4	4			2
MG491/106	Fulcrum pin for ditto	4	4		1	2
MG491/108	Withdrawal race	1	1		14	3

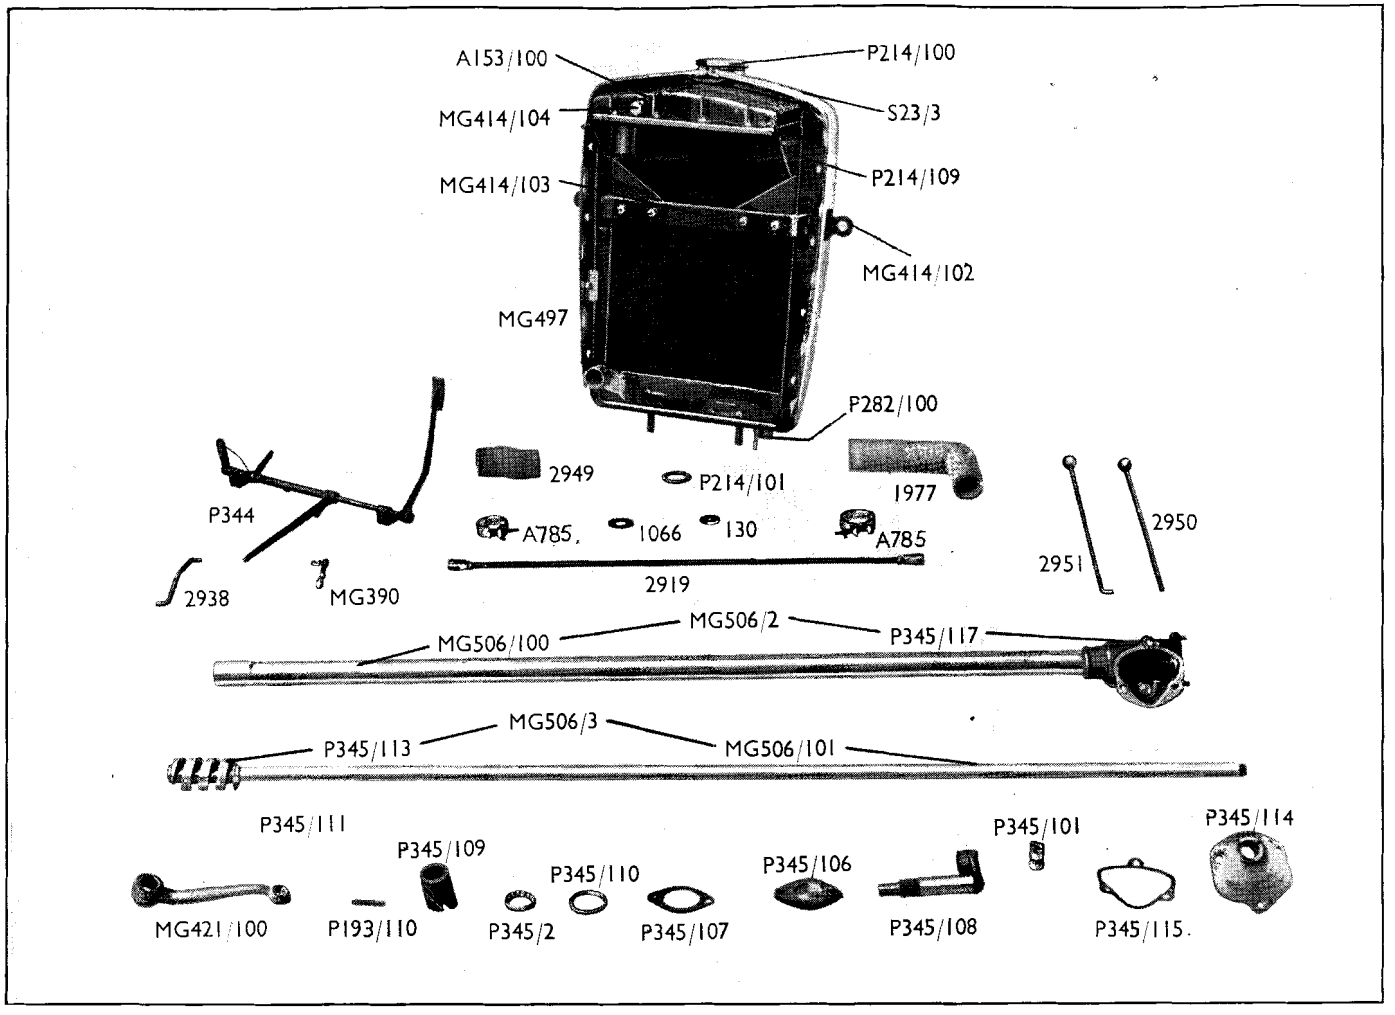
No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d
MG491/109	Sleeve for clutch withdrawal race ...	1	1		5	4
S177	Grease for ditto	1	1			3
MG491/110	Clutch pedal	1	1		5	10
P110/422	Cotter pin for ditto	1	1			5
1034	Clutch operating shaft	1	1		10	10
X491/2	Bolt for securing clutch	8	8			6
X110/41	Nut for ditto	8	8			3
2569	Clutch pedal stop stud	1	1			3
1287	Adjustable stop for ditto	1	1			8
1144	Return spring for clutch pedal	1	1			5
1248	Anchor bracket for spring	1	1			4
	GEARBOX (*Illustration, page* 20)					
MG490/14	Gearbox assembly complete less clutch pedal, withdrawal and inspection cover Ceased at Engine No. 2524 AP	1	1	21	0	0
MG636/3	Ditto ... ... Comm. at Engine No. 501 APB	1	1	21	0	0
MG489/26	Clutch housing (studded)	1	1	2	1	6
X363/22	Stud for gearbox casing	6	6	doz.	1	6
MG489/200	Dowel for gearbox casing	2	2			2
P110/348	Bush for clutch withdrawal shaft O/S	1	1		3	5
P110/349	" " " " " N/S	1	1		1	6
X110/70	Disc for ditto	1	1	doz.		8
X110/71	Set screw for bushes	2	2			3
X101/2	Spring washer for ditto	2	2	doz.		8
2332	Clutch inspection cover	1	1		1	4
X110/4	Set screw for ditto	2	2			3
X101/2	Spring washer for ditto	2	2	doz.		8
MG490/15	Engine bearer tube complete (rear)	1	1	1	3	3
MG490/125	Engine bearer tube (rear)	1	1		8	3
MG489/195	Collar for ditto	2	2		1	4
MG489/196	Bush for bearer tube (rubber)	2	2		5	10
X110/9	Bolt (clutch pit to bell housing) (1 3/16" long) ...	6	6			4
X110/11	" (clutch pit to bell housing) (7/8" long) ...	2	2			3
X105/3	Nut for ditto	6	6	doz.	1	3
X105/4	Spring washer for ditto	8	8	doz.		8
MG489/28	Gearbox case (studded)	1	1	1	3	0
X363/12	Stud for top cover	4	4			2
X363/19	Stud for rear end cover (2 3/4" long)	1	1			3
X363/20	" " " " " (1 5/8" long)	5	5			3
X363/21	" " " " " (1 3/8" long)	1	1			3
MG489/200	Dowel for rear end cover	2	2			2
P110/109	Filler and drain plug	2	2		1	6
X110/67	Washer for ditto	2	2	doz.		10
X105/3	Nut for securing gearbox to clutch housing ...	6	6	doz.	1	3
X105/4	Spring washer for ditto	6	6	doz.		8
MG489/172	First motion shaft Ceased at Engine No. 2524 AP	1	1	1	7	8
MG588/111	" " " Comm. at Engine No. 501 APB	1	1	2	19	3
P110/366	Oil thrower for ditto (rear)	1	1			4
X110/85	Ball race for first motion shaft	1	1		8	9
P110/365	Oil thrower for first motion shaft (front) ...	1	1			4
MG363/137	Locking nut for ditto (combined oil return) ...	1	1		3	2
X110/74	Circlip for ditto	1	1			3
MG363/165	Retaining plate for cover securing bolts ...	1	1			5
X363/27	Bolt for cover	4	4			3
X101/1	Nut for ditto	4	4	doz.	1	3
X101/2	Spring washer for ditto	4	4	doz.		8
X110/75	Spring washer for cover	1	1			6
MG363/164	Cover for first motion shaft	1	1		3	4
MG363/140	Main shaft	1	1		13	4
X363/23	Roller bearing spigot	1	1		4	9
MG363/138	Distance washer for ditto	1	1		1	3
MG489/173	Third and top speed sliding gear Ceased at Engine No. 2524 AP	1	1		15	3
MG363/145	Ditto ... Comm. at Engine No. 501 APB	1	1		16	10
MG489/29	First and second speed sliding gear (complete) Ceased at Engine No. 2524 AP	1	1	1	9	6
MG489/176	Bolt for ditto Ceased at Engine No. 2524 AP	4	4			5
X105/3	Nut for ditto... Ceased at Engine No. 2524 AP	4	4	doz.	1	3
MG363/146	First and second speed sliding gear Comm. at Engine No. 501 APB	1	1		18	4
X110/86	Ball race for mainshaft (rear)	1	1		11	6
MG363/179	Retaining plate for ditto	1	1			6
X112/1	Bolts for ditto	2	2			3

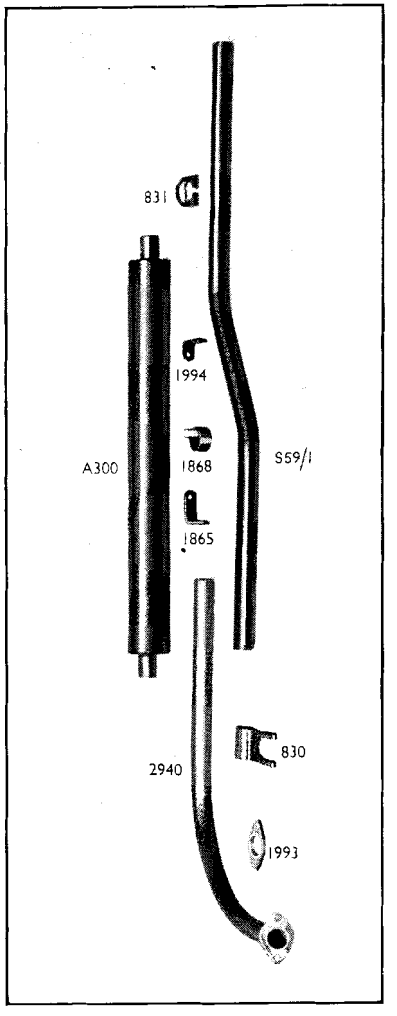

MG489/31
MG363/8
MG489/186
2747
MG489/187
MG489/32
MG363/189
MG363/23
MG489/213
MG363/182
MG490/125
MG489/196
MG489/195
MG491/110
P110/348
P110/349
1034

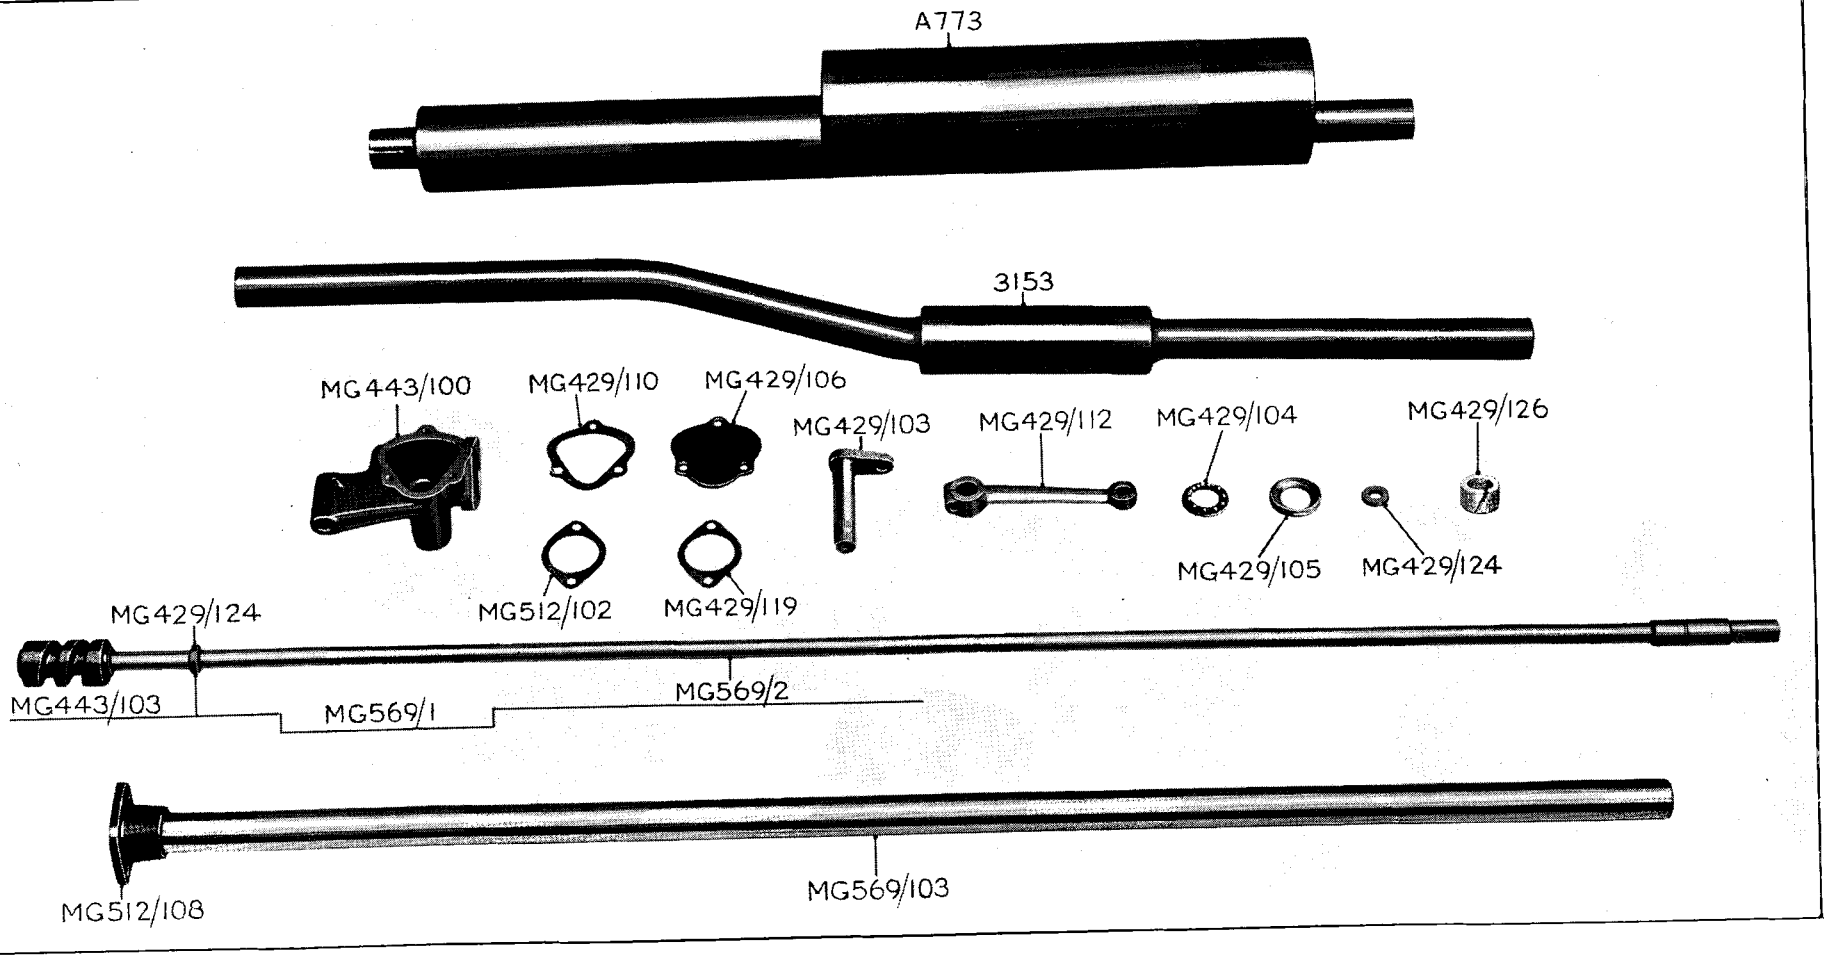

849
846
MG488/104
860
846
P302
P245
857
827
877
P239/140
1007
933
2764
1051
270
1806
1071
878
2933
922
2767
269
1806
MG377
MG500
S2/20
S 27/18

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
X105/3	Nut for mainshaft retaining plate	2	2	doz.	1	3
X105/7	Set screw for ditto	1	1			3
X105/4	Spring washer for ditto	3	3	doz.		8
MG490/122	Speedometer driving gear	1	1		3	10
MG490/123	Speedometer driven gear	1	1		4	5
P110/389	Thrust button for ditto	1	1		1	0
P110/409	Bearing for ditto	1	1		8	9
X110/80	Joint for ditto	1	1			4
MG363/177	Rear cover for gearbox	1	1		18	4
X105/3	Nut for securing rear cover	7	7	doz.	1	3
X105/4	Spring washer for ditto	7	7	doz.		8
MG363/139	Propeller shaft flange					
	Ceased at Chassis No. PA1754	1	1		9	4
MG489/219	Ditto ... Comm. at Chassis No. PA1755	1	1		9	0
X105/12	Nut for ditto	1	1			3
X105/13	Washer for ditto	1	1			3
MG363/141	Layshaft	1	1		5	0
X363/23	Roller bearing for layshaft	2	2		4	9
MG363/138	Distance washer for ditto	4	4		1	3
MG489/179	Constant mesh gear					
	Ceased at Engine No. 2524 AP	1	1		14	3
MG363/144	Ditto ... Comm. at Engine No. 501 APB	1	1		14	8
MG363/152	Spring retaining ring for ditto	2	2	doz.	1	8
MG489/180	Third speed constant mesh gear					
	Ceased at Engine No. 2524 AP	1	1		17	6
MG363/147	Ditto ... Comm. at Engine No. 501 APB	1	1		19	6
MG363/148	Rollers for ditto	23	23			2
MG363/149	Washer for rollers	1	1			3
MG363/150	Spring retaining ring for ditto	1	1	doz.	1	4
MG489/181	First and second layshaft gear					
	Ceased at Engine No. 2524 AP	1	1	1	8	2
MG363/151	Ditto ... Comm. at Engine No. 501 APB	1	1	1	8	2
P110/362	Locking screw for layshaft	1	1			2
X101/2	Spring washer for ditto	1	1	doz.		8
X489/17	Oil-retaining washer for layshaft	1	1			2
MG489/197	Sealing washer for ditto	1	1			2
X489/18	Set screw for securing ditto	1	1	doz.	1	0
MG489/198	Tab washer for set screw	1	1	doz.	1	0
MG489/203	Reverse shaft	1	1		2	9
MG363/24	Reverse gear sliding (bushed)	1	1		13	2
MG363/154	Bush for reverse gear	1	1		2	3
X101/10	Nut for reverse shaft	1	1	doz.	1	3
X363/24	Spring washer for ditto	1	1	doz.		8
MG489/188	Selector shaft (first and second)					
	Ceased at Engine No. 2524 AP	1	1		3	7
MG363/166	Ditto ... Comm. at Engine No. 501 APB	1	1		3	10
MG489/189	Selector fork (first and second)					
	Ceased at Engine No. 2524 AP	1	1		5	0
MG363/170	Ditto ... Comm. at Engine No. 501 APB	1	1		6	0
MG489/231	Distance piece for ditto (rear)					
	Ceased at Engine No. 2524 AP	1	1			4
MG363/168	Ditto (rear) Comm. at Engine No. 501 APB	1	1			3
MG489/190	Ditto (front) Ceased at Engine No. 2524 AP	1	1			8
MG363/169	Ditto (front) Comm. at Engine No. 501 APB	1	1			4
MG489/191	Selector shaft (third and fourth)					
	Ceased at Engine No. 2524 AP	1	1		3	2
MG363/167	Ditto ... Comm. at Engine No. 501 APB	1	1		3	9
MG489/192	Selector fork (third and fourth)					
	Ceased at Engine No. 2524 AP	1	1		3	2
MG363/171	Ditto ... Comm. at Engine No. 501 APB	1	1		6	0
X110/84	Ball for selector forks	2	2	doz.	1	6
X363/28	Spring for ditto	2	2			3
MG489/212	Selecting lever (reverse)	1	1		5	8
MG363/156	Fulcrum pin for ditto	1	1			8
X101/10	Nut for ditto	1	1	doz.	1	3
X101/11	Spring washer for ditto	1	1	doz.		8
MG363/160	Socket for reverse locking plunger	1	1		2	0
X363/25	Nut for ditto	1	1			2
X363/26	Spring washer for ditto	1	1	doz.		8
MG363/161	Plug for socket	1	1			3
MG363/162	Reverse locking plunger	1	1			10
MG363/163	Spring for reverse locking plunger	1	1			11
MG363/159	Selector shaft (reverse)	1	1		1	6
MG363/157	Selector fork (reverse)	1	1		1	8

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
MG363/158	Distance piece for selector fork (reverse) ...	1	1			3
MG363/178	Locking screw for selector shaft	1	1			3
MG363/8	Change speed lock assembly	1	1		3	4
	GEARBOX REMOTE CONTROL DETAILS (*Illustration, page 23*)					
MG489/30	Gearbox remote control complete	1	1	2	10	0
MG489/31	Change speed housing	1	1	1	3	6
X110/38	Disc for ditto	2	2			4
P110/404	Locking peg for change speed lever	1	1	doz.		2
MG489/32	Change speed gate assembly	1	1		6	1
MG489/184	Reverse stop	1	1		1	6
X412/4	Hinge pin for ditto	1	1			2
X489/15	Washer for ditto	1	1	doz.		3
MG489/211	Spring for reverse stop	2	2			3
X489/16	Screw for ditto	1	1	doz.		6
MG363/198	Shim for change speed gate	as reqd.		doz.	1	2
X110/39	Bolt for securing gate	3	3			3
X101/2	Spring washer for ditto	3	3	doz.		8
MG489/186	Change speed lever	1	1		7	2
MG489/187	Knob for ditto	1	1		1	5
X363/30	Lock nut for ditto	1	1			2
2747	Anti-rattle spring for lever	1	1			5
MG363/189	Shaft actuating lever	1	1		4	6
X363/34	Set screw for ditto	1	1			3
X101/2	Spring washer for ditto	1	1	doz.		8
MG363/23	Change speed shaft	1	1		7	6
MG489/213	Selector lever	1	1		5	4
X101/4	Key for ditto	1	1			3
X363/31	Nut for ditto	1	1			3
X363/32	Washer for ditto	1	1	doz.		4
MG363/182	Tray for change speed housing	1	1		1	6
X110/82	Screw for ditto	2	2	doz.		7
X101/1	Nut for securing remote control to gearbox ...	4	4	doz.	1	3
X101/2	Spring washer for ditto	4	4	doz.		8
	BRAKE GEAR (*Illustration, page 24*)					
P239/140	Brake pedal	1	1		5	4
1007	Fulcrum pin for ditto	1	1			9
1365	Rollers for ditto	23	23	set	1	9
P245	Brake push rod complete	1	1		5	7
933	Clevis pin for ditto	2	2			6
269	Return spring for brake pedal	1	1			3
270	Anchor bracket for ditto	1	1			7
P302	**Brake cross shaft assembly**	1	1	2	15	10
842	Roller bearing retainer for ditto	1	1		2	6
841	Roller for brake cross shaft	32	32		2	6
860	Foot brake adjusting rod	1	1		1	6
858	Clevis pin for ditto	1	1			4
MG488/104	Hand brake adjusting rod	1	1		4	2
851	Clevis pin for ditto	1	1			4
846	Adjusting nut for hand and foot brakes ...	2	2		2	9
849	Knob for hand brake lever	1	1		1	3
853	Screw for hand brake lever knob	1	1			4
852	Hand brake pawl spring	1	1			4
854	Hand brake pawl rod	1	1			8
857	Hand brake ratchet pawl	1	1		2	2
856	Hand brake pawl screw	2	2			8
855	Hand brake pawl stud	1	1			4
838	Bush for brake cross shaft	1	1		1	6
922	Trunnion for brake cross shaft	2	2			8
1071	Fibre washer for ditto	2	2			4
827	Brake cross shaft steady bracket...	1	1		2	9
2767	Return spring for brake cross shaft	1	1	doz.	1	4
2764	Clip for ditto (on cross shaft)	1	1			5
270	Anchor bracket for ditto	1	1			7
877	Hand brake ratchet...	1	1		4	2
878	Hand brake lever stop	1	1		2	2
2933	Rubber buffer for ditto	1	1	doz.	1	8
1051	Return spring for hand brake lever	1	1			3
MG500	**Front brake cable (complete)**	2	2	1	0	0
MG377	**Rear brake cable (complete)**	2	2		18	6
1806	Concertina type rubber casing for brake cables	4	4			9
P109/100	Clevis pin for brake cables	4	4			3
S2/20	Clip for rear brake cables (on springs)	2	2			3
S27/18	Rubber ferrule for ditto	2	2			2


A153/100
P214/100
S23/3
MG414/104
MG414/103
P214/109
MG414/102
MG497
P282/100
2949
P214/101
1977
P344
A785.
1066
130
A785
2950
2951
2919
2938
MG390
MG506/2
MG506/100
P345/117
MG506/3
P345/113
MG506/101
P345/111
P345/109
P345/110
P345/106
P345/101
P345/114
MG421/100
P193/110
P345/2
P345/107
P345/108
P345/115.


831
1994
A300
1868
S59/1
1865
2940
830
1993

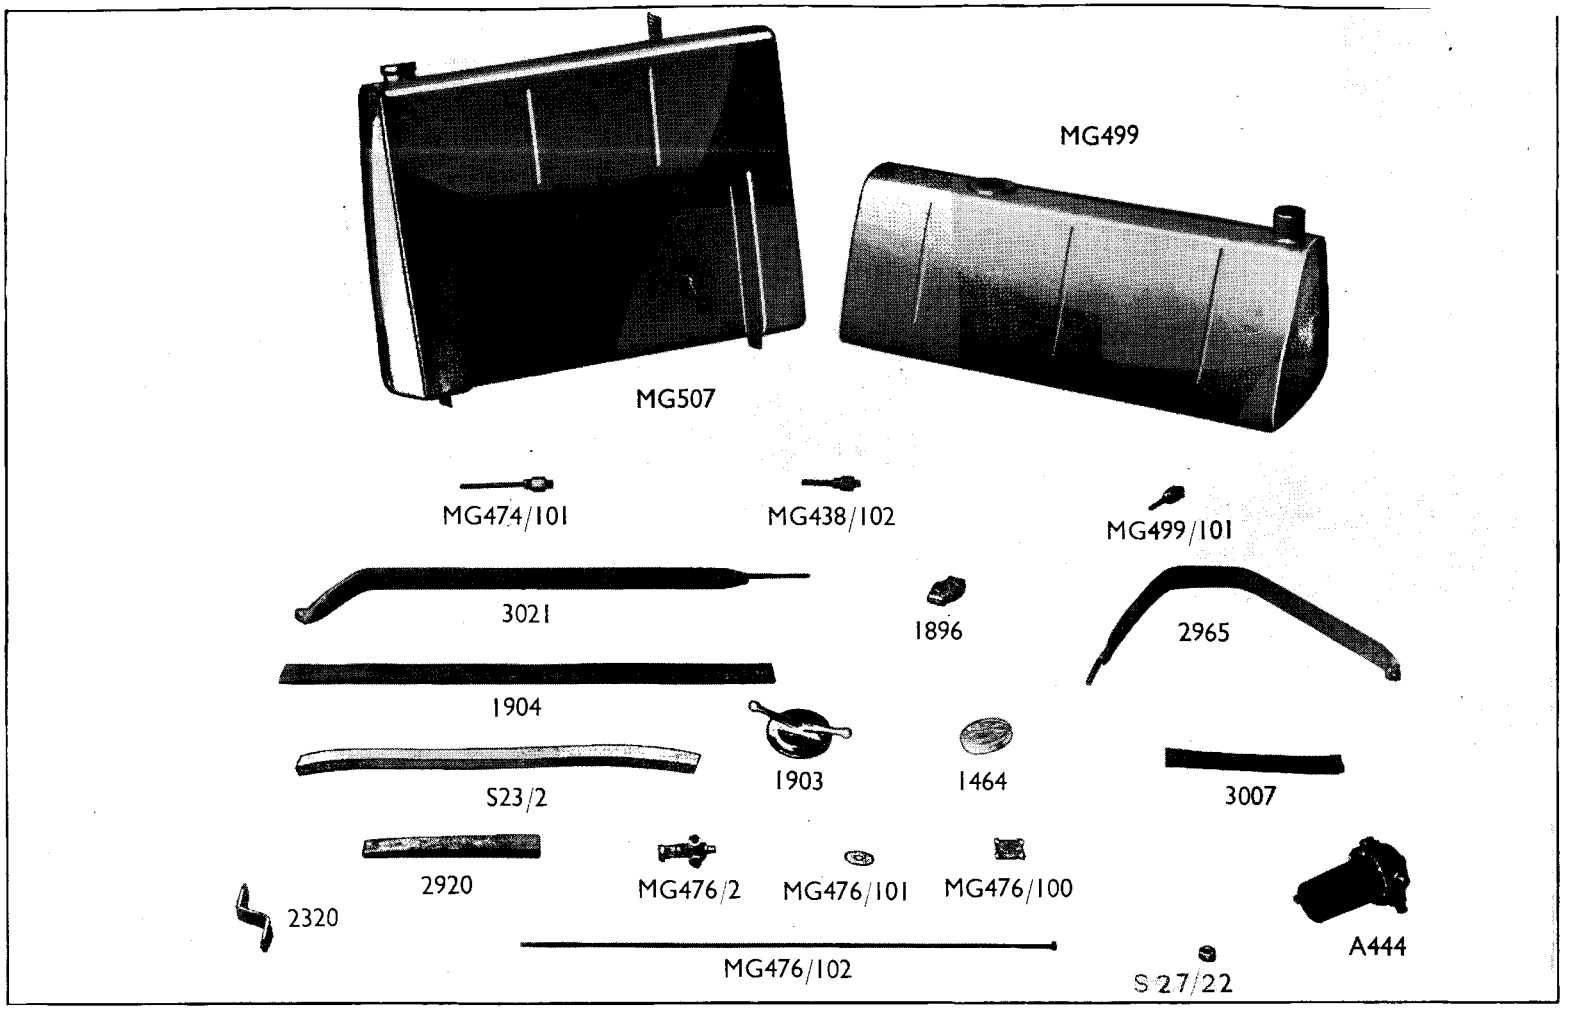

A773
3153
MG443/100
MG429/110
MG429/106
MG429/103
MG429/112
MG429/104
MG429/126
MG512/102
MG429/119
MG429/105
MG429/124
MG429/124
MG443/103
MG569/1
MG569/2
MG512/108
MG569/103

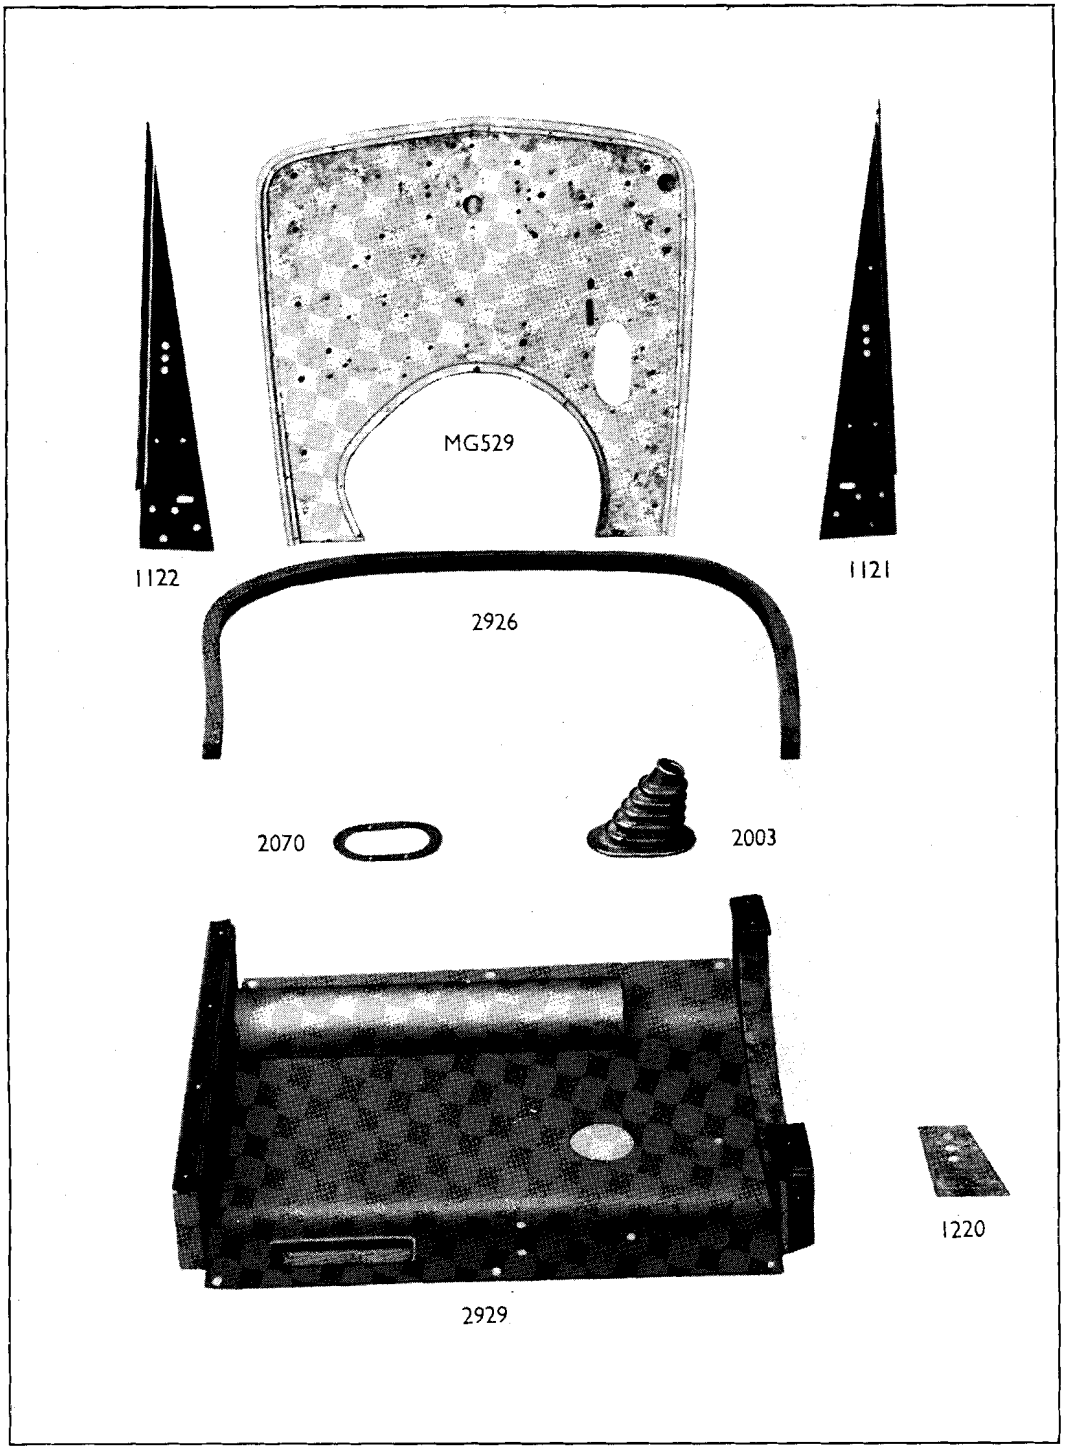
Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	CONTROLS (*Illustration, page 27*)			
P344	**Accelerator cross shaft assembly**	1	1	14 6
1969	Jet control return spring (on cross shaft) ...	1	1	4
S1/7	Greaser (on cross shaft)	1	1	3
1113	Accelerator pedal stop	1	1	7
265	Accelerator return spring	1	1	4
270	Anchor bracket for ditto	1	1	7
MG390	Coupling rod to throttle (ball jointed)	1	1	1 4
2950	Slow-running rod	1	1	1 3
2952	Knob for ditto	1	1	6
132	Spring for slow-running rod	1	1	7
1110	Bracket for slow-running rod	1	1	1 0
2951	Jet control rod	1	1	1 3
2952	Knob for ditto	1	1	6
1111	Anti-rattle spring for jet control rod	1	1	doz. 1 4
2938	Jet control connecting rod	1	1	2
1111	Anti-rattle spring for ditto	1	1	doz. 1 4
181	Yoke end for jet control connecting rod ...	1	1	6
2934	Clevis pin for ditto	1	1	doz. 1 0
S27/10	Rubber bush for control rods	2	2	2
	STEERING GEAR			
MG506	**Steering gear unit less wheel** (*Illustration, page 27*)	1	1	6 15 0
MG506/1	Steering box outer tube and cover-plates assembled	1	1	2 6 7
MG506/2	Steering box with outer tube ...	1	1	1 12 6
P345/117	Steering box	1	1	14 4
MG506/100	Outer tube	1	1	16 1
P345/114	Cover-plate for steering box	1	1	9 6
P345/115	Shim for cover-plate ...	as reqd.		6
P345/116	Dowel for cover-plate ...	2	2	2
P345/122	Stud for securing cover-plate	3	3	3
P345/121	Nut for ditto	3	3	2
P345/106	Bottom cap for steering box	1	1	3 6
P345/107	Shim for bottom cap ...	as reqd.		2
P345/122	Stud for securing bottom cap	2	2	3
P345/121	Nut for ditto	2	2	2
P345/2	Assembly of cage and balls for cup and cone bearing	2	2	3 0
P345/112	Cage for balls	2	2	1 5
P345/124	Steel balls	30	30	doz. 7
P345/110	Ball race cup	2	2	2 7
P345/111	Ball race cone	2	2	2 0
MG506/3	Inner column and cam assembled	1	1	1 16 0
MG506/101	Inner column	1	1	15 10
P345/113	Steering cam	1	1	18 5
P345/109	Felt bush for column (top)	1	1	10
P193/110	Key for steering wheel ...	1	1	10
P345/1	Assembly of follower and hemispheres	1	1	13 9
P345/101	Follower	1	1	7 6
P345/105	Hemispheres	4	4	set 6 4
P345/108	Rocker-shaft	1	1	19 0
P345/103	Felt washer for drop arm ...	1	1	6
MG421/100	Steering drop arm	1	1	10 8
P345/123	Flat washer for ditto ...	1	1	doz. 1 9
P345/104	Nut for rocker-shaft ...	1	1	6
1952	Steering box bracket ...	1	1	3 0
1954	Dowel for ditto	2	2	2
MG569	**Steering gear unit less wheel** (*Illustration, page 28*) Comm. at Chassis No. PA1287, ceased at No. PA2250	1	1	6 15 0
MG635	**Steering gear unit less wheel** (*Illustration, page 28*) Comm. at Chassis No. PB0251	1	1	6 15 0
MG569/1	Inner column with cam and rubber ring assembled Comm. at Chassis No. PA1287, ceased at No. PA2250	1	1	1 16 0
MG635/1	Ditto ... ... Comm. at Chassis No. PB0251	1	1	1 16 0
MG569/2	Inner column ... Comm. at Chassis No. PA1287	1	1	15 10
MG443/103	Steering cam Comm. at Chassis No. PA1287, ceased at No. PA2250	1	1	18 5
MG635/100	Ditto ... Comm. at Chassis No. PB0251	1	1	18 5
MG429/124	Rubber ring for inner column	1	1	3
MG443/100	Steering box	1	1	14 4
MG429/104	Ball cage with balls ...	2	2	3 0
MG429/105	Ball cup for cam	2	2	2 7
MG569/103	Outer tube	1	1	1 2 0
MG512/108	End flange for ditto ...	1	1	3 6
MG429/119	Shim for flange (.0024") ...	as reqd.		4
MG429/120	" " " (.005") ...	as reqd.		4
MG429/121	" " " (.010") ...	as reqd.		5
MG512/102	Joint for flange	1	1	2

Ceased at Chassis No. PA1286

Comm. at Chassis No. PA1287

Part No.	DESCRIPTION		No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
MG512/103	Bolt for securing flange to steering box		2	2			3
MG429/126	Felt bush for top end of column		1	1			10
MG569/104	Retaining ring for ditto		1	1			4
MG429/103	Rocker-shaft		1	1		13	0
MG429/102	Peg for ditto		1	1		4	8
MG429/106	Side cover		1	1		4	0
MG429/107	Shim for side cover (.0024")	Comm. at Chassis No. PA1287	as reqd.				4
MG429/108	" " " " (.005")		as reqd.				4
MG429/109	" " " " (.010")		as reqd.				5
MG429/110	Joint for side cover		1	1			2
MG429/111	Bolt for side cover		3	3			3
MG429/112	Steering drop arm		1	1		10	8
MG429/113	Felt washer for ditto		1	1			6
MG569/106	Pinch bolt for drop arm		1	1			6
MG512/104	Key for steering wheel		1	1			10
A310	Steering wheel		1	1	2	2	0
1919	Steering column clamp		1	1		2	2
1888	Steering column support bracket		1	1		2	1
874	Combined greaser and set screw for steering box	Comm. at Chassis No. PB0251	1	1			10
S1/4	Greaser for steering box		1	1			8
	RADIATOR AND CONNECTIONS (*Illustration, page* 27)						
MG497	Radiator complete (honeycomb stoneguard) Ceased at Chassis No. PA2250		1	1	10	0	0
MG637	Radiator complete (with grille) (unpainted) Comm. at Chassis No. PB0251		1	1	10	0	0
MG497/1	Radiator case with honeycomb stoneguard and badge Ceased at Chassis No. PA2250		1	1	4	8	6
MG637/1	Radiator case with grille and badge (unpainted) Comm. at Chassis No. PB0251		1	1	4	8	6
MG497/101	Radiator stoneguard (honeycomb type) Ceased at Chassis No. PA2250		1	1		13	6
MG637/100	Radiator grille (unpainted) Comm. at Chassis No. PB0251		1	1		13	6
MG497/102	Radiator medallion		1	1		5	0
MG444/106	Bracket for bonnet hinge rod		1	1			8
S23/3	Rubber for bonnet rest (72")		1 lgth.	1 lgth.		1	2
MG414/101	Radiator film block complete		1	1	5	0	0
A153/100	Radiator thermo union		1	1		1	0
MG414/104	Cap for ditto		1	1			4
P282/100	Radiator drain tap		1	1		1	9
P214/103	Fibre washer for drain tap and thermo union		2	2			2
P214/109	Radiator stay rod lug		2	2			8
MG414/102	Headlamp bracket lug		2	2		2	5
2626	Rubber moulding for ditto		2	2			4
MG414/103	Tie bar for headlamp bracket lugs		1	1		1	6
MG444/104	Stud for cylinder head to radiator bracket		4	4			2
P214/100	Radiator filler cap		1	1		12	0
P214/101	Rubber ring for ditto		1	1			7
1066	Radiator mounting washer (fibre)		3	3			3
130	" " " (steel)		2	2	doz.	1	6
2925	Cylinder head to radiator bracket		1	1		3	10
2919	Radiator stay rod		2	2			6
1069	Fork end for ditto		4	4			6
1068	Eye bolt for ditto		2	2			4
1977	Water hose connection (top)		1	1		1	11
2949	" " " (bottom)		1	1		2	3
A785	Clip for ditto		4	4			10
S36/3	Rubber tubing for overflow pipe		1	1			2
	EXHAUST SYSTEM AND SILENCERS (*Illustrations, pages* 27 28)						
2940	Front exhaust pipe		1	1		7	0
1993	Gasket for ditto		1	1			6
A300	Silencer (Burgess) Ceased at Chassis No. PA1967		1	1	1	7	6
A773	" (Burgess) Comm. at Chassis No. PA1968		1	1	2	2	0
1868	Silencer clip		2	2			6
1865	Bracket for ditto (front)		1	1			8
1994	" " " (rear)		1	1			9
831	Fume excluder clip		2	2			8
3153	Rear exhaust pipe Ceased at Chassis No. PA2250		1	1		10	0
S59/1	" " " Comm. at Chassis No. PB0251		1	1		8	9
830	Clip for ditto		1	1		1	10

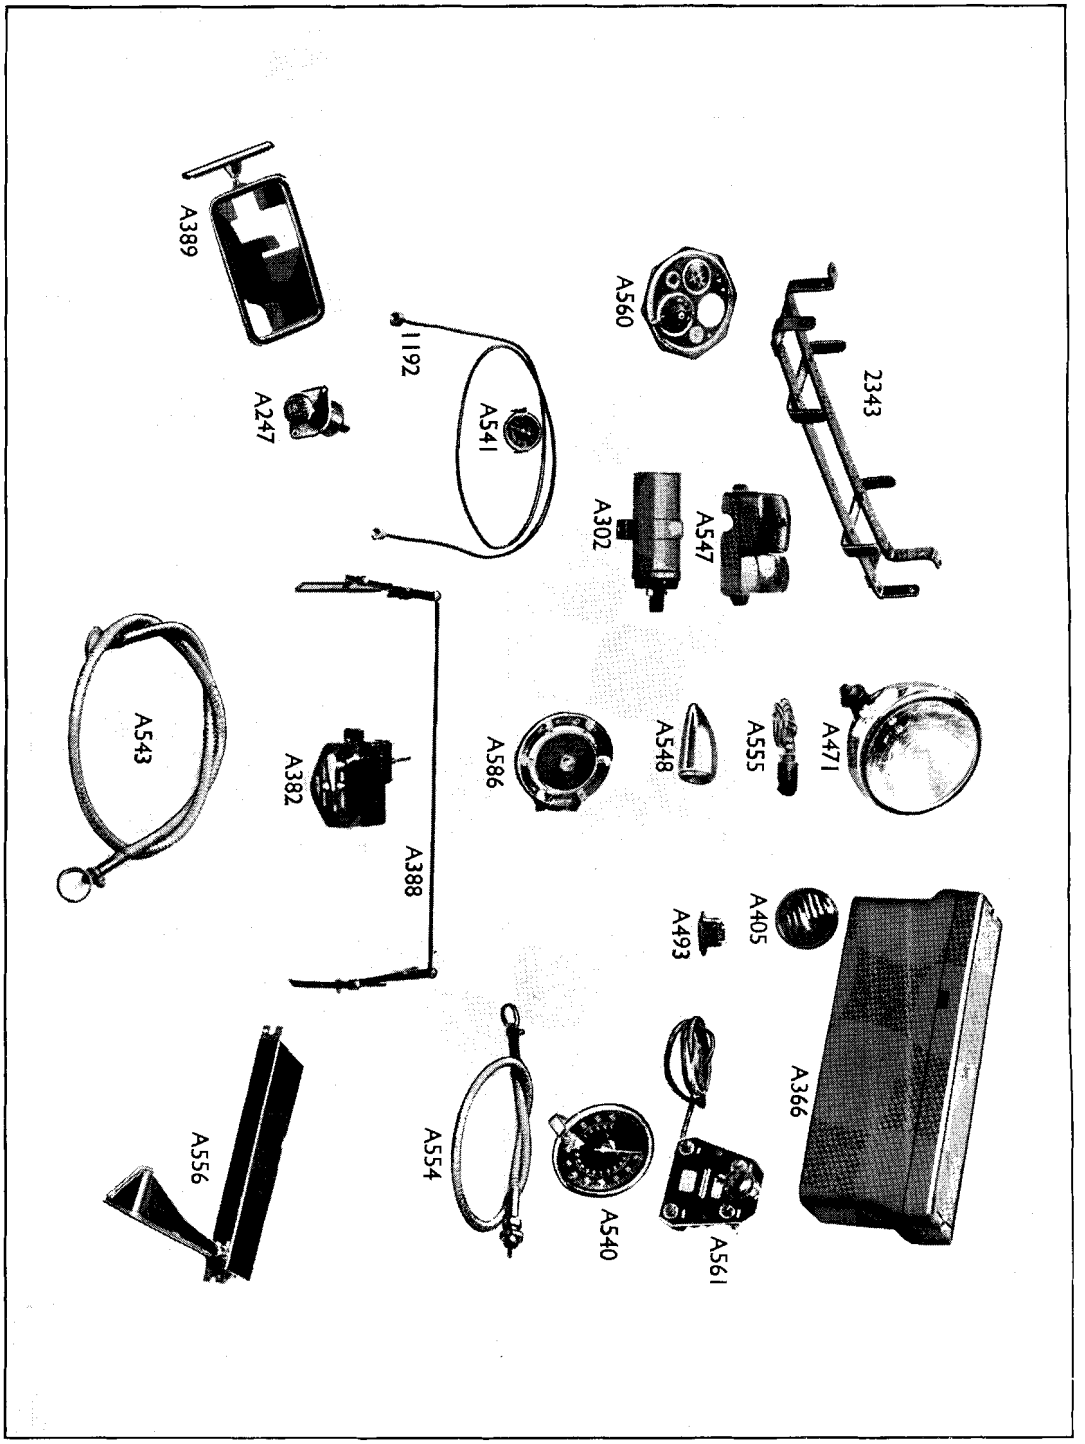

MG499
MG507
MG474/101
MG438/102
MG499/101
3021
1896
2965
1904
1903
1464
3007
S23/2
2920
MG476/2
MG476/101
MG476/100
2320
A444
MG476/102
S27/22



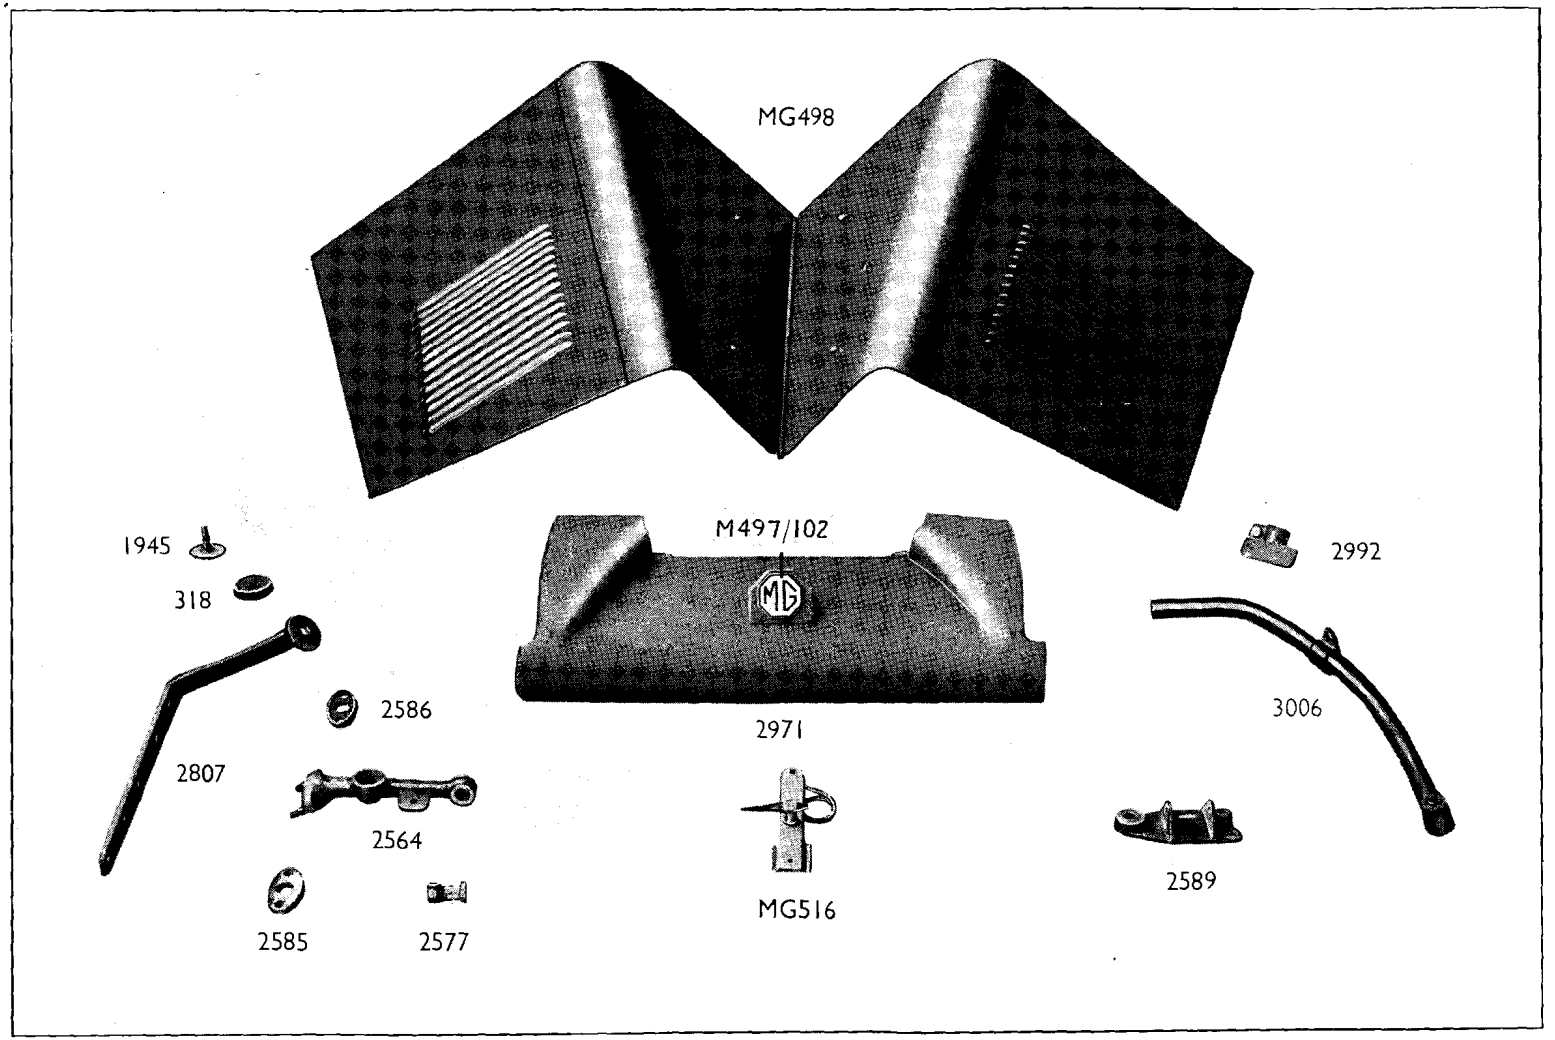
Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	PETROL TANK AND PIPES (*Illustration, page 31*)			
MG507	**Petrol tank (unpainted) less cap**	1	–	2 8 0
MG474/101	Main petrol pipe attachment with 4″ of copper pipe	1	–	2 1
MG438/102	Reserve petrol pipe attachment with 2″ gauze	1	–	2 9
S3/16	⅜″ gas to ¼″ gas cone union adapter	2	–	6
P214/103	Fibre washers for ditto	2	–	2
P352/100	Drain plug	1	–	1 0
P214/103	Fibre washer for ditto	1	–	2
1903	Petrol tank cap Ceased at Chassis No. PA2250	1	–	12 4
S77/1	Quick filler cap for petrol tank Comm. at Chassis No. PB0251	1	–	15 6
S23/2	Rubber packing for tank (52″ long)	1	–	3 9
2920	Rubber packing for tank seating	2	–	1 1
3021	Petrol tank straps	2	–	1 2
1896	Bracket for ditto	2	2	2 9
1904	Rubber packing for tank straps	2	–	10
MG499	**Petrol tank (unpainted) less cap**	–	1	1 13 2
MG499/101	Main petrol tank attachment with 2″ of copper tube	–	1	1 10
MG438/102	Reserve petrol tank attachment with 2″ gauze	–	1	2 9
S3/16	⅜″ gas to ¼″ gas cone union adapter	–	2	6
P214/103	Fibre washer for ditto	–	2	2
P352/100	Drain plug	–	1	1 0
P214/103	Fibre washer for ditto	–	1	2
1464	Petrol tank cap Ceased at Chassis No. PA2250	–	1	4 2
S77/1	Quick filler cap for petrol tank Comm. at Chassis No. PB0251	–	1	15 6
3015	Cover for petrol gauge flange (on tank) ...	–	1	8
3017	Cork washer for ditto	–	1	4
3031	Petrol tank neck	–	1	13 0
2675	Rubber moulding for ditto	–	1	1 2
A611	Jubilee clips No. 3	–	2	2 0
S26/1	Steam hose for tank neck	–	1	11
3007	Rubber packing for tank seating	–	2	1 3
2965	Petrol tank strap	–	2	1 2
1904	Rubber packing for tank straps	–	2	10
2956	Petrol pipe (tank to main pipes)	2	2	1 6
2546	„ „ (main pipes on frame)	2	2	3 0
S3/2	¼″ gas to ¼″ gas cone union adapter	4	4	6
1859	Petrol pipe (main pipes to tap)	2	2	2 3
MG476	**Petrol tap with remote control**	1	1	12 0
MG476/2	Petrol tap (less remote control)	1	1	7 8
MG476/100	Knob for control rod	1	1	2 6
MG476/101	Fixing plate (on facia panel)	1	1	1 10
MG476/102	Petrol tap control rod (30″ long)...	1	1	8
MG476/103	Actuating washer for control rod	1	1	1 0
S27/22	Rubber bush for control rod (through scuttle)...	1	1	3
S27/4	„ „ „ „ „ (through facia panel)	1	1	3
2320	Petrol tap bracket	1	1	3
S68/2	Fume excluder for petrol tap	1	1	3
2865	Petrol pipe (7″ long) (tap to pump)	1	1	1 0
A444	Petrol pump	1	1	2 10 0
S99/1	Flexible petrol pipe (11¼″ long) (pump to carb.)	1	1	4 2
S99/2	„ „ „ (between carburetters) ...	1	1	3 10
S2/19	Petrol pipe and Tecalemit clip	5	5	4
S2/23	Petrol pipe clip (double-ended)	1	2	7
S2/9	„ „ „	3	2	4
	ACCESSORIES AND SUNDRIES			
A294	Wheels (19″ × 2.50 W.B.) (unpainted)	5	5	2 2 6
1123	Hub cap O/S	2	2	9 7
1756	„ „ N/S	2	2	9 7
1220	Instruction plate for greaser nipples O/S ...	1	1	1 1
1221	„ „ „ „ „ N/S ...	1	1	1 1
1914	Instruction plate for foot brake adjustment ...	1	1	6
2953	Instruction plate for slow-running and mixture controls	1	1	6
MG371/1	**Front shock absorbers complete** Ceased at Chassis No. PA2142	1 pr.	1 pr. pair	5 16 0
MG641	**Front shock absorbers complete** Comm. at Chassis No. PA2143	1 pr.	1 pr. pair	2 18 6
A590	Front shock absorbers (less pins) Ceased at Chassis No. PA2142	1 pr.	1 pr. pair	5 11 0
A803	Front shock absorbers (less pins) Comm. Chassis at No. PA2143	1 pr.	1 pr. pair	2 14 0

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £	s.	d.
MG371/100	Pin for front shock absorbers (top)	2	2		2	0
P277/102	„ „ „ „ „ (bottom) ...	2	2		2	0
P277/103	Castle nut for ditto	4	4			3
MG521	**Rear shock absorbers complete**	1 pr.	1 pr.	pair 2	10	0
MG521/1	Rear shock absorber complete O/S	1	1	1	5	0
MG521/2	„ „ „ „ N/S	1	1	1	5	0
A564	Rear shock absorber less arms and links	2	2	1	0	0
MG521/3	Rear shock absorber arm (bushed) with connecting link and mounting pin O/S	1	1		12	6
MG521/4	Ditto N/S	1	1		12	6
MG521/101	Cotter pin for rear shock absorber arm... ...	2	2			8
2944	Rear shock absorber bracket O/S (on frame) ...	1	1		2	9
2943	„ „ „ „ N/S (on frame) ...	1	1		2	9
1415	Distance piece for petrol pipe clip	1	1			2
178	Number-plate (front)	1	1		2	4
1124	„ (rear)	1	1		2	4
2954	Number-plate bracket (rear)	2	–		2	5
B252/125	„ „ (rear)	–	1		3	4
A289	Licence holder	1	1		4	0
2357	Starting handle clip (shaft)	2	2	doz.	2	3
3030	„ „ „ (grip)	1	1			4
2955	Clip for tyre pump	2	–			4
2012	Strap for lifting jack	1	–			7
3001	Spare sparking plug carrier Ceased at Chassis No. PA2250	1	1		5	0
P359	**Grouped nipple lubricating system**	1	1	2	1	0
P167/133	Pipe (1′ 5″ long) (steering box and front spring sliding trunnion)	1	1		1	6
P278/102	„ (1′ 8½″ long) (grouped nipple and front spring sliding trunnions)	2	2		1	9
P359/100	„ (2′ 1½″) (grouped nipples and front brake cables)	2	2		2	0
P278/104	„ (2′ 11½″) (grouped nipples and brake cross shaft)	2	2		2	9
P359/101	„ (4′ 5″) (grouped nipples and rear brake cables)	2	2		3	9
P167/138	„ (2′ 7″) (brake cross shaft and rear spring front shackles)	2	2		2	2
P278/117	„ (5′ 9″) (brake cross shaft and rear spring sliding trunnions)	2	2		4	4
S1/4	Greaser nipple (front spring front shackles, steering knuckles, track rod and draglink ends)	10	10			8
P278/109	Adjustable feed plug (steering box, rear spring front shackles, front spring rear shackle N/S)	4	4		1	3
P359/103	Open feed plug (1-way) (brake cable stop brackets and rear spring rear shackles)	6	6		1	0
P278/110	Adjustable feed plug (2-way) (front spring rear shackle O/S)	1	1		1	6
P287/118	Ditto (3-way) (brake cross shaft)	2	2		1	9
P113/110	Fibre washers (thick)	13	13	doz.	1	0
P113/111	„ „ (thin)	38	38	doz.		6
P113/109	Clip for 1 pipe	4	4	doz.		6
P278/111	Clip for 2 pipes	2	2	doz.	1	6
P278/119	Support for 3 pipes	1	1			3
MG369/106	Support for 4 pipes	2	2			2
P359/1	Zerk battery plate fitting (1-way) (grouped nipples)	4	4		1	6
P359/2	Zerk battery plate fitting (2-way) (grouped nipples)	2	2		1	9
	DASHBOARD AND FUME EXCLUDERS (*Illustration, page 32*)					
1121	Dashboard wall O/S	1	1		4	7
1122	„ „ N/S	1	1		4	7
MG529	Dash panel complete	1	1	1	6	8
2927	Aluminium retainer for dash panel seal ...	2	2		1	10
2924	Carpet fixing plate	1	1		2	0
2926	Dashboard seal (Sorbo) (6′)	1	1		3	7
2003	Draught excluder for steering column (rubber)	1	1		3	7
2070	Backing plate for ditto	1	1			7
1869	Aluminium draught excluder block O/S ...	1	1		1	4
1962	„ „ „ „ N/S ...	1	1		1	4
2929	Undertray	1	1		13	7
2926	Clutch housing seal (Sorbo) (50″)	1	1		2	9

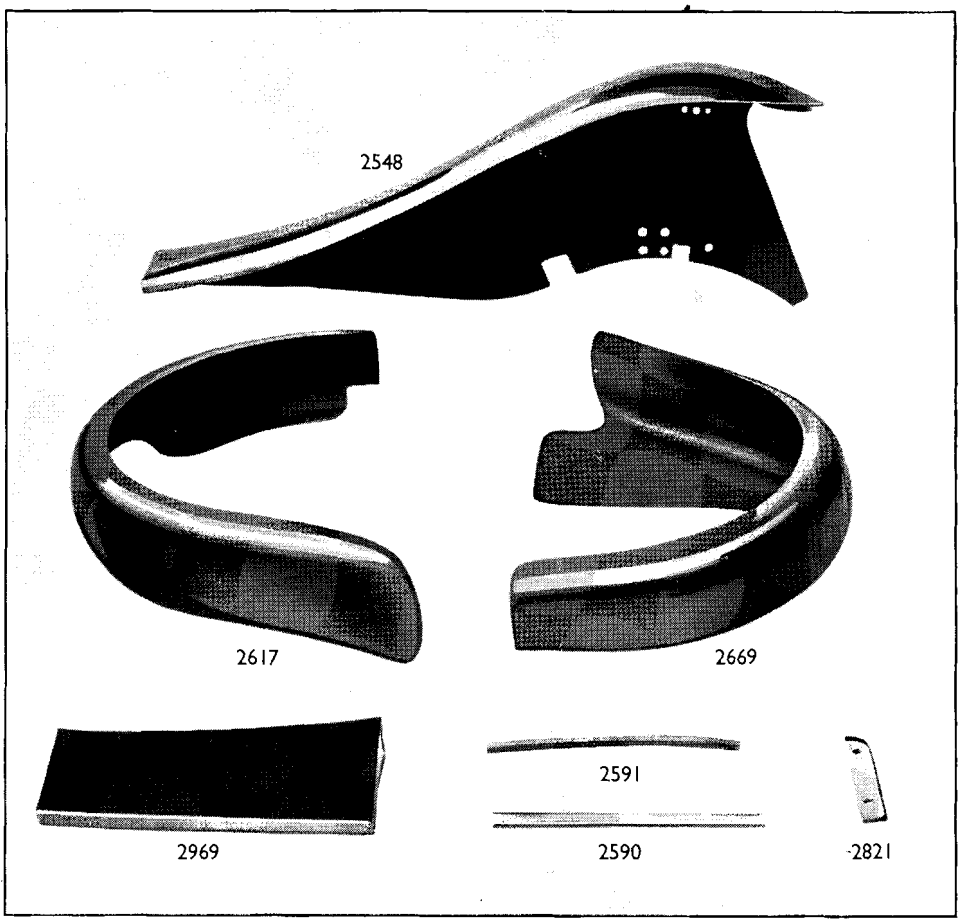


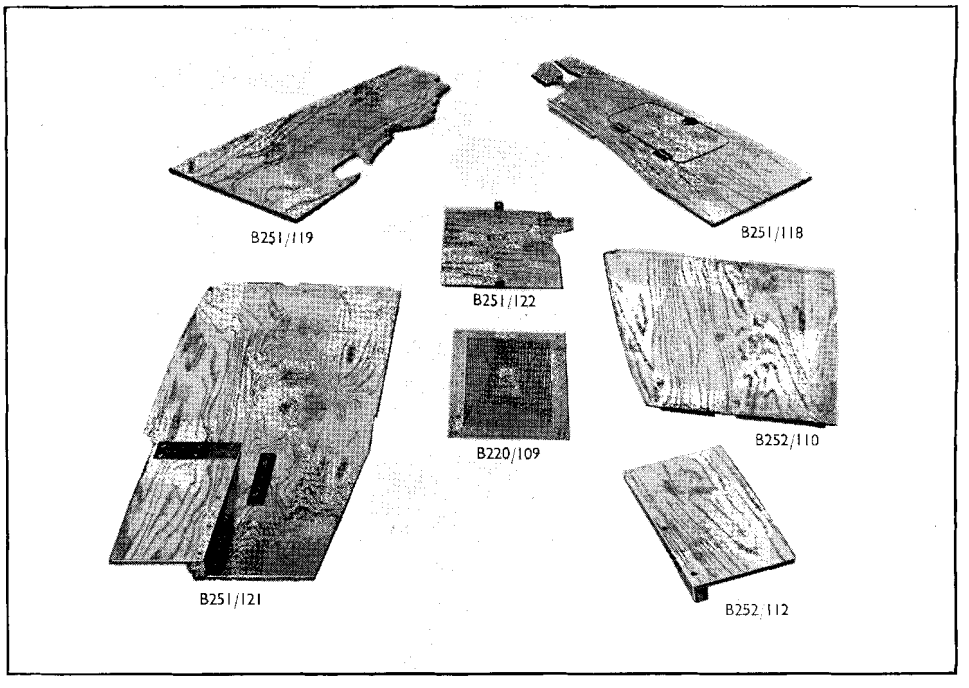
Please Quote Chassis, Engine and Body Numbers in all Correspondence

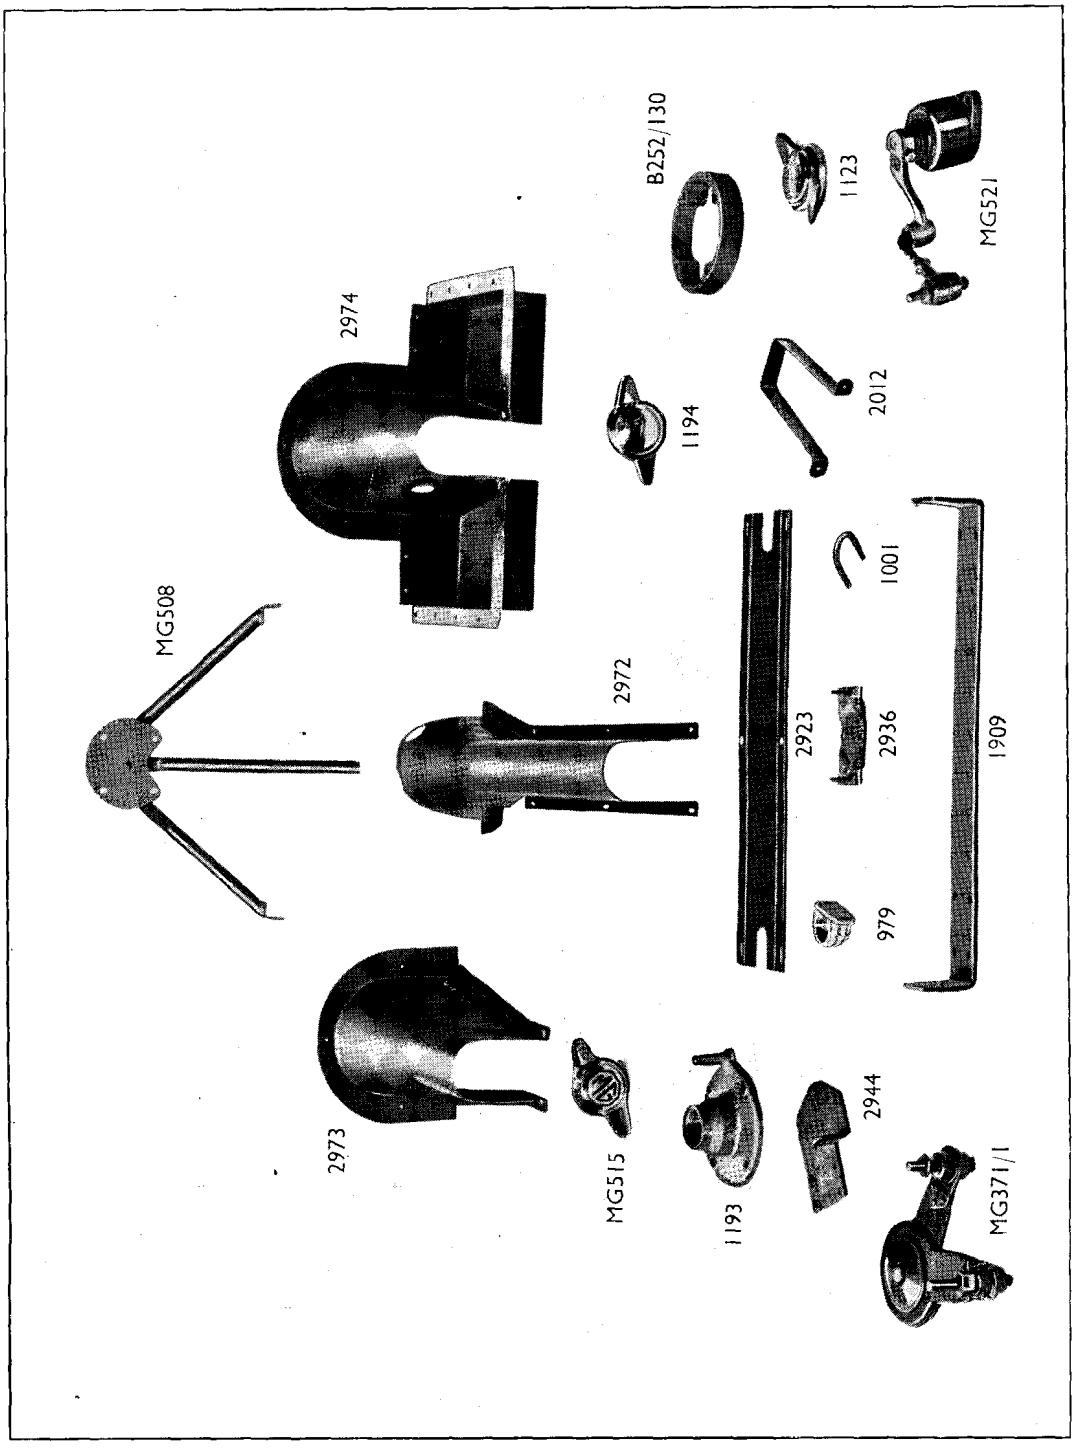

MG498
1945
318
2807
2586
2564
2585
2577
M497/102
2971
MG516
2992
3006
2589

Part No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	ELECTRICAL EQUIPMENT AND INSTRUMENTS (*Illustration, page 35*)			
A560	Instrument panel	1	1	1 10 0
A540	Revolution counter (5″) (with m.p.h. in top gear) Ceased at Chassis No. PA2250	1	1	6 13 0
A760	Ditto (5″) (no m.p.h. readings) Comm. at Chassis No. PB0251	1	1	6 3 0
2792	Octagonal mask for ditto	1	1	1 0
A554	Revolution counter cable	1	1	15 0
S27/17	Rubber bush for ditto	1	1	4
A541	Oil gauge	1	1	1 1 0
1192	Oil gauge pipe line with unions	1	1	3 6
S27/9	Rubber bush for ditto (in dash panel)	1	1	5
335	Fibre washer for ditto	2	2	1
S2/4	Clip for ditto	3	3	2
A542	Mileometer ... Ceased at Chassis No. PA2250	1	1	2 10 0
A799	Speedometer ... Comm. at Chassis No. PB0251	1	1	5 0 0
3014	Octagonal mask for ditto Comm. at Chassis No. PB0251	1	1	6
A543	Cable for mileometer or speedometer	1	1	15 0
A544	Angle drive box for mileometer or speedometer	1	1	10 6
A801	30 m.p.h. warning light Comm. at Chassis No. PB0251	1	1	3 6
A561	Combined horn and dipper switch with panel, etc. and cable Ceased at Chassis No. PA2250	1	1	1 10 0
S27/13	Rubber bush for horn and dipper switch cable	1	1	2
A561/1	Combined horn and dipper switch with cable Comm. at Chassis No. PB0251	1	1	8 0
A561/101	Switch for trafficators Comm. at Chassis No. PB0251	2	2	3 6
A648	Push-pull switch Comm. at Chassis No. PB0251	2	2	2 9
A366	Battery (12-volt)	1	1	5 1 6
2343	Battery carrier	1	1	4 10
A247	Starter switch	1	1	7 6
A547	Cut-out and junction box	1	1	1 8 6
A302	Ignition coil	1	1	1 0 0
A471	Headlamps (N/S and O/S)	1 pr.	1 pr. pair	6 5 0
A548	Sidelamps with flat rubber packing	1 pr.	1 pr. pair	1 7 6
A405	Stop and tail-lamp	1	1	16 6
A493	Stop light switch	1	1	2 6
S2/21	Clip for stop lamp switch	1	1	8
S27/1	Rubber bush for stop and tail-lamp cable ...	–	1	4
A555	Dashlamps	2	2	5 0
A556	Direction indicator with cable	1 pr.	1 pr.	15 6
A382	Windscreen wiper motor (with cable)	1	1	1 5 6
A388	Windscreen wiper blade assembly	1	1	14 10
S27/3	Rubber bush for windscreen wiper cable ...	1	1	2
A389	Driving mirror and bracket	1	1	13 6
A551	Harnessed cables	1 set	1 set	4 0 0
S27/20	Rubber bush for cables (through dash panel) ...	1	1	4
2587	Wiring cover (aluminium)	1	1	1 8
A553	High-tension cables	1	1	5 3
A586	Horn (12-volt)	1	1	1 5 0
S2/1	Wiring clip (single $\frac{5}{8}$″ dia.)	1	1	3
S2/2	„ „ (single $\frac{3}{8}$″ dia.)	6	6	3
S2/3	„ „ (single $\frac{1}{4}$″ dia.)	8	10	3
S2/5	„ „ (single $\frac{11}{16}$″ dia.)	6	6	4
S2/12	Binding clip ($6\frac{1}{4}$″ long)	20	18	4
S2/6	Wiring clip (single 1″ dia.)	3	3	3
S2/26	„ „ (single $\frac{3}{8}$″ dia.)	2	2	2
	BONNET, WINGS AND FAIRINGS (*Illustrations, pages 36–39*)			
2548	Front wing O/S (unpainted)	1	1	2 14 0
2549	„ „ N/S (unpainted)	1	1	2 14 0
2588	Front wing stay and shock absorber bracket O/S	1	1	3 4
2589	„ „ „ „ „ „ N/S	1	1	3 4
3006	Front wing support stay	2	2	9 0
2992	Top bracket for ditto	2	2	1 0
S17/4	Silentbloc for ditto	2	2	3 4
2564	Headlamp bracket O/S	1	1	5 8
2565	„ „ N/S	1	1	5 8
2585	Rubber packing for ditto (internal)	2	2	4
2586	„ „ „ „ (exterior)	2	2	6
2577	Bolts for headlamp bracket	2	2	1 0

Part No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
2563	Rubber packing for sidelamp	2	2	3
2617	Rear wing O/S (unpainted)	–	1	1 15 10
2618	„ „ N/S (unpainted)	–	1	1 15 10
2669	„ „ O/S (unpainted)	1	–	1 11 6
2670	„ „ N/S (unpainted)	1	–	1 11 6
815	Rubber buffer for rear wing	2	–	2
2807	Rear wing stay tie bar O/S	1	–	6 11
2808	„ „ „ „ „ N/S	1	–	6 11
1945	Special bolt for wing mounting	2	–	10
S75/6	Rubber packing for ditto	2	–	5
2969	Running-board O/S (unpainted)	1	1	13 10
2970	„ N/S (unpainted)	1	1	13 10
2590	Step chanelling for ditto (18″ long) (aluminium) Ceased at Chassis No. PA1813	4	4	2 4
2591	Rubber for ditto (18″ long) Ceased at Chassis No. PA1813	4	4	1 2
S37/1	Step chanelling for running-board complete with rubber Comm. at Chassis No. PA1814 ...	4	4	3 6
3071	Front wing rubber packing O/S (between wing and running-board)	1	1	1 4
3072	Ditto N/S (between wing and running-board)...	1	1	1 4
2971	Front fairing (unpainted)	1	1	16 8
MG497/102	M.G. medallion for ditto	1	1	5 0
S23/1	Rubber insertion (18″ long) (on side members)	2	2	5
S23/1	Ditto (30″ long) (between radiator and fairing)	1	1	9
361	Dome nut for front fairing	4	4	6
380	Flat washers for ditto	4	4	4
2321	Bracket for bonnet board rest	2	2	7
380	Flat washers for ditto	4	4	4
2930	Rain channel	1	1	1 0
1932	Support bracket for ditto	1	1	3
S27/21	Rubber buffer for ditto	1	1	3
MG498	**Bonnet complete** (unpainted)	1	1	2 5 0
MG498/100	Bonnet side O/S	1	1	10 0
MG498/101	„ „ N/S	1	1	10 0
MG498/102	Bonnet side hinge rod	2	2	1 6
MG498/103	Bonnet top O/S	1	1	1 0 0
MG498/104	„ „ N/S	1	1	1 0 0
MG498/105	Bonnet top hinge rod	1	1	1 6
MG498/106	Bonnet buttons	4	4	4
MG516	**Bonnet fasteners complete O/S and N/S**	2 pr.	2pr.	5 0
A584	Bonnet fasteners (less handle)	4	4	2 6
MG516/100	Handle for bonnet fasteners O/S and N/S ...	4	4	2 6
2062	Bonnet hinge rod bracket Ceased 2-seater, Body No. **1442**/2209, 4-seater, **454**/2350	1	1	2 0
259	Bonnet rod lug Ceased 2-seater, Body No. **1442**/2209, 4-seater, **454**/2350	1	1	8
MG444/106	Bonnet hinge rod bracket Comm. 2-seater, Body No. **1443**/2210, 4-seater, **455**/2351	1	1	8
B251/146	Bonnet board O/S	1	1	18 9
B251/147	„ „ N/S	1	1	18 9
2985	Trim board for bonnet board O/S	1	1	1 10
2986	„ „ „ „ „ N/S	1	1	1 10
B225/146	Bonnet rest (alum.) O/S } Ceased 2-seater, Body	1	1	8 6
B225/147	„ „ (alum.) N/S } No. **1442**/2209, 4-seater	1	1	8 6
S23/3	Rubber tape for ditto (9′ long) ... ... } Body No. **454**/2350	1	1	1 10
S41/1	Bonnet rest rubber (7′ 10″ long) Comm. 2-seater, Body No. **1443**/2210, 4-seater, **455**/2351	1	1	4 2
	PROPELLER SHAFT SHROUD AND FITTINGS (*Illustration, page 40*)			
2972	Propeller shaft shroud (front)	1	1	12 4
2973	„ „ „ (rear)	1	–	10 10
2974	„ „ „ (rear)	–	1	1 1 0
2923	Propeller shaft shroud bottom plate	1	1	1 3
2936	Propeller shaft shroud platform	2	2	1 6
979	Support bracket for ditto (aluminium) (rear) ...	1	1	2 7
1001	"U" clip for ditto	1	1	4
1211	Support bracket for ditto (aluminium) (front) ...	1	1	3 0
1212	"U" clip for ditto	1	1	6


2548
2617
2669
2969
2591
2590
2821

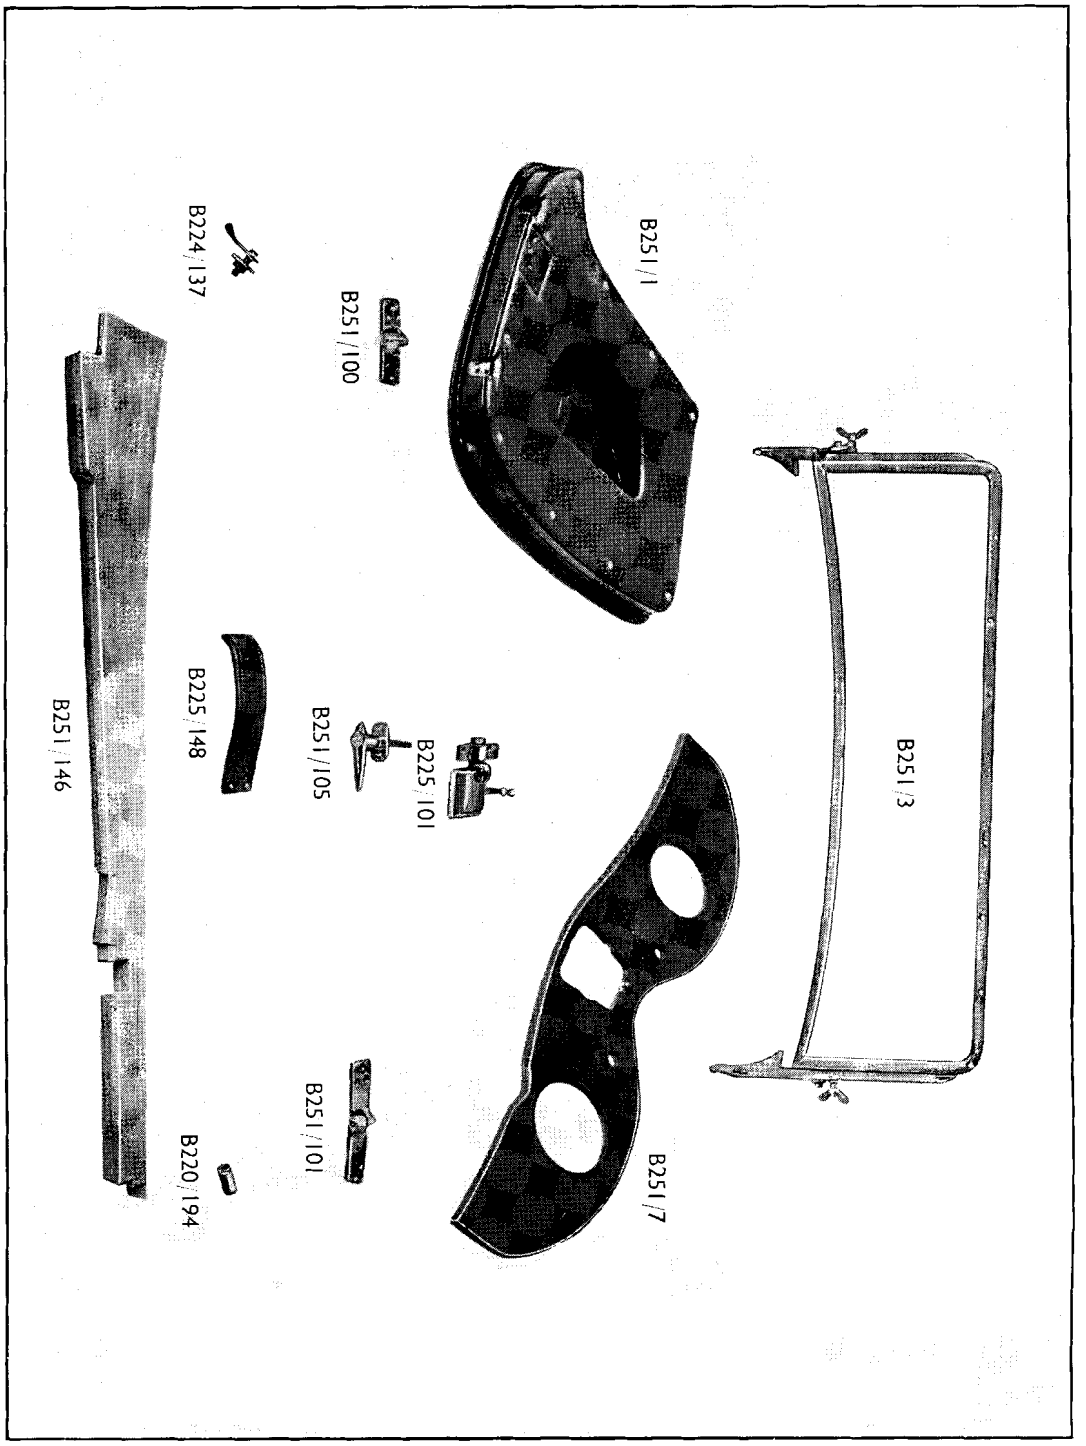

B251/119
B251/118
B251/122
B252/110
B220/109
B251/121
B252/112



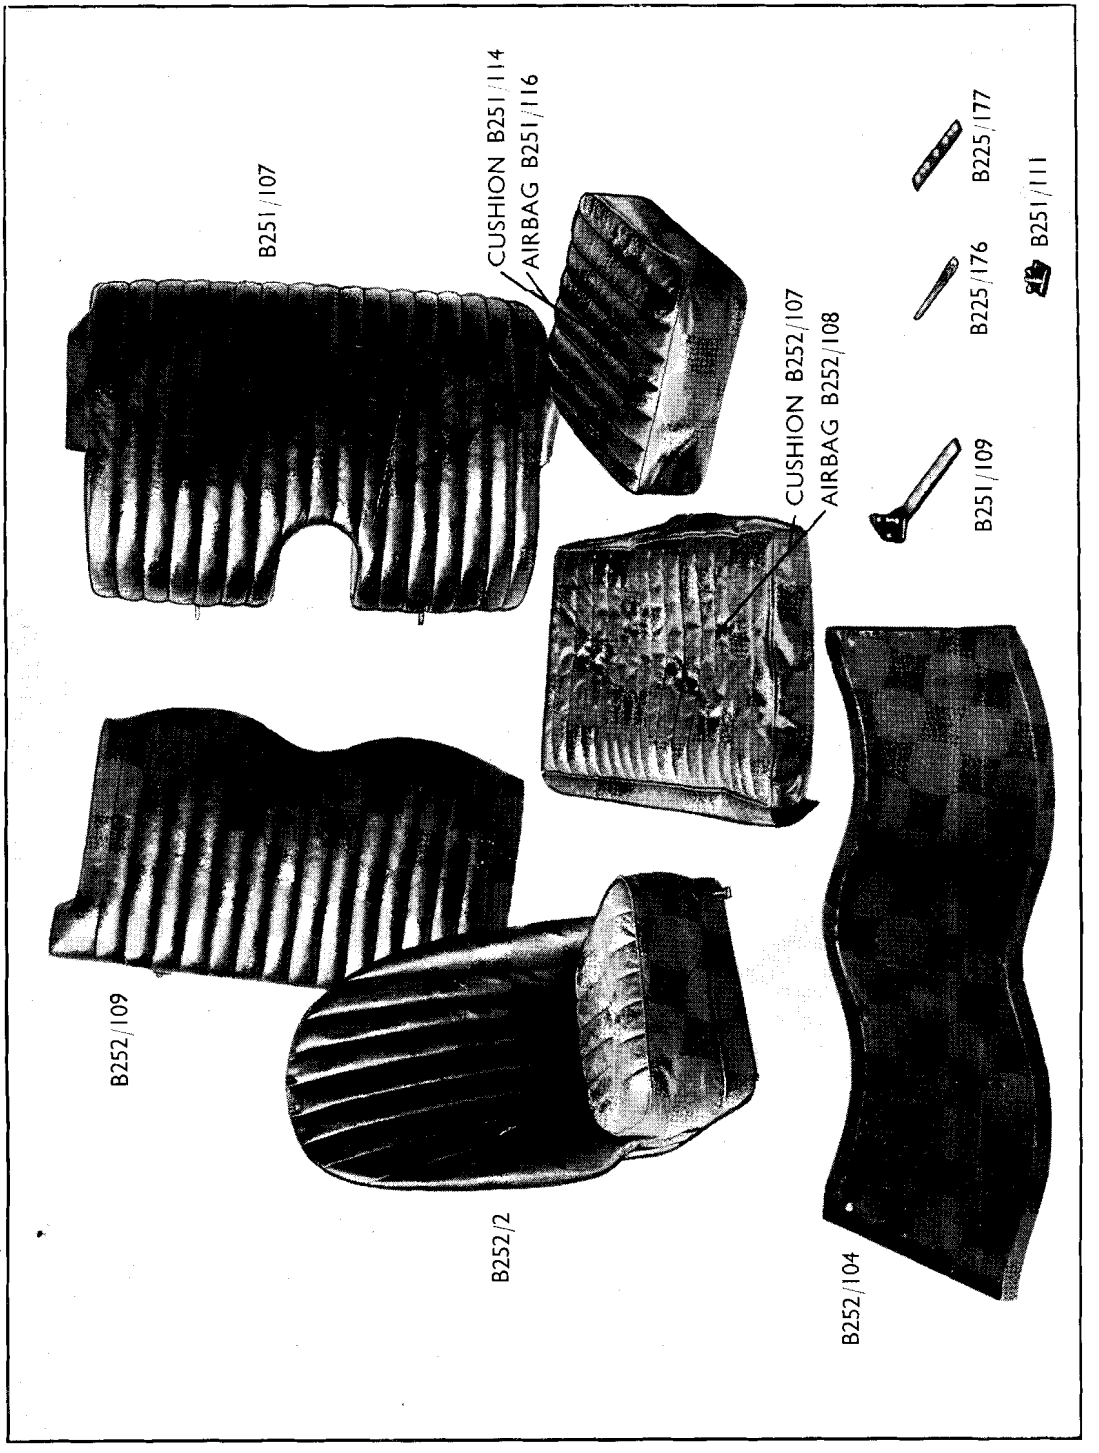
Please Quote Chassis, Engine and Body Numbers when ordering Parts

Part No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	SPARE WHEEL CARRIER ASSEMBLY			
MG508	**Spare wheel carrier bracket assembly**	1	–	1 9 6
MG508/105	Bottom centre securing bracket for ditto ...	1	–	6 4
1193	Spare wheel hub	1	1	13 0
MG515	**Spare wheel lock nut and sleeve assembly**	1	–	1 0 3
MG515/100	Spare wheel lock nut and sleeve	1	–	14 0
MG515/101	Collar for tension spring	1	–	1 0
MG515/102	M.G. meallion	1	–	5 0
MG515/103	Centralising shaft for M.G. medallion	1	–	1 9
MG515/104	Tension spring for ditto	1	–	4
3024	Anchor bolts and plates for spare wheel hub ...	–	2	1 10
1194	Spare wheel lock nut and sleeve	–	1	14 0
B252/130	Spare wheel hub packing block	–	1	14 6
	BODY MOUNTING BRACKETS, ETC. (*Illustration, page 3*)			
1929	Body bracket (rear)	2	–	1 2
1930	Backing plate for ditto	2	–	6
3052	" U " clip for body mounting (rear)	–	2	5
3033	Shoe for ditto	–	2	1 5
2931	Front body bracket O/S	1	1	5
2932	" " " N/S	1	1	5
1211	Front body bracket support (aluminium) ...	2	2	3 0
1212	" U " clip for ditto	2	2	6
1002	Body bracket (on rear spring front cross tube)	2	2	8
979	Body bracket support (aluminium)	2	2	2 7
1001	" U " clip for ditto	2	2	4
2937	Body to dash tie bar	2	2	1 9
S56/9	Packing piece for body mounting (10 S.W.G.)	as reqd.		2
S56/10	" " " " " (16 S.W.G.)	as reqd.		2
	BODY DETAILS (2-SEATER) (*Illustrations, pages 43–44*)			
B251	**Body complete**	1	–	Price on application
	DOORS, LOCKS AND HINGES			
B251/1	Door (upholstered) (less fittings) O/S	1	–	2 19 3
B251/148	Door hinge O/S (top)	1	–	1 10
B251/149	" " O/S (bottom)	1	–	1 10
B251/152	Door hinge pins	2	–	4
B225/101	Door lock complete O/S } Ceased at Body	1	–	9 6
B225/108	Door lock catch plate } 568/**500**	1	–	2 6
B254/10	Door lock complete with catch plate and securing bracket O/S ... } Comm. at	1	–	17 6
B254/179	Door lock catch plate ... } Body No.	1	–	7 6
B254/183	Securing bracket for ditto } 590/**1351**	1	–	3 6
S17/10	Oscillith bush for catch plate }	1	–	2 0
B251/105	Door handle O/S	1	–	3 9
B251/2	Door (upholstered) (less fittings) N/S	1	–	2 19 3
B251/150	Door hinge N/S (top)	1	–	1 10
B251/151	" " N/S (bottom)	1	–	1 10
B251/152	Door hinge pins	2	–	4
B225/142	Door lock complete N/S } Ceased at Body No.	1	–	9 6
B225/108	Door lock catch plate } 568/**500**	1	–	2 6
B254/11	Door lock complete with catch plate and securing bracket N/S ... } Comm. at	1	–	17 6
B254/179	Door lock catch plate ... } Body No.	1	–	7 6
B254/183	Securing bracket for ditto ... } 590/**1351**	1	–	3 6
S17/10	Oscillith bush for ditto ... }	1	–	2 0
B251/106	Door handle N/S	1	–	3 9
B235/116	Door rubber buffer with shoe and plate ...	4	–	7
B225/148	Door check strap (7")	2	–	2 0
B220/194	Sidescreen socket (rear)	2	–	1 4
B224/137	Sidescreen securing clamp (front)	2	–	2 5
B224/224	Socket for ditto	2	–	1 4

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	SEATS AND FITTINGS			
B251/107	Seat squab (less tonneau cover) (upholstered) ...	1	–	3 12 0
B251/108	Tonneau cover	1	–	14 6
B251/109	Squab adjusting slide	2	–	1 10
B251/111	Squab adjusting bracket (on body)	2	–	8
B251/112	Wing nut for ditto	2	–	1 0
B225/176	Squab adjusting peg (bottom)	2	–	3 4
B225/177	Squab adjusting bottom rack	2	–	8
B251/114	Seat cushion O/S (less air bag)	1	–	1 6 0
B251/115	„ „ N/S (less air bag)	1	–	1 6 0
B251/116	Air bag for ditto	2	–	13 0
	FLOORBOARDS AND CARPETS			
B251/118	Floorboard (front) O/S	1	–	8 6
B251/119	„ (front) N/S	1	–	7 0
B251/120	„ (rear) O/S	1	–	11 6
B251/121	„ (rear) N/S	1	–	11 6
B251/122	Passenger foot slope	1	–	6 0
B251/124	Leather cover for propeller shaft shroud ...	1	–	13 0
B220/109	Rubber mat for carpet	2	–	2 0
B251/125	Door tread plate O/S	1	–	2 1
B251/153	„ „ „ N/S	1	–	2 1
B251/123	Front carpet	1		2 9 0
	WINDSCREEN AND FACIA PANEL			
B251/10	**Windscreen complete with glass**	1	–	5 6 0
B251/11	**Windscreen frame complete (less glass)**	1	–	4 2 6
B251/126	Windscreen frame (bare) (2-screw top fixing) ...	1	–	2 0 0
B251/194	„ „ (bare) (3-screw top fixing) ...	1	–	2 0 0
B251/127	Windscreen side support (bottom) O/S	1	–	11 0
B251/128	„ „ „ (bottom) N/S	1	–	11 0
B251/155	Rubber moulding for ditto	2	–	1 10
B251/129	Windscreen side support (top) O/S (2-screw fixing)	1	–	9 0
B251/130	„ „ „ (top) N/S (2-screw fixing)	1	–	9 0
B251/195	„ „ „ (top) O/S (3-screw fixing)	1	–	9 0
B251/196	„ „ „ (top) N/S (3-screw fixing)	1	–	9 0
B251/131	Wing nut for windscreen adjustment	2	–	1 0
B251/193	Washer for ditto	2	–	doz. 1 6
B251/192	Dome nut for windscreen swivel	2	–	6
B251/198	Washer for ditto	2	–	doz. 1 4
B251/203	Windscreen glass	1	–	2 0 10
B251/133	Rubber surround for ditto...	1	–	1 10
B251/197	Draught excluder rubber (bottom edge of windscreen)	1	–	4 9
B251/7	Facia panel (drilled, with beading) Ceased at Chassis No. PA2250	1	–	1 12 0
B251/12	Facia panel (drilled, with beading) Comm. at Chassis No. PB0251	1	–	1 12 0
B251/145	C.P. beading for panel	1	–	3 10
	HOOD AND SIDE CURTAINS			
B251/134	Hood frame complete	1	–	1 1 3
B225/160	Fulcrum bracket for frame (on body)	2	–	3 6
B225/178	Bolt for ditto	2	–	3
B225/179	C.P. dome nut for ditto	2	–	6
B251/136	Hood canopy...	1	–	2 3 0
B251/5	Side curtain with fixing lugs O/S	1	–	1 2 6
B251/139	Side curtain locating peg O/S (rear)	1	–	2 9
B251/141	Side curtain securing bracket O/S (front) ...	1	–	3 0
B251/6	Side curtain with fixing lugs N/S	1	–	18 9
B251/140	Side curtain locating peg N/S (rear)	1	–	2 9
B251/142	Side curtain securing bracket N/S (front) ...	1	–	3 0
B251/143	Side curtain flap O/S (side curtain to hood) ...	1	–	9 3
B251/144	„ „ „ N/S (side curtain to hood) ...	1	–	9 3



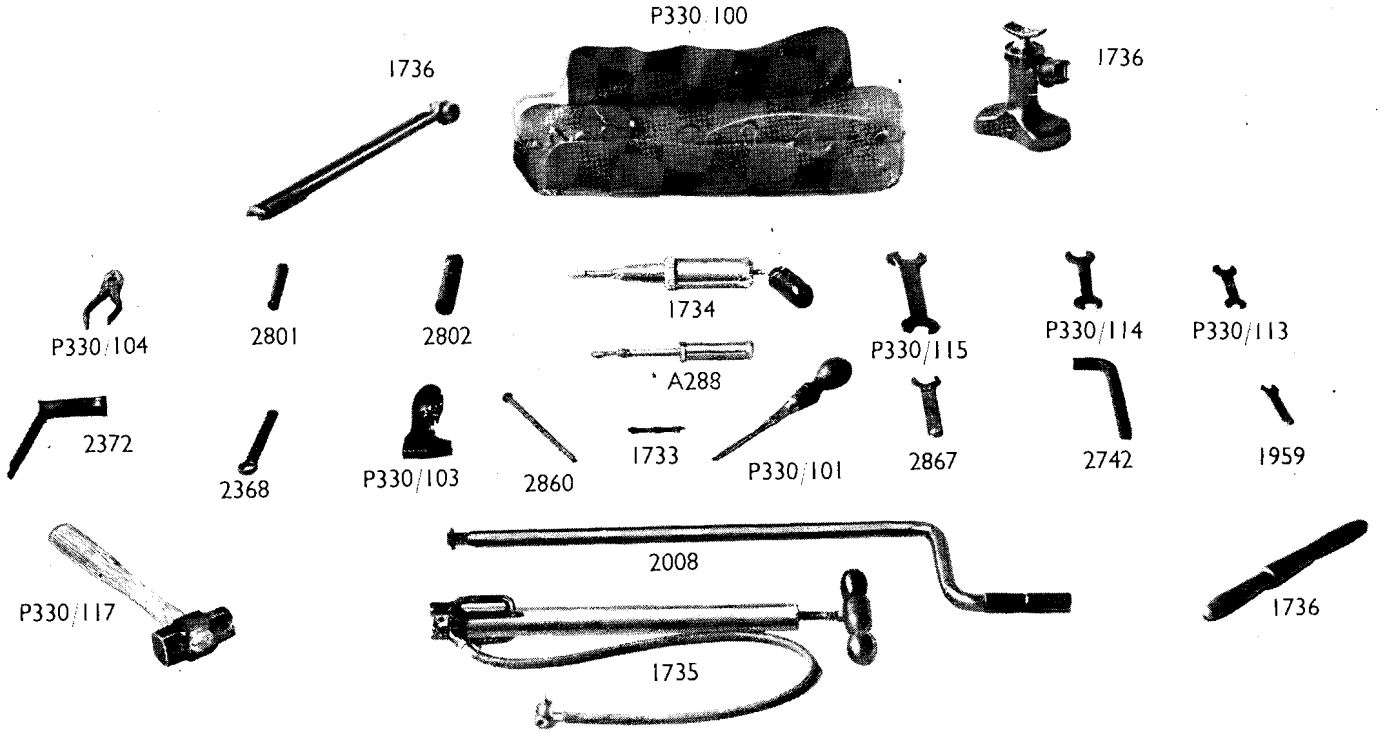
Please Quote Chassis, Engine and Body Numbers when ordering Parts



Please Quote Chassis, Engine and Body Numbers in all Correspondence

Part No.	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
	BODY DETAILS (4-SEATER) (*Illustrations, pages 43–44*)			
B252	**Body complete**	–	1	Price on application
	DOORS, LOCKS AND HINGES			
B251/1	Door (upholstered) (less fittings) O/S	–	1	2 19 3
B251/148	Door hinge O/S (top)	–	1	1 10
B251/149	„ „ O/S (bottom)	–	1	1 10
B251/152	Door hinge pins	–	2	4
B225/101	Door lock complete O/S } Ceased at Body No.	–	1	9 6
B225/108	Door lock catch plate } 336/**750**	–	1	2 6
B254/10	Door lock complete with catch plate and securing bracket O/S ... } Comm. at	–	1	17 6
B254/179	Door lock catch plate ... } Body No.	–	1	7 6
B254/183	Securing bracket for ditto } 450/**2251**	–	1	3 6
S17/10	Oscillith bush for ditto ... }	–	1	2 0
B251/105	Door handle O/S	–	1	3 9
B251/2	Door (upholstered) (less fittings) N/S	–	1	2 19 3
B251/150	Door hinge N/S (top)	–	1	1 10
B251/151	„ „ N/S (bottom)	–	1	1 10
B251/152	Door hinge pins	–	2	4
B225/142	Door lock complete N/S } Ceased at Body No.	–	1	9 6
B225/108	Door lock catch plate } 336/**750**	–	1	2 6
B254/11	Door lock complete with catch plate and securing bracket N/S ... } Comm. at	–	1	17 6
B254/179	Door lock catch plate ... } Body No.	–	1	7 6
B254/183	Securing bracket for ditto } 450/**2251**	–	1	3 6
S17/10	Oscillith bush for ditto ... }	–	1	2 0
B251/106	Door handle N/S	–	1	3 9
B235/116	Door rubber buffer with shoe and plate ...	–	4	7
B225/148	Door check strap (7″)	–	2	2 0
B220/194	Sidescreen socket (rear) (on door)	–	2	1 4
B224/137	Sidescreen securing clamp (front) (on door) ...	–	2	2 5
B224/224	Socket for ditto (on door)	–	2	1 4
	SEATS AND FITTINGS			
B252/1	Front seat complete with slides and cushions O/S ...	–	1	5 5 0
B252/140	Front seat (upholstered) (less slides and cushions) O/S	–	1	2 2 0
B252/100	Seat cushion O/S	–	1	1 5 0
B252/2	Front seat complete with slides and cushions N/S ...	–	1	5 5 0
B252/143	Front seat (upholstered) (less slides and cushion) N/S	–	1	2 2 0
B252/102	Seat cushion N/S	–	1	1 5 0
B252/132	Air bag for front seat cushion	–	2	13 0
A659	Front seat adjustment fittings	–	2	1 6 6
3084	Securing plate for seat slides.	–	4	1 0
B252/104	Rear seat pan	–	1	14 6
B252/105	Locating brackets for ditto	–	3	1 2
B252/106	Nut for securing rear seat pan	–	3	8
B252/107	Rear seat cushion	–	1	3 9 0
B252/108	Air bag for ditto	–	2	10 0
B252/109	Rear seat squab (upholstered)	–	1	2 13 0
	FLOORBOARDS AND CARPETS			
B251/118	Floorboard (front) O/S	–	1	8 6
B251/119	„ (front) N/S	–	1	7 0
B252/110	„ (rear) O/S	–	1	8 0
B252/111	„ (rear) N/S	–	1	8 0
B252/112	Floorboard wedge O/S	–	1	5 4
B252/113	„ „ N/S	–	1	5 4
B251/122	Passenger foot slope	–	1	6 0
B252/114	Front carpet	–	1	2 5 0
B252/115	Centre carpet	–	1	2 0 0
B252/116	Heel well carpet	–	1	10 2
B220/109	Rubber mat for carpet	–	2	2 0
B251/125	Door tread plate O/S	–	1	2 1
B251/153	„ „ „ N/S	–	1	2 1
	WINDSCREEN AND FACIA PANEL			
B251/10	Windscreen complete with glass	–	1	5 6 0
B251/11	Windscreen frame complete (less glass)	–	1	4 2 6
B251/126	Windscreen frame (bare) (2-screw top fixing) ...	–	1	2 0 0
B251/194	„ „ (bare) (3-screw top fixing) ...	–	1	2 0 0

Part No	DESCRIPTION	No. Used 2-seater	No. Used Tourer	Price Each £ s. d.
B251/127	Windscreen side support (bottom) O/S	–	1	11 0
B251/128	„ „ „ (bottom) N/S	–	1	11 0
B251/155	Rubber moulding for ditto	–	2	1 10
B251/129	Windscreen side support (top) O/S (2-screw fixing)	–	1	9 0
B251/130	„ „ „ (top) N/S (2-screw fixing)	–	1	9 0
B251/195	„ „ „ (top) O/S (3-screw fixing)	–	1	9 0
B251/196	„ „ „ (top) N/S (3-screw fixing)	–	1	9 0
B251/131	Wing nut for windscreen adjustment	–	2	1 0
B251/193	Washer for ditto	–	2	doz. 1 6
B251/192	Dome nut for windscreen swivel	–	2	6
B251/198	Washer for ditto	–	2	doz. 1 4
B251/203	Windscreen glass	–	1	2 0 10
B251/133	Rubber surround for ditto...	–	1	1 10
B251/197	Draught excluder rubber (bottom edge of windscreen)	–	1	4 9
B251/7	Facia panel (drilled, with beading) Ceased at Chassis No. PA2250	–	1	1 12 0
B251/12	Facia panel (drilled, with beading) Comm. at Chassis No. PB0251	–	1	1 12 0
B251/145	C.P. beading for panel	–	1	3 10
	HOOD AND SIDESCREENS			
B252/117	Hood frame complete	–	1	2 3 0
B254/177	Hood frame fulcrum bracket (on body) ...	–	2	2 9
B252/145	Bolt for ditto	–	2	3
B252/144	Lock nut for ditto	–	2	1
B252/118	Hood canopy...	–	1	2 16 9
B252/119	Hood envelope	–	1	1 12 0
B252/122	Hood rest O/S (rear)	–	1	5 10
B252/123	„ „ N/S (rear)	–	1	5 10
B252/124	Straps for ditto	–	2	1 9
B252/147	Plate for hood straps	–	2	8
B251/5	Front side curtain with securing brackets O/S ...	–	1	1 2 6
P251/139	Front side curtain locating peg (rear) O/S ...	–	1	2 9
B251/141	Front side curtain securing bracket (front) O/S	–	1	3 0
B251/6	Front side curtain with securing brackets N/S ...	–	1	18 9
B251/140	Front side curtain locating peg (rear) N/S ...	–	1	2 9
B251/142	Front side curtain securing bracket (front) N/S	–	1	3 0
B252/3	Rear side curtain (with securing bracket) O/S ...	–	1	1 8 10
B252/128	Rear side curtain securing bracket O/S ...	–	1	4 5
B252/4	Rear side curtain (with securing bracket) N/S ...	–	1	1 8 10
B252/129	Rear side curtain securing bracket N/S ...	–	1	4 5
B224/137	Rear side curtain securing clamp (on body) ...	–	4	2 5
B224/224	Socket for ditto	–	4	1 6
B252/131	Toolbox	–	1	1 14 3
	TOOL KIT			
P330/100	Tool roll	1	1	4 0
P330/101	Screwdriver (10″)	1	1	1 6
P330/103	Adjustable spanner	1	1	2 8
P330/104	Pliers (6″) pair	1	1	1 0
P330/113	Spanner ($\frac{1}{4}$″ × $\frac{3}{16}$″) (double-ended)	1	1	6
P330/114	„ ($\frac{3}{8}$″ × $\frac{5}{16}$″) (double-ended)	1	1	10
P330/115	„ ($\frac{1}{2}$″ × $\frac{7}{16}$″) (double-ended)	1	1	1 3
1733	Contact breaker spanner with .015″ feeler gauge	1	1	6
1734	Grease gun	1	1	10 6
1735	Tyre pump	1	1	7 0
P330/117	Hammer (for Rudge hubs)	1	1	6 6
A288	Grease gun for propeller shaft	1	1	6 0
2368	Cylinder head spanner	1	1	2 6
2372	Plug spanner	1	1	2 9
1959	Spanner ($\frac{1}{8}$″ Whit.) (single-ended)	1	1	10
1736	Jack (with handle) (Shelley double-lift type) ...	1	1	1 1 0
2742	Sump drain plug spanner	1	1	1 3
2801	Box spanner ($\frac{1}{4}$″ Whit.)	1	1	11
2802	„ „ ($\frac{7}{16}$″ Whit.)	1	1	1 3
3070	„ „ ($\frac{9}{16}$″ Whit.)	1	1	1 3
2860	Tommy bar for box spanners	1	1	2
2867	Tappet spanner (with .006″ feeler gauge) ...	1	1	1 0
2008	Starting handle	1	1	5 6


P330/100
1736
1736
P330/104
2801
2802
1734
P330/115
P330/114
P330/113
A288
2372
2368
P330/103
2860
1733
P330/101
2867
2742
1959
2008
P330/117
1735
1736



Governing Director - - - - - - LORD NUFFIELD
Managing Director - - - CECIL KIMBER, M.I.A.E.

Telephone: 251 (4 lines)
Telegrams: "EMGEE"

THE MG CAR
COMPANY LTD
ABINGDON-ON-THAMES