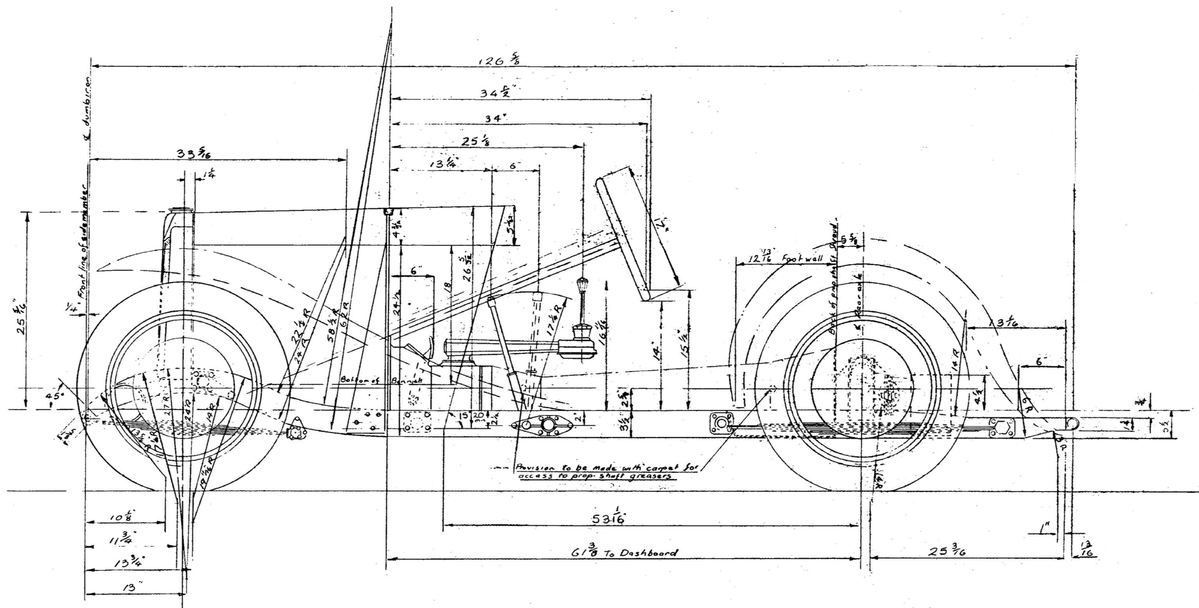

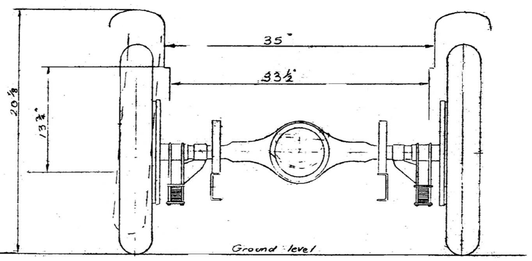

These Dims Represent The Absolute Minimum Clearance Required For Wheels & Brake Drums

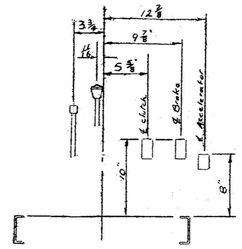

Showing Position Of Controls

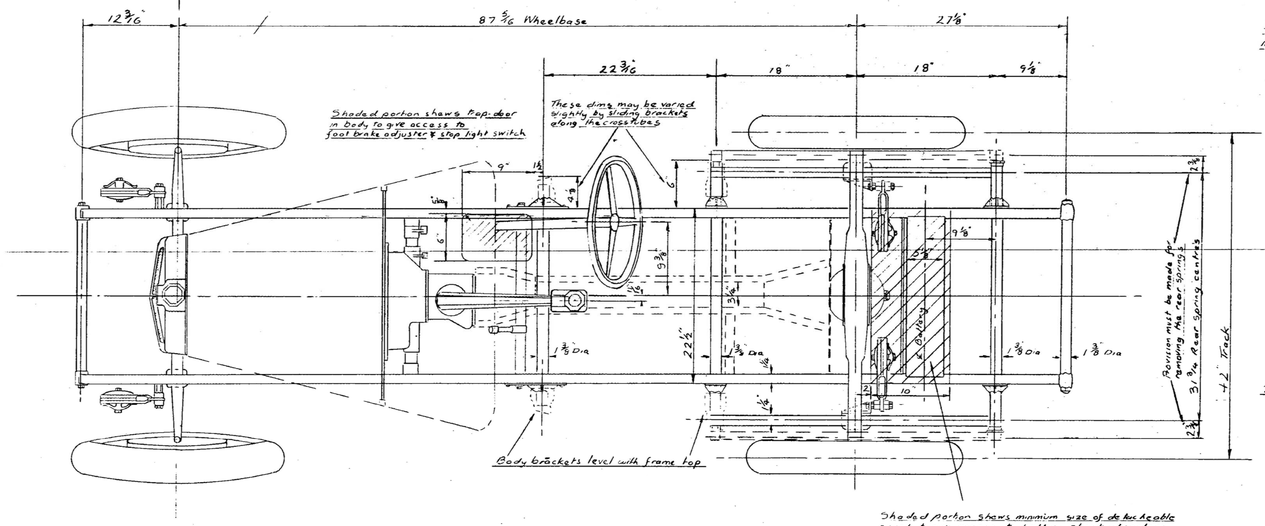

IMPORTANT

Weight of finished car complete with all equipment and spare wheel, oil & water but without petrol must not exceed

15 cwt absolute max

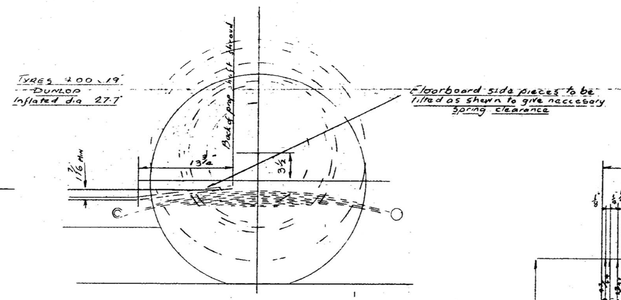

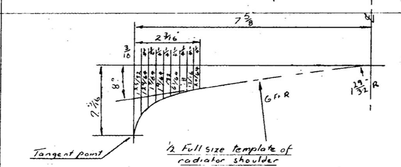

Tangent point

½ Full size template of radiator shoulder

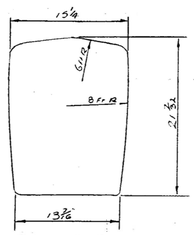

True Contour Of Front Inside Edge Of Bonnet

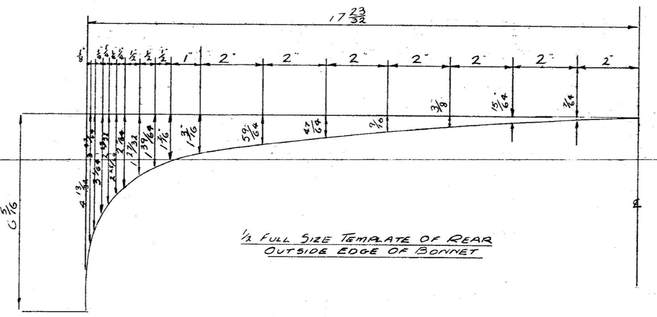

½ Full Size Template Of Rear Outside Edge Of Bonnet

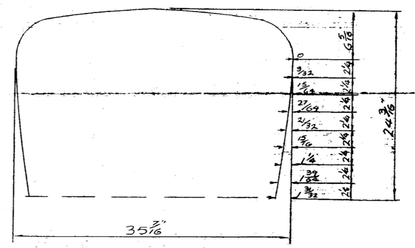

True Contour Of Rear Outside Edge Of Bonnet

COACHBUILDERS DWG PA AND PB TYPES